


# Operating Instructions

English	2	Operating Instructions and Parts List
Français	9	Mise en marche de votre robot nettoyeur de piscine
Deutsch	16	Bedienungsanleitung für den automatischen Bodensauger
Italiano	23	Funzionamento del nuovo robot di pulizia per piscine
Español	30	Manejo de Limpiafondos de Piscina
Português	37	Manual de instruções

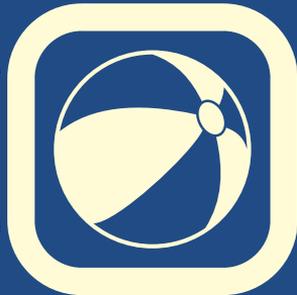

Robotic Pool Cleaner  
Nettoyeur de Piscine  
Automatischer Schwimmbeckenreiniger  
Limpiafondos de Piscina  
Aspirador Automático de Piscina  
Robot di Pulizia per Piscine



<b>Reiniger Spezifikation</b>	<b>Spécification du robot</b>	<b>Specifica del Robot</b>	<b>Especificação do robô</b>	<b>Robot specification</b>	<b>Especificaciones del robot</b>
Eingangsspannung - (24-30) VDC	Tension d'entrée - (24-30) VDC	Tensione in ingresso - (24-30) VDC	Voltagem de entrada – (24-30) VDC	Input voltage - (24-30) VDC	Tensión de entrada: 24-30 VDC
Macht Pumpe - 90Watt maximum	Puissance de pompage – 90watts au maximum	Potenza della pompa - massima 90 Watt	Potência da bomba – máximo de 90Watt	Pump power - 90Watt maximum	Potencia de la bomba: 90 vatios máximo
Antriebsmotor - 20Watt maximum	Puissance motrice - 20watts au maximum	Potenza di trascinamento - massima 20 Watt	Potência da transmissão – máximo de 20 Watt	Drive power - 20Watt maximum	Potencia del motor Drive: 20 vatios máximo
Volumen von Wasser gefiltert - 16m3/h	Volume d'eau filtrée - 16m3/h	Volume di acqua filtrata - 16 m3/h	Volume de água filtrada – 16 m3/h	Volume of water filtered - 16m3/h	Volumen de agua filtrada: 16 m3/h
Tiefe, die in Wasser - ≤4m	Profondeur de travail sous l'eau ≤4m	Profondità operativa sott'acqua ≤4m	Profundidade de trabalho em água ≤4m	Depth working in water ≤4m	Profundidad de funcionamiento en el agua ≤4m

Die Bedeutung der durchgestrichenen Mülltonne: Entsorgen Sie elektrische Geräte nicht im Hausmüll, nutzen Sie die Sammelstellen in ihrer Gemeinde.	Sens du symbole de la poubelle sur roues barrée: Ne vous débarrassez pas des appareils électriques comme des déchets municipaux non triés, utilisez plutôt des installations de collecte différentes.	Il significato del cestino di spazzature sbarrato: Non eliminare apparecchiature elettriche nelle spazzature non diversificate ma usare la raccolta separata.	Significado del símbolo de un contenedor tachado: No deseche los aparatos eléctricos como residuos urbanos sin clasificar; utilice los puntos de recogida específicos para este tipo de aparatos.	Meaning of crossed-out wheeled dustbin: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.	Significado do símbolo de caixote de lixo com uma cruz: Não elimine aparelhos elétricos como lixo municipal não separado; use centros de recolha.
Fragen Sie Ihre Gemeindeverwaltung nach den Standorten der Sammelstellen.	Veillez vous référer à votre autorité locale pour toute information concernant les systèmes de collecte disponibles.	Contattare le autorità locali per informazioni che riguardano i sistemi di eliminazione possibili.	Póngase en contacto con las autoridades locales para obtener más información sobre los sistema de recogida disponibles.	Contact you local government for information regarding the collection systems available.	Contacte o governo local para informação relacionada com os sistemas de recolha disponíveis.
Wenn elektrische Geräte unkontrolliert entsorgt werden, können während der Verwitterung gefährliche Stoffe ins Grundwasser und damit in die Nahrungskette gelangen, oder Flora und Fauna auf Jahre vergiftet werden.	Si les appareils électriques sont déversés et détruits dans les décharges ou dépotoirs pour déchets, il y a un risque que les substances dangereuses s'infiltrent dans la nappe phréatique et entrent dans la chaîne alimentaire; toute chose pouvant nuire à votre santé et votre bien-être.	Se le apparecchiature elettriche sono eliminate nelle discariche di rifiuti o in ammassi, possono avvenire perdite di sostanze pericolose nelle acque sotterranee che entrano nella catena alimentare, con possibili danni ecologici ed alla salute pubblica.	Si los aparatos eléctricos se desechan en vertederos y basureros pueden filtrarse sustancias peligrosas en el agua subterránea y llegar hasta la cadena de alimentación, dañando su salud y su bienestar.	If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.	Com a eliminação de aparelhos eléctricos em aterros ou lixeiras, as substâncias perigosas podem vazar para as águas subterráneas e entrar na cadeia alimentar, danificando a sua saúde e bem-estar.



## IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL THE INSTRUCTIONS

**CAUTION:** Do not plug the power supply into a grounded outlet or do not switch the pool cleaner "ON" if it is not fully immersed in water. Operating the cleaner out of water will cause severe damage immediately and will result in loss of warranty.

Allow the cleaner to remain in the pool for 15 to 20 minutes following the end of its cleaning cycle. This will allow the motors to cool adequately. Do not leave the cleaner in the pool all the time. Always remember to turn the power supply "OFF" and unplug it from the power outlet before removing the cleaner from the pool.

**WARNING:** The cleaner must not be used when people are in the water. For use with swimming pool only

### Safety Note

- The unit must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA
- The connection to the branch circuit should be consistent with the local and national wiring rules (electrical code).
- Mishandling of the unit can result in leakage of lubricants.
- If the supply cord is damaged, it must be replaced by the manufacturer's service agent or a qualified and trained person in order to avoid hazards.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



**WARNING:** A Ground Fault Current Interrupter (GFCI-USA) or a Residual Current Device (RCD-EUROPE) must be installed to protect your electric outlet and prevent any possible electric shock.

**SAVE THESE INSTRUCTIONS**

Dear Customer,


Thank you for choosing our product to clean your pool. We hope that you will enjoy using your new robot to maintain your swimming pool for years to come.

Before you begin to use your robot, please take a few minutes to carefully read these operating instructions.

Again, thank you for choosing our product.

## Components

While the appearance of your cleaner and some of its components may differ from those shown here, the function of the cleaner, operating procedures and maintenance practices are the same.

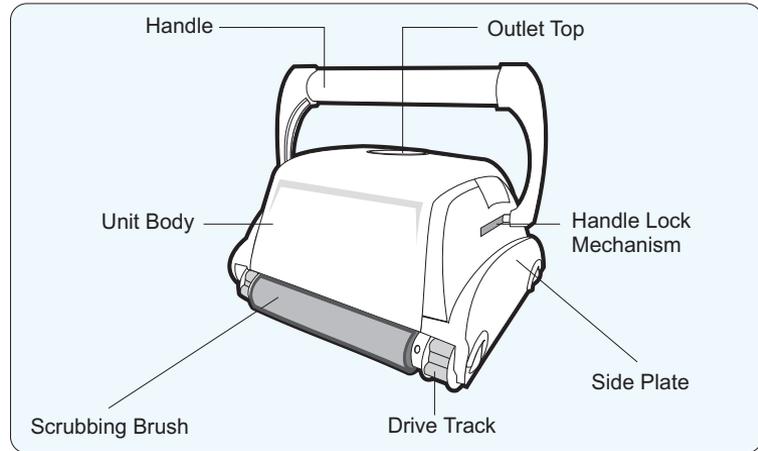


**Your new automatic pool cleaner contains:**

- The robotic pool cleaner with its floating cable.
- The Power Supply (transformer).
- Cart (optional)

**Please read this manual completely before operating your pool cleaner.**

# Operating the pool cleaner

1. Place the power supply (transformer) at least 3.6 meters / 11.8 feet from the pool and at least 12 cm / 4 inch above the surface (fig.1). The transformer will supply low voltage to the cleaner.
2. Uncoil the cable.(fig.1a)

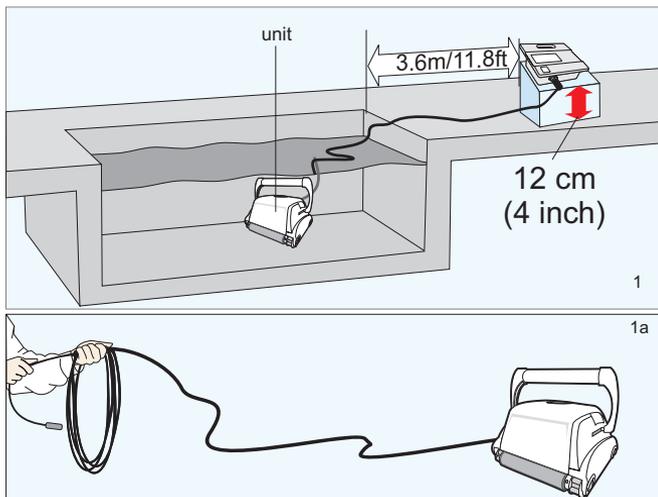



4. Place the unit in the water. Turn the unit side to side in the water to allow air to escape from the body and then let the cleaner sink to the bottom of the pool (fig.3). Then, spread the cable over the surface of the pool as evenly as possible (fig.1).



5. Plug the cable into the power supply. Depending on your model (**Type I** or **Type II**), make sure the key on the plug corresponds exactly with the key slot on the socket of the power supply (fig.3a).

Plug the power supply into a grounded outlet. Ensure that the electric outlet has been properly grounded (fig.3b). Press the "ON" button on the power supply. The light will glow indicating that the system is "ON" and the pool cleaner will start the cleaning cycle. The unit keeps record of the number of cleaning cycles. Only an authorized service center can display the accumulated cleaning cycles. (See details on the next page)

3. For proper operation, lock the moveable handle diagonally across the top of the cleaner's body. Push down on the **handle lock** mechanism and slide the handle all the way to the end (recommended one slot before the end), then release the lock. Depending on your model, the handle **lock button** might be **vertical** or **horizontal** (fig.2a, 2b). The handle will remain fixed in this position. Repeat this process on the other side of the cleaner.  
Remember, the handle must be fixed diagonally (fig.2c)



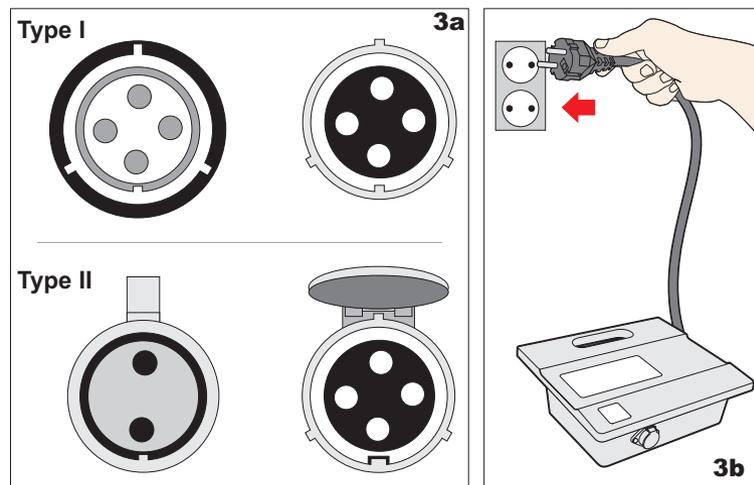
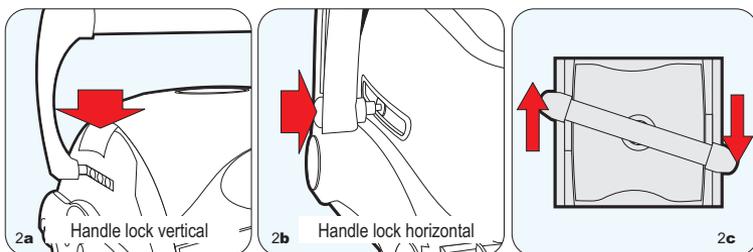


# Operating the pool cleaner

## Plugs Type I

To plug the cable (Fig A) into the socket on the power supply (Fig. B), please do the following:




1. Prepare the plug as seen in (Fig. C) with the key and 3 outside slots exactly as shown.
2. Fit exactly the key and the slots from cable plug with the corresponding key and slots from the power supply socket. (Fig. D)
3. Push the plug into the socket of the power supply all the way in.
4. Once the plug is in, rotate the plug to the right to lock it into place (Fig. E).
5. To remove the plug, first rotate the plug to the left to unlock it, then pull it out (Fig. F).

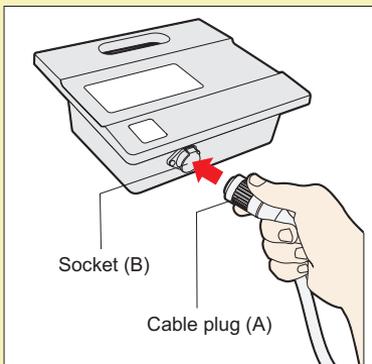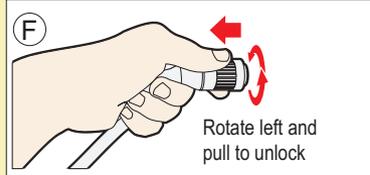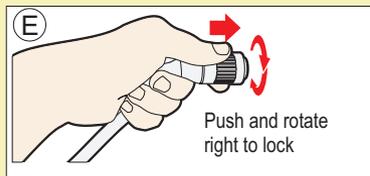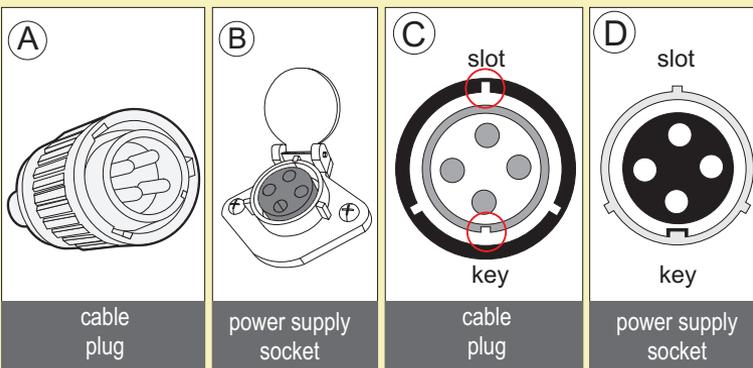


## Plugs Type II

To plug the cable (Fig A) into the socket on the power supply (Fig. B), please do the following:

1. Prepare the plug as seen in (Fig. C) with the key and the riser exactly as shown.
2. The riser should face up (Fig. E) in order to keep the socket cap open. The cap will lock the cable in place.
3. Fit exactly the key with the corresponding key slot from the power supply socket. Although the socket has 4 holes, only the top and the bottom one will be used (Fig. D)
4. Push the plug into the socket of the power supply all the way in. After inserting the plug all the way, the cap should be pressed on it to secure it.
5. To remove the plug, you need to lift the cap, and then pull.

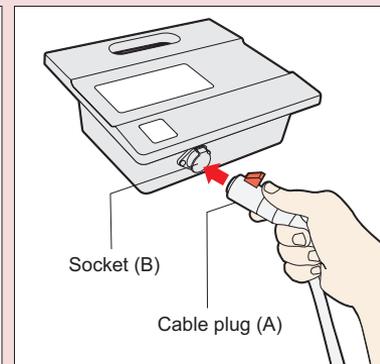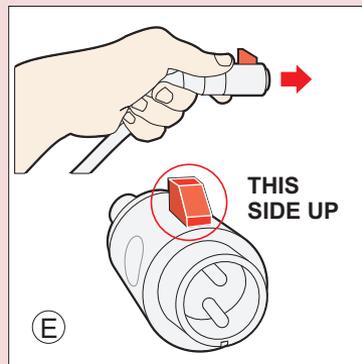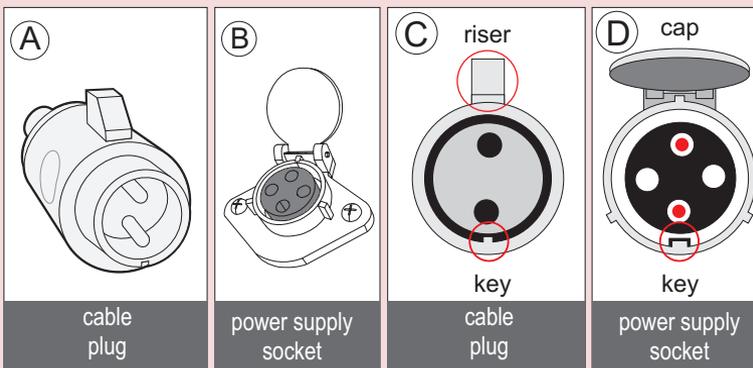

# Operating the pool cleaner

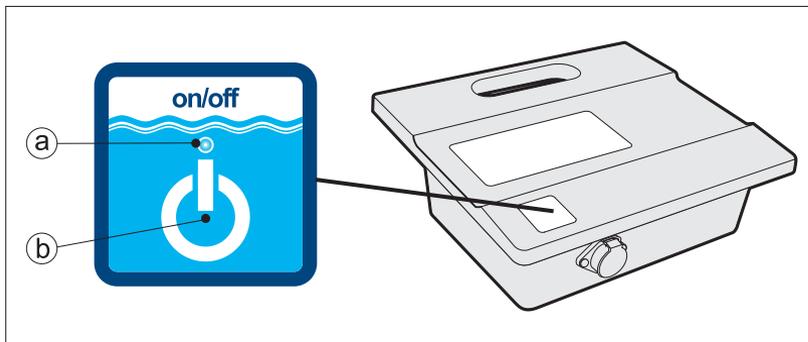

## a. Power LED

The blue LED flashes when the power supply is in standby mode and lights continuously when the pool cleaner is operating. The power button switches between ON and STANDBY

## b. "POWER" button

The button switches between "ON" and "STANDBY".

**IMPORTANT-** After every cycle the pool cleaner will automatically go to "standby". In case you want to turn the machine off during the working cycle, press the "power" button once and the LED will start flashing, indicating that the machine has stopped running.

## IMPORTANT:

Please be sure to always keep your pool cleaner properly stored anywhere between 10 to 40 degrees Celsius (50 to 104 degrees Fahrenheit). This will keep the motors, plastics and seals protected. Failure to comply will result in loss of warranty.



Robot can be used in water with temperatures ranging from 13°C to 35°C (55°F to 95°F). However, the recommended optimal temperature is between 22°C and 32°C (72°F and 90°F)


# Maintenance and adjustment

## CAUTION:

To avoid scratches and other blemishes appearing on your robot, simply find a smooth surface for it to rest on when cleaning the debris bag or performing minor adjustments.

These scratches could produce changes in the robot's soft and smooth edges resulting in potential damage to some flexible pool surfaces.

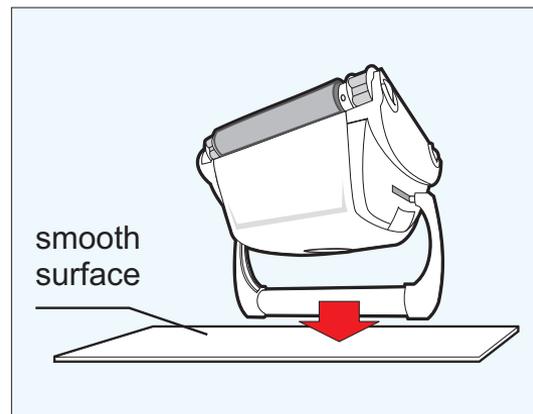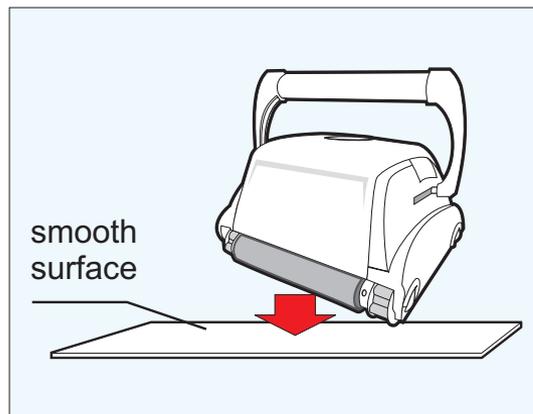


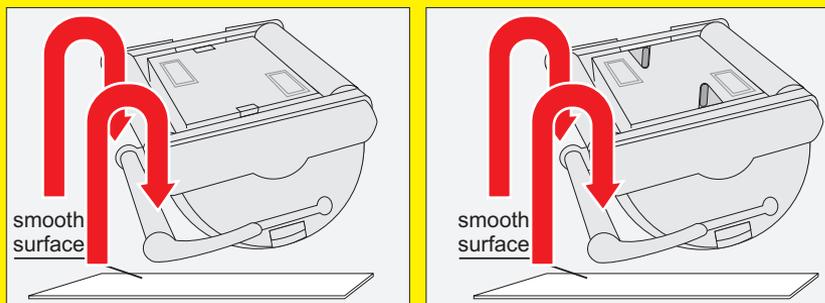

LOCK TAB

4a


SWIVEL TAB

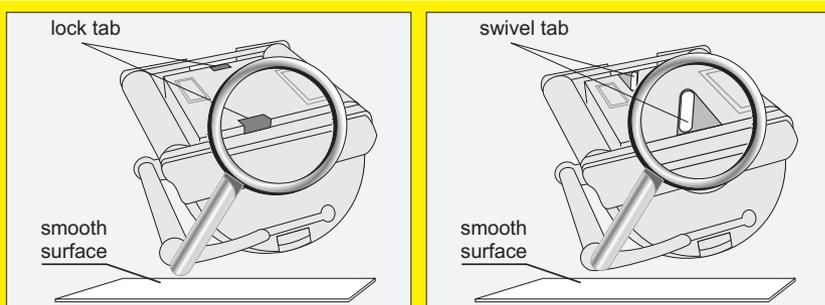

LOCK TAB

4b

SWIVEL TAB

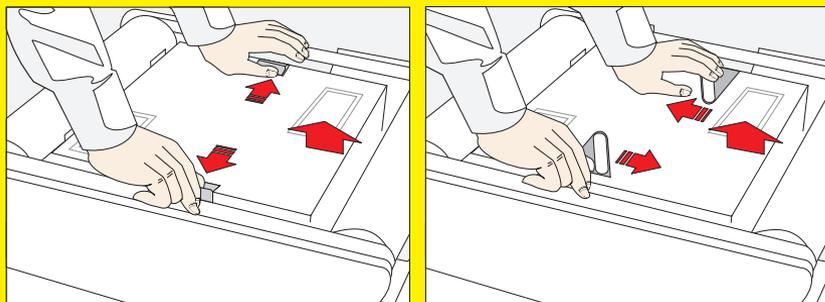

LOCK TAB

4c

SWIVEL TAB


## CLEAN THE FILTER BAG AFTER EVERY CLEANING CYCLE

- Unplug the power supply. (Please keep the plug away from contact with water)
- If the unit is in the pool, gently pull the cleaner toward you using the cable until the handle is within reach. Use the handle (not the cable) to pull the cleaner out of the pool after allowing most of the water to drain from the unit.
- Lay the unit on its back on a smooth surface (in order to prevent scratches on the machine body), release the lock tabs and remove the bottom lid assembly. (fig.4a, 4b, 4c, 4d)


*(continue on the next page)*

### NOTE:

Depending on your model, there are 2 types of bottom lid releasing mechanisms: LOCK TAB or SWIVEL TAB. Please follow the instructions diagram according to your model.

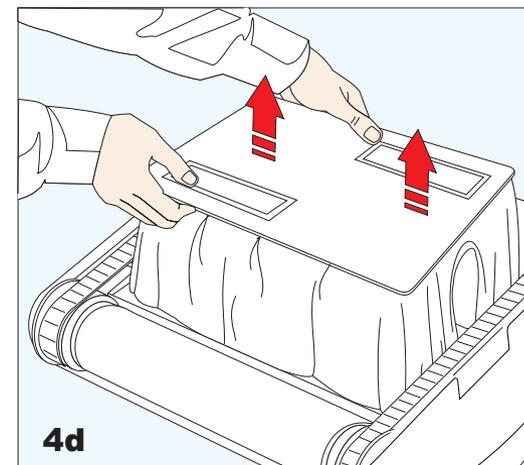

4d

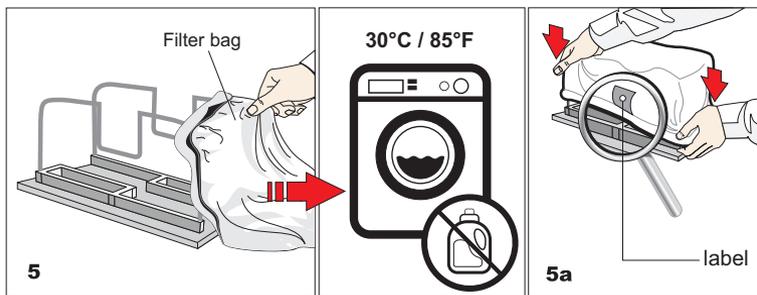


(continued from the previous page)

- d. Remove the filter bag from the support bars, turn it inside out and wash off all the dirt with a garden hose or in a sink. Squeeze the bag gently until the rinse water is clear. If necessary, machine wash the bag using only **cold water with NO DETERGENT!** (fig.5)
- e. Re-install the bag on the support bars with the label in the center of one of the long sides of the bottom lid (5a)
- f. Re-install the bottom lid assembly in the body. Push down on it until lock tabs will snap into place properly.


## IMPORTANT TIPS:

- Shut off and unplug the power supply every time you remove the cleaner from the water.
- Clean the filter bag after every cycle.
- Reverse the handle after every cleaning cycle to avoid tangling the cable.
- Periodically straighten out the floating cable.
- Replace worn brushes to ensure maximum cleaning performance
- Make sure that your pool cleaner positions itself properly on the wall. The machine handle must rest parallel to the water line upon reaching the surface of the water.
- Save your cleaner's packaging for off-season storage or for shipping the unit to your dealer if service is required.
- Leave your pool cleaner in the water for 15 to 20 minutes after every cleaning cycle.
- **Do not leave your cleaner in direct sunlight when not in use.**
- **Never leave the power supply in direct sunlight and avoid leaving it in the rain.**
- Occasionally, you should rinse your cleaner in clean, fresh water. This will lengthen the service life of the drive belts, drive tracks and scrubbing brushes.
- **Clean the propeller once a month**

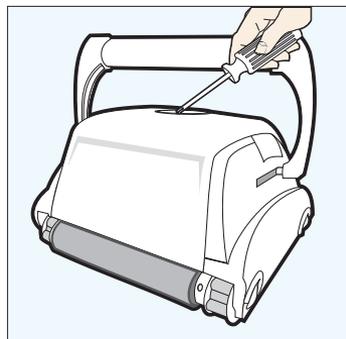

## Cleaning the pump propeller:





- 1) Take out the 2 (4) screws from the outlet top
- 2) Take out the outlet top and remove hair and other debris around propeller

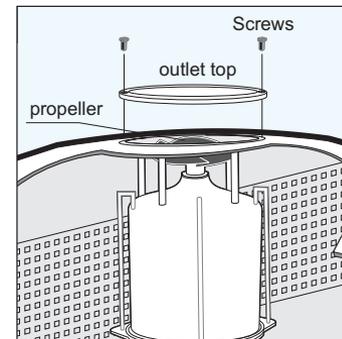

## CABLE CARE

The cable may become twisted after a period of time in use. To correct this condition, simply lock the moveable handle on the top of the cleaner in the opposite diagonal direction. The pool cleaner will now travel in the opposite direction while cleaning your pool and the cable will uncoil. Check the cable periodically for external damage. If the problem persists, use the E-Z Swivel device.

Place the robot on the ground and unplug the cable from the transformer. With one hand, holding the E-Z Swivel, walk away from the robot, pulling the cable to its full length. The core will rotate inside the cover and in this way will untangle the cable.

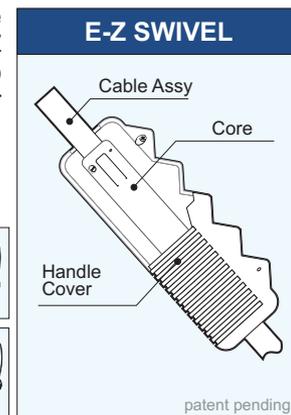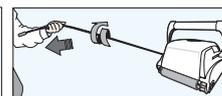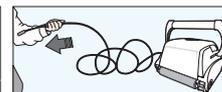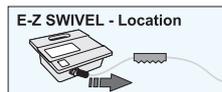

PLEASE CHECK THE FOLLOWING BEFORE CALLING YOUR SERVICE CENTER

Before troubleshooting, the pool cleaner must be disconnected from the power supply and the power supply must be unplugged from the electrical outlet to prevent damage to the unit and possible personal injury.

For reference numbers, consult the parts list diagram located on the last page of the instructions.

## 1. Unit does not pump water or move:

- Check to see if electric outlet (22) has power.
- Check if transformer (16) is plugged into a grounded outlet and the blue cable assembly is plugged into the transformer.\*
- Switch the power supply "OFF" and "ON" a few times. Allow 45 seconds between "ON" and "OFF".
- Check for and remove any debris such as hair, string, or leaves that may be obstructing the free movement of the Drive Pulley (5), Drive Belts (6) , or Drive Tracks (7) .
- Check that the Drive Belts (6) and Drive Tracks (7) are properly aligned and are taut. Adjust or replace if necessary.

## 2. Unit does not pump water at all, or pumps slowly but moves:

- Check to see if propeller (1) is seized due to accumulation of hair or debris on the propellers. Remove the top screws on each outlet top (1) and clean the propeller. When reassembling the top cover, do not overtighten the screws.
- Check to see if the filter bag (12) is thoroughly clean. Clean as necessary.
- If a and b are negative, check the pump motors (2). If they are not functioning send the unit to your service center.

## 3. Unit does not move but does pump water:

- Check to see if forward/reverse motion is obstructed by foreign matter; hair, debris, etc. on drive belts (6) or drive tracks (7) or there is an entanglement with the power cord. Clean as necessary.
- Check if drive belts (6) have slipped out of place. Also check for proper tension of drive belts (6). If necessary replace belts.
- Check for loose drive motor (3) connections.
- If a, b, and c are negative, check the Master and Slave motors. If one or the other is not functioning, send the unit to your service center.

## 4. Unit does not pick up dirt and debris:

- Check 2a and 2b of this guide.
- Check the Intake Valve Flaps (23) on the underside of your unit. The Flaps should move freely to open and close. Clean and free the Valve Flaps (23) if necessary.

## 5. Unit does not seem to cover the entire pool:

- Most likely a thorough cleaning of the filter bag (12) is needed.
- Check to see that the blue cable (15) is properly spread out and is untangled.
- Allow the unit to run in the pool for the entire cleaning cycle.
- Make sure that the Floating Handle (14) is locked diagonally across the top of your unit's body.
- Check that the Pump Motor (2) is operating. Please refer to the Troubleshooting section titled **"Moves But Does Not Pick Up Dirt And Debris"**
- After following all of the above, if there is still a problem, call your dealer for specific additional assistance.


## 6. Debris Comes Out Of The Aquabot When Removing It From Pool (Bottom Lid Does Not Close Properly)

- Lock Tabs (24) - Check that the Lock Tabs (24) are not warped. They should be straight and aligned with the unit's body.
- Intake Valves (23) - Check that the Intake Valve Flaps on the underside of your unit (in the Bottom Lid ) move freely to open and close. Clean Flaps if necessary.

## 7. The cable is twisted:

- Reverse the diagonal position of the handle.
- Use the E-Z Swivel (see *"Cable Care"* chapter)

\*The transformer cord can only be replaced with the aid of special purpose tools normally available only to authorized dealers, distributors and service centers.

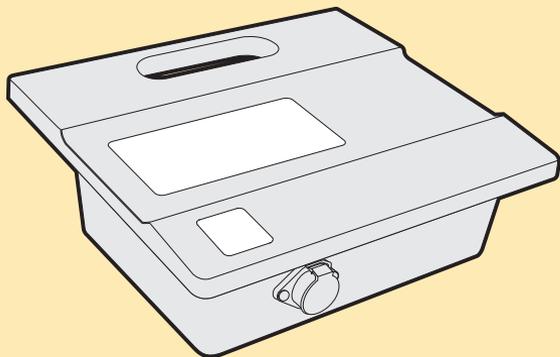

#### Grounding

The power supply must be connected to a grounded 3 conductor socket. The mains power supply must be connected via a GFCI (ground fault circuit interrupter) or RCD (residual current device) having a rated residual operating current not greater than 30mA.

#### Fuse

The fuse must be changed by an authorized service agent or trained and qualified person only. For continued protection against risk of fire, replace only with the same type and rating of fuse.

#### Maintenance and safety

The cover should not be removed except by an authorized service agent or trained and qualified person. No internal adjustment or component replacement can be carried out by the user. The power cable must be disconnected before removing the cover.

If the power supply cord is damaged, it must be replaced by an authorized service agent or trained and qualified person. Do not operate the supply if the cord is damaged.

#### Environmental conditions

The power supply is designed to work both indoors and outdoors. However, the unit should not be operated in direct sunlight or be exposed to water. The power supply should not be operated in an ambient temperature in excess of 40°C.

#### Erdung

Das Netzteil muss an eine geerdete 3-adrige Steckdose angeschlossen werden. Der Netzanschluss muss an einem GFCI/RCD (FI-Schutzschalter) angeschlossen sein, der einen bestimmten Differenzstrom von nicht mehr als 30 mA überschreitet.

#### Sicherung

Die Sicherung sollte nur von einem autorisierten Kundendienstmitarbeiter oder einem qualifizierten Techniker ersetzt werden. Ersetzen Sie die Sicherung nur mit demselben Typ und derselben Absicherung für den fortlaufenden Schutz gegen Brandgefahr.

#### Wartung und Sicherheit

Die Abdeckung sollte nur von einem autorisierten Kundendienstmitarbeiter oder einem qualifizierten Techniker entfernt werden. Kein(e) interne Einstellung oder Komponentenaustausch sollte vom Benutzer durchgeführt werden. Das Netzkabel muss vor dem Entfernen der Abdeckung von der Steckdose getrennt werden.

Wenn das Netzanschlusskabel beschädigt ist, muss es durch einen autorisierten Kundendienstmitarbeiter oder qualifizierten Techniker ersetzt werden. Bedienen Sie das Gerät nicht, wenn das Kabel beschädigt ist.

#### Äußere Bedingungen

Das Netzteil wird so konzipiert, um im Innen- und Außenbereich zu funktionieren. Jedoch sollte die Einheit keinem direkten Sonnenlicht oder Wasser ausgesetzt sein und in keiner Umgebungstemperatur von über 40°C bedient werden.

#### Physical

Dimensions (W \* D \* H) \_\_\_\_\_ 273mm \* 242mm \* 90mm

Weight \_\_\_\_\_ 1.9 Kg

#### Electrical

Input rating \_\_\_\_\_ 100-240V~, 50/60Hz, 180W

Output rating \_\_\_\_\_ 29V ,6.3A.

Storage temperature \_\_\_\_\_ -10° C - 60° C

Operating temperature \_\_\_\_\_ 0° C - 45° C

Ingress protection \_\_\_\_\_ IP54

#### Physikalische Daten

Abmessungen (B \* T \* H) \_\_\_\_\_ 273mm \* 242mm \* 90mm

Gewicht \_\_\_\_\_ 1.9 Kg

#### Elektrische Daten

Eingangsspannung \_\_\_\_\_ 100-240V~, 50/60Hz, 180W

Ausgangsspannung \_\_\_\_\_ 29V ,6.3A.

Aufbewahrungstemperatur \_\_\_\_\_ -10° C - 60° C

Betriebstemperatur \_\_\_\_\_ 0° C - 45° C

Schutzart \_\_\_\_\_ IP54

**External Timer  
Capability**



This feature will enable the end user to program the cleaning schedule through an external timer (sold separately).

**Capacité de  
Minuteur Externe**



Ce robot nettoyeur de piscine peut être programmé via un minuteur externe (vendu séparément).

**Externen Timer  
Funktion**



Dieser robotische Schwimmbeckenreiniger kann mithilfe eines externen Timers (separat verkauft) programmiert werden.

**Timer Esterno  
Capacità**



Questo robot per la pulizia delle piscine ha la capacità di essere programmato con un timer esterno (fornito separatamente).

**Capacidad  
Temporizador Externo**




Este robot limpiador de piscinas tiene la capacidad de ser programado a través de un temporizador externo (de venta por separado).

**Capacidade  
Temporizador Externo**



O robô limpador de piscinas tem a capacidade de ser programado através de um temporizador externo (vendido separadamente).

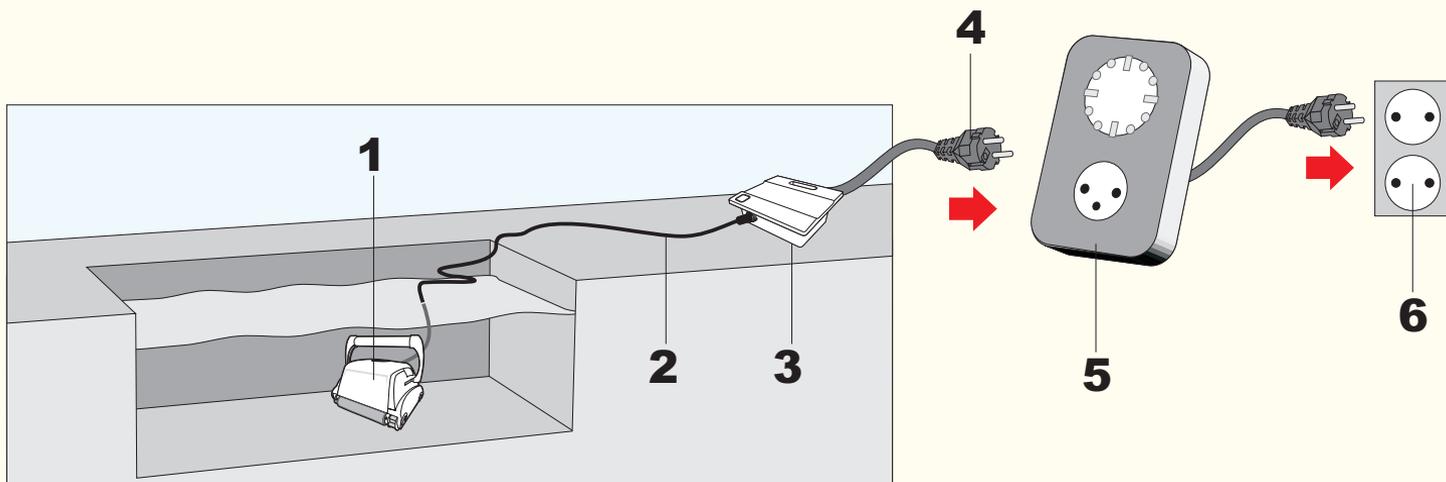

1. Unit
2. Cable
3. Power supply
4. Transformer plug
5. External timer
6. Outlet

1. Unité
2. câble
3. alimentation
4. Transformateur fiche
5. minuterie externe
6. prise

1. Unit
2. Kabel
3. Stromversorgung
4. Trafostecker
5. externe Timer
6. Auslauf


1. unità
2. cavo
3. alimentazione
4. trasformatore spina
5. timer esterno
6. presa

1. unidad
2. cable
3. fuente de alimentación
4. enchufe de transformador
5. temporizador externo
6. toma

1. unidade
2. cabo
3. fonte de alimentação
4. transformador ficha
5. temporizador externo
6. tomada


# Operating the pool cleaner

1. Outlet Top and propeller
2. Pump Motor
3. Drive Motor
4. Handle Locking Bracket
5. Pulley Assembly
6. Drive Belt
7. Drive Track
8. Body Assembly
9. Filter Screen
10. Side Plate
11. PVA Brushes
12. Filter Bag
13. Bottom Lid Assembly
14. Handle Assembly
15. Cable Supply (Transformer)
16. Power Supply (Transformer)
17. Transformer Socket
18. Wheel Tube Assembly
19. "OFF" button
20. LED
21. "ON" button
22. Power Cord (Outlet)
23. Intake Valve Flaps
24. Lock Tabs

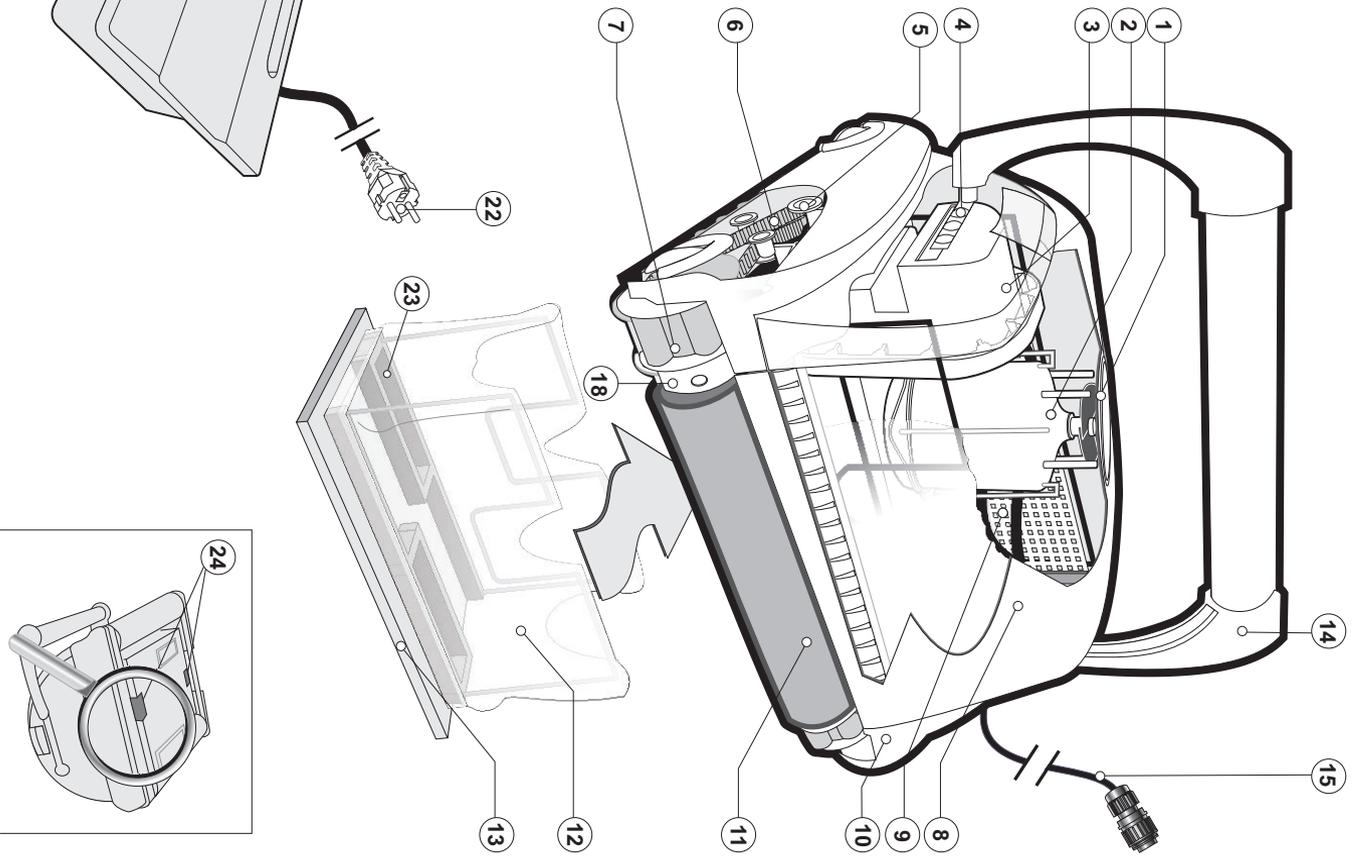

# Operating Instructions

## Model-500

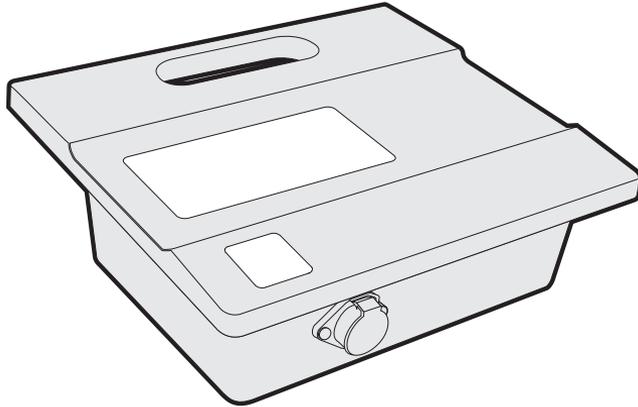

### **POWER SUPPLY**

with Aquacontrol System



### **ALIMENTATION**

avec système Aquacontrol



### **SUMINISTRO DE CORRIENTE**

con sistema Aquacontrol



### **STROMVERSORGUNG**

mit Aquacontrol System



### **TRASFORMATORE**

con sistema Aquacontrol



### **FONTE DE ALIMENTAÇÃO**

com o sistema Aquacontrol




### **STROOMVOORZIENING**

met Aquacontrol systeem



## Aquacontrol Overlay

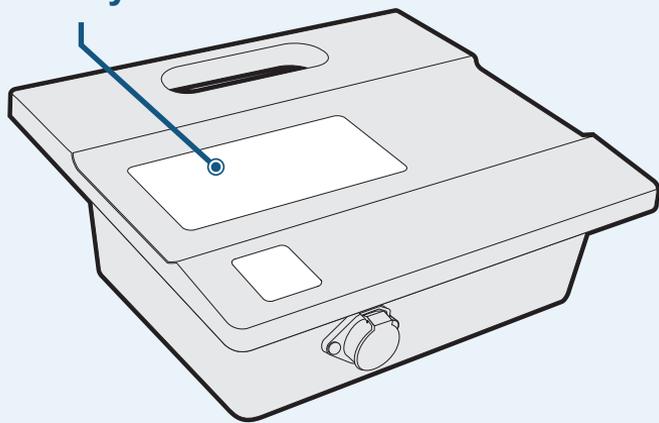

 The Aquacontrol is a unique control panel which communicates directly with the robot. This gives you the option to program the time so that the pool can always be cleaned per your request. If you prefer not to select this feature, the robot will work in default mode and choose the time parameters for you.

 Le système Aquacontrol est un panneau de contrôle unique vous permettant de communiquer directement avec le robot et de le personnaliser. Cette interface Homme - machine vous offre l'option de programmer différents paramètres de manière à ce que la piscine soit toujours nettoyée de la manière la plus efficace. Si vous choisissez de ne pas sélectionner les autres fonctions, le robot fonctionnera en mode par défaut et choisira les paramètres pour vous.

 Aquacontrol è un pannello di controllo esclusivo che comunica direttamente con il robot. Consente la possibilità di programmare il tempo di funzionamento in modo che la piscina possa essere sempre pulita secondo le preferenze. Se si preferisce non selezionare questa funzione, il robot funzionerà nella modalità predefinita e sceglierà in modo autonomo i parametri di tempo da adottare.

 Acquacontrol es un panel de control exclusivo que se comunica directamente con el robot. Podrá programar el tiempo, de manera que la piscina siempre esté limpia. Si no desea seleccionar esta característica, el robot operará en modo predeterminado y seleccionará los parámetros de tiempo por usted.

 Aquacontrol ist ein einzigartiges Bedienfeld zur direkten Kommunikation mit dem Roboter. Dies ermöglicht es Ihnen, die Zeit zu programmieren, damit das Schwimmbecken stets Ihren Bedürfnissen entsprechend gereinigt wird. Falls Sie es vorziehen, diese Funktion nicht zu wählen, wird der Roboter in der voreingestellten Betriebsart betrieben und an Ihrer Stelle die Zeitparameter wählen.

 O Aquacontrol é um painel de controle exclusivo que se comunica diretamente com o robô. Isto proporciona a você a opção de programar o tempo para que a piscina sempre possa ser limpa quando você solicitar. Se preferir não selecionar este recurso, o robô irá funcionar no modo padrão e escolherá os parâmetros de tempo para você.

 De Aquacontrol is een uniek bedieningspaneel dat direct met de robot communiceert. Dit geeft u de mogelijkheid om de tijd te programmeren zodat het zwembad altijd op uw eigen verzoek kan worden gereinigd. Als u deze functionaliteit liever niet kiest, werkt de robot in de standaardmodus en kiest hij de tijdparameters voor u.

# Aquacontrol MODEL 500

**Aquacontrol**

	<p>Auto detect Auto detection Auto detección Automatische erkennung Auto diagnosi Detección automática</p>		<p>Pool shape Forme de piscine Forma de la piscina Beckenform Forma piscine Forma da piscina</p>
	<p>Swivel Pivot Swivel Drehlager Manopola di disassoriamento Swivel</p>		<p>Cleaning program Mode nettoyage Programa de limpeza Reinigungsprogramm Programma di pulizia Programa de limpeza</p>
	<p>Cleaning Level Niveau de Nettoyage Nível de Limpeza Reinigungsstufe Livello di Pulizia Nível de Limpeza</p>		<p>Check filter Vérifiez le filtre Revise el filtro Filter überprüfen Controllare il sacchetto filtrante Verifique o Filtro</p>
	<p>Delay Retard Retrasar Verzögerung Ritardo Atrasar</p>		




page 4



page 5



page 6



page 7




page 8



page 9



page 10

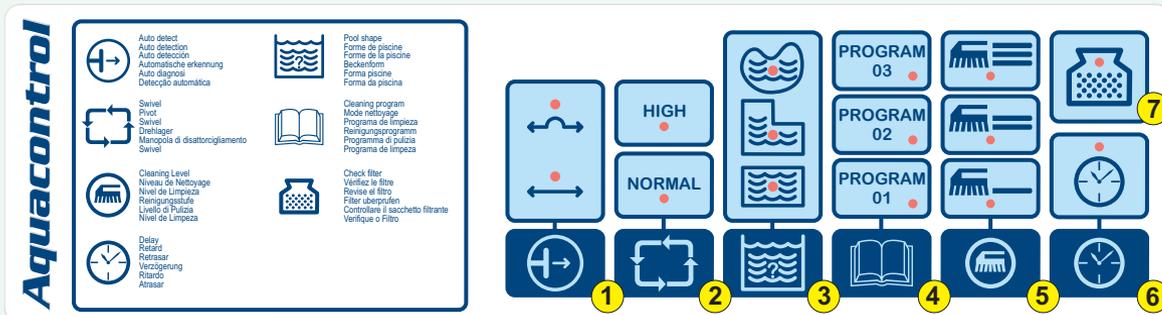

1



1. Auto detect: this feature prevents the robot from getting stuck on obstacles in the pool such as main drains, steps, ladders etc. Press this button to choose one of the following options:



**Auto-Detect - OFF.** This option should be selected if you see your pool cleaner changing direction in the middle of the pool without making contact with any obstacles.



**Auto-Detect - ON.** The pool cleaner should change direction when making contact with certain obstacles. Choose this option when the pool has obstacles such as in-floor cleaning systems, main drains, and ladders.

2



2. Swivel – adjust the robots rate of turns in the pool.

Normal – Standard operation  
High – Different rate of turns

3



3. Pool shape:

Allows the robot to calculate the most efficient cleaning pattern for the pool shape chosen. Press the button to select the drawing most suitable to the shape of the pool. A red light will indicate your selection.

4



4. Cleaning program selection. **Important note: For some models, during programs 2 and 3 the units will climb walls.**

Program 01 – 3 hour  
Program 02 – 4 hour  
Program 03 – 5 hour

5



5. Cleaning level – Change the cleaning performance

Rough   
Regular   
Fine

6



6. Delay

When this option is On, the robot will start to work after 2 hours of delay.


This feature is used to let debris and dust sink on the floor before starting the robot's cleaning.

7



7. Check filter

– Illuminated light means the filter bag must be removed, cleaned and properly installed back into the robot to work efficiently.

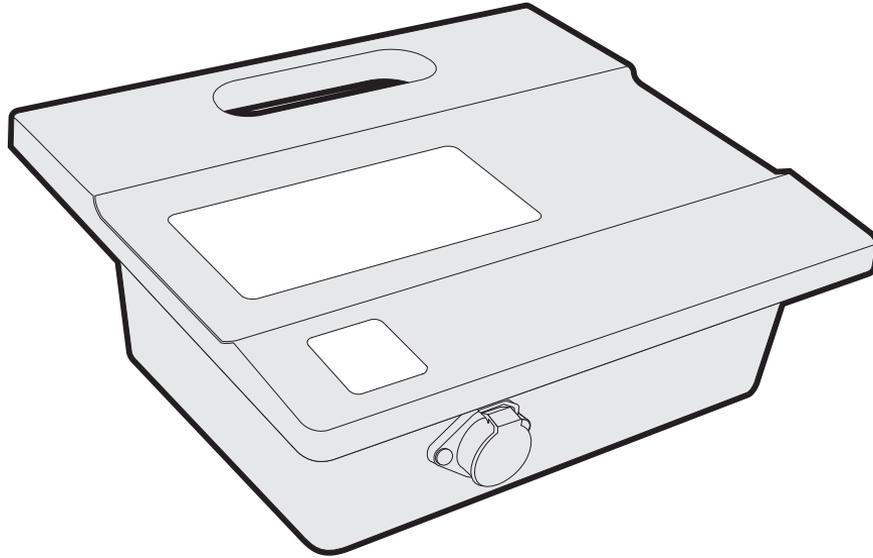

### Physical

Dimensions (W \* D \* H) \_\_\_\_\_ 273mm \* 242mm \* 90mm

Weight \_\_\_\_\_ 1.9 Kg

### Electrical

Input rating \_\_\_\_\_ 100-240V~, 50/60Hz, 210W

Output rating \_\_\_\_\_ 29V ,6.3A.

Storage temperature \_\_\_\_\_ -10° C - 60° C

Operating temperature \_\_\_\_\_ 0° C - 45 ° C

Ingress protection \_\_\_\_\_ IP54

### Physikalische Daten

Abmessungen (B \* T \* H) \_\_\_\_\_ 273mm \* 242mm \* 90mm

Gewicht \_\_\_\_\_ 1.9 Kg

### Elektrische Daten

Eingangsspannung \_\_\_\_\_ 100-240V~, 50/60Hz, 210W

Ausgangsspannung \_\_\_\_\_ 29V ,6.3A.

Aufbewahrungstemperatur \_\_\_\_\_ -10° C - 60° C

Betriebstemperatur \_\_\_\_\_ 0° C - 45 ° C

Schutzart \_\_\_\_\_ IP54



## Operating Instructions

---

- English ■ Wireless Remote Control - R/C Model
- Français ■ Les Models A Télécommande
- Deutsch ■ Modell mit Fernbedienung
- Italiano ■ Modello Radiocomandato - R/C
- Español ■ Modelo de control remoto
- Português ■ Modelo com Controlo Remoto Sem Fio
- Nederlands ■ Afstandbediening eenheid Instructies



**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications to this equipment not expressly approved by the party responsible for compliance (Aquatron Robotic Systems Ltd.) could void the user's authority to operate the equipment.

## USING THE REMOTE CONTROL

The Remote Control Model is provided with a radio control transmitter. This feature will enable you to directly guide the robot to any part of the pool. Pressing the **Right** or **Left** buttons causes the robot to turn until the button is released.

Pressing the **Forward/Reverse** button once causes the robot to stop and reverse its direction of travel.


### Matching the Remote Control Unit to the Power Supply:

It is important to match the remote control transmitter to the power supply. This unique identification prevents other transmitters in the area (garage door openers, etc) from interfering with the operation of the remote control.


**The original remote control provided with your robot is already matched to the power supply. If your remote control unit is not ORIGINAL, it must be matched to the power supply before it can operate.**

### To match the Remote Control Unit to the Power Supply:

Disconnect the Robot's cable from the power supply. Turn the power supply **ON** then simultaneously hold down the **Right** and **Left** buttons on the Remote Control. The red LED on the remote will illuminate for 1 second and the green LED on the power supply will blink signifying that the operation has been completed successfully.




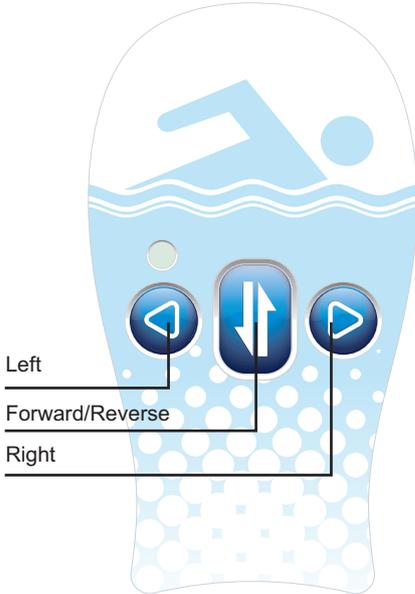


## Remote Control Unit Instructions

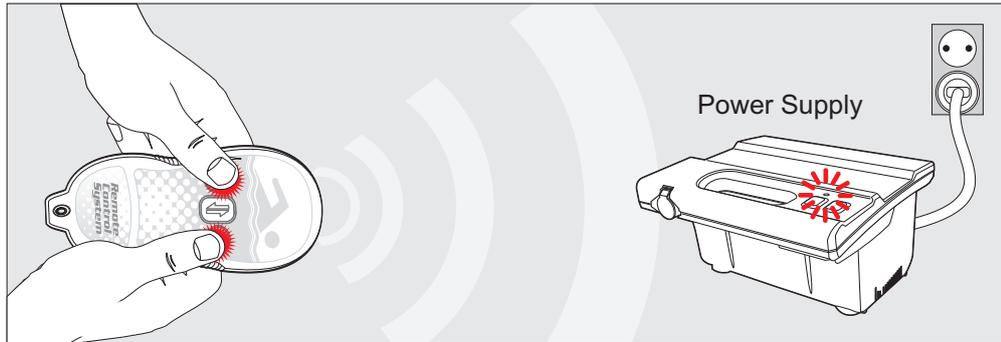

## REPLACING THE BATTERY

The battery installed in the remote control can last several years. If the battery needs replacing, the red light on the remote control unit **will not flash** when a button is pressed.

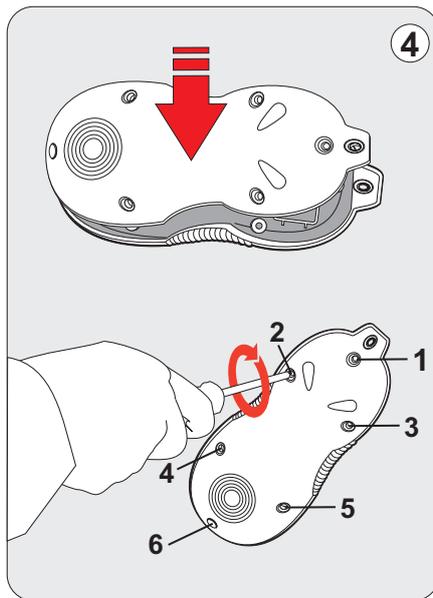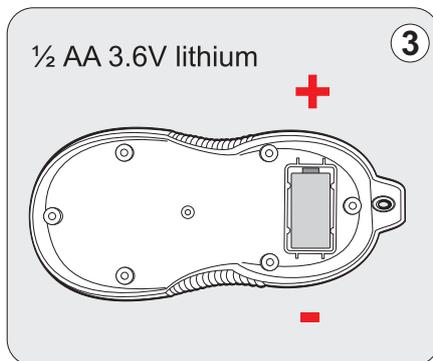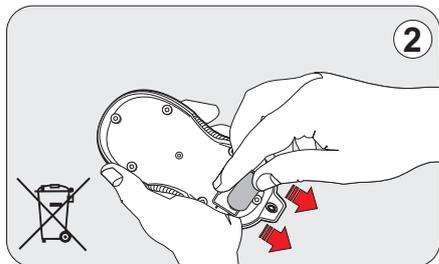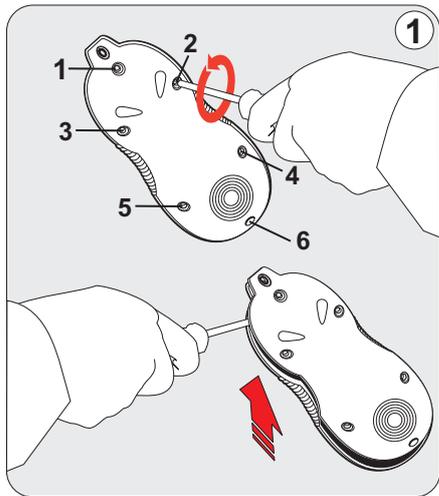

To replace the battery:

1. Unscrew the 6 screws securing the back cover of the unit using a № 1 Philips screwdriver.
2. Remove the battery and dispose of safely.
3. Replace it with a size ½ AA 3.6V lithium battery (type 14250). Observe the correct polarity.
4. Replace the cover and secure the 6 screws. Be sure not to over tighten.

1. After an extended period of time without use or after replacing the battery, it may be necessary to restore the battery to full strength before the remote control can be used.
2. To restore the battery, press and hold the LEFT ARROW button for 10 seconds. The red LED on the remote should begin to flash. If after 10 seconds the LED does not flash, the battery needs replacing.
3. Note that even new batteries may need refreshing if they have been stored for a long period of time before use.

### NOTE:

**Dispose of the battery safely.**

**Do not recharge, short circuit, crush, disassemble, heat above 100°C (212°F), incinerate, or expose contents to water.**

### important

Please be sure to always keep your pool cleaner properly stored anywhere between 10 to 40 degrees Celsius (50 to 104 degrees Fahrenheit). This will keep the motors, plastics and seals protected. Failure to comply will result in loss of warranty.