



ABOVE GROUND POOL PUMP

USER MANUAL AND INSTALLATION GUIDE

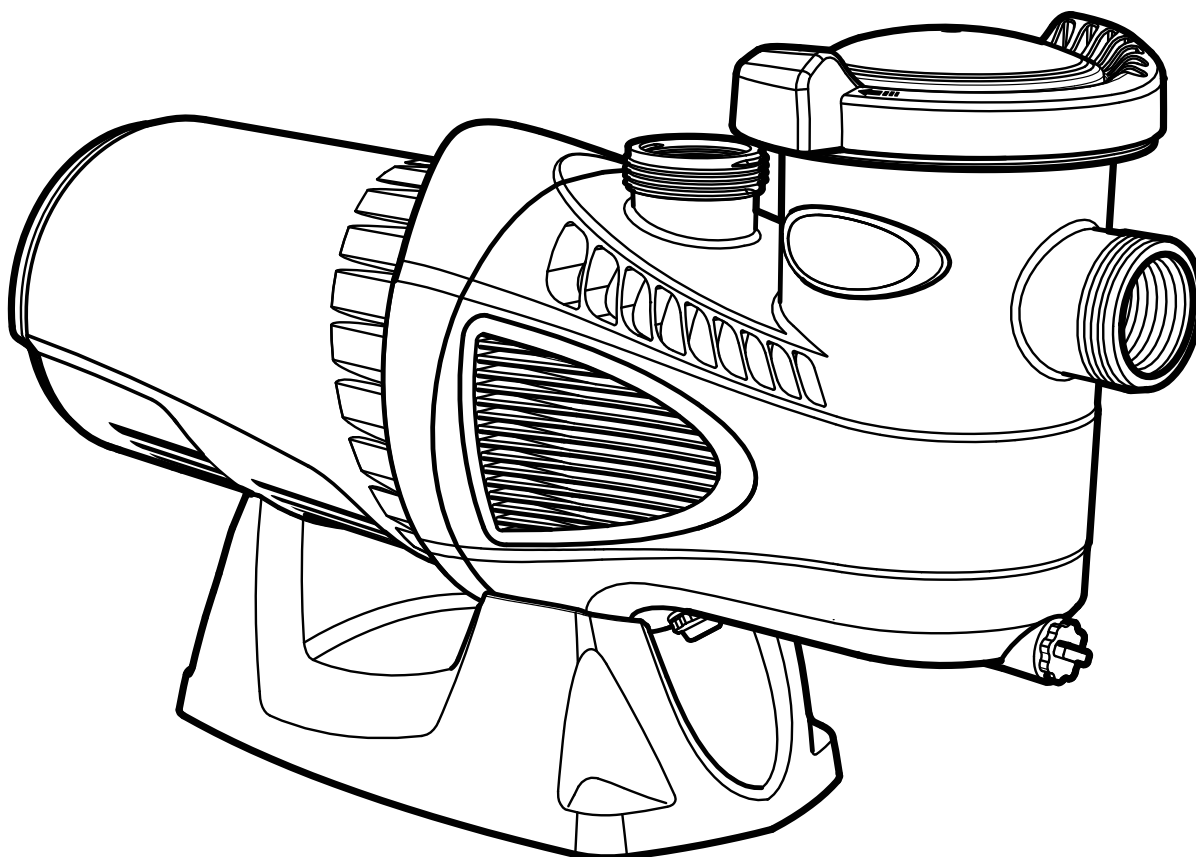
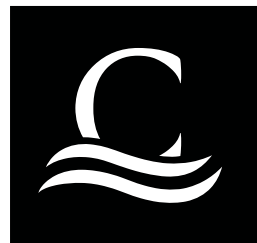


TABLE OF CONTENTS

INTRODUCTION	2
GENERAL	3
ANTI-VIBRATION BASE INSTALLATION	4
INSTALLATION	4
PLUMBING	4
ELECTRICAL CONNECTIONS	4
STARTING UP	4
CONTROLLING THE OUTPUT	4
LUBRICATION	4
DRAINING	4
MAINTENANCE	5
MOTOR INFORMATION	5
CLEANING THE STRAINER BASKET	5
TO DISMANTLE PUMP	5
INSPECTION	6
SHAFT SEAL REPLACEMENT	6
TO REMOVE OLD SHAFT SEAL	6
FIT NEW SHAFT SEAL	6
FREQUENTLY ASKED QUESTIONS	6
REPLACEMENT PARTS	7
CONSUMER INFORMATION	8
REPLACEMENT PARTS AVAILABILITY	8
WARRANTY	8
TECHNICAL SUPPORT INFORMATION	8

INTRODUCTION

Thank you for purchasing the SHARKWAVE PUMP by CARVIN®, for above ground pools.

We want to help you get the best results from your new product and operate it safely. This manual contains information on how to do that; please read it carefully before installing and using the pool. If a problem should arise, or if you have any questions about your product, consult an authorized CARVIN® retailer or distributor.

All the information in this manual is based on the latest product information available at the time of publication. The manufacturer reserves the right to make changes at any time without notice and without incurring any obligation. No part of this publication may be reproduced without written permission.

READ AND FOLLOW ALL INSTRUCTIONS

Review all instructions provided with the product prior to its installation, startup, operation, shutdown, maintenance or winterizing.

Failure to follow warnings and safety messages may result in property damage or personal injury. The user assumes the bodily or material risks arising from any improper use of this product.

IMPORTANT SAFETY INSTRUCTIONS

Your safety and the safety of others are very important.

This manual provides important safety messages. A safety message alerts you to potential hazards that could hurt you or others. Each safety message is identified by a black box marked, WARNING.

IMPORTANT SAFETY INSTRUCTIONS

When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

**WARNING**

RISK OF SUCTION ENTRAPMENT HAZARD WHICH, IF NOT AVOIDED, MAY RESULT IN SERIOUS INJURY OR DEATH.

Pumps can quickly generate high suction, which poses the risk of entrapment if improperly connected to suction outlets. Disembowelment, entrapment, or drowning is possible when body parts or hair contact damaged, cracked, missing, or unsecured drain covers and suction outlets. **Pumps and fittings shall be installed in accordance with the latest NSPI or IAF standards, CPSC guidelines, and national, state and local codes, to minimize this risk. Some of these requirements are as follows.** Always consult the latest regulations to ensure that your installation meets the necessary requirements to minimize suction entrapment.

1. All fully submerged Suction Outlet Covers shall be listed to ANSI/APSP/ICC-16-2017 standard.
2. Do not use a pump in an installation where there is only one fully submerged single suction outlet.
3. If main drains are installed in your pool, there must be a minimum of two for each pumping system, and each drain must include a Listed Suction Outlet Cover. Wading pools may have additional requirements to minimize entrapment hazards.
4. Skimmers may supply 100% of the required flow to the pump, and must be vented to atmosphere. A skimmer is not considered a second main drain.
5. When two suction outlets are used, the maximum system flow rate shall not exceed the rating of any one of the listed suction outlet covers installed. When more than two are used, the sum of the ratings shall be at least twice the maximum system flow rate.
6. Each Suction Outlet Cover shall be separated by a minimum of three feet (3'), measured from center of suction pipes.
7. Avoid installing check valves. If check valves must be used, ensure that the installation conforms to applicable standards.
8. Never use the pool or spa if a Suction Outlet Cover is damaged, cracked, missing, or not securely attached. Suction outlet cover must be attached with stainless steel screws supplied with the cover. If screws are lost, order replacement parts from your supplier.

**WARNING**

To reduce risk of injury, do not permit children to use this product unless they are closely supervised at all times.

**WARNING**

(For cord & plug connected units) Risk of Electric Shock. Connect only to a grounding type receptacle protected by a ground-fault circuit-interrupter (GFCI). Contact a qualified electrician if you cannot verify that the receptacle is protected by a GFCI.

**WARNING**

(For cord & plug connected units) Do not bury cord. Locate cord to minimize abuse from lawn mowers, hedge trimmers and other equipment.

**WARNING**

(For cord & plug connected units) Do not bury cord. Locate cord to minimize abuse from lawn mowers, hedge trimmers and other equipment.

**WARNING**

(For cord & plug connected units) To reduce the risk of electric shock, if the cord is damaged, replace it immediately with the same type of cord which is available from your local dealer. The new cord must be installed by a qualified electrician. Inspect the cord annually.

**WARNING**

(For cord & plug connected units) To reduce the risk of electric shock, do not use an extension cord to connect unit to electric supply; provide a properly located outlet.

**WARNING**

Install the system at least five feet (5 ft.) (1.5 m) from the pool to prevent it from being used as a means of access to the pool by young children. Consult the specific regulations and codes that apply to your location.

**WARNING**

This pump is for use with permanently installed pools and may also be used with tubs and spas if so marked. Do not use with storable pools. A permanently installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage. A storable pool is constructed so that it may be readily disassembled for storage and reassembled to its original integrity.


**WARNING**

For Canada only: the motor of the filter pump for above-ground pools is equipped with a splash cover and a 25 ft. (7.62 m) three conductor cord ending with a three-pin grounding plug and must be connected only to a grounding type receptacle protected by a ground fault circuit interrupter (GFCI).

IMPORTANT: This product has been carefully inspected and packed at our factory. As the carrier has assumed full responsibility for its safe arrival, any claim for damage to the shipment, either visible or concealed, must be made on the carrier.

GENERAL


This is a self-priming pump, which means that it can raise water to itself through a dry suction line without using valves, provided the pump case and strainer body are full of water before the motor is started. We recommend the use of a swing check valve in the suction pipe, at or below water level, if the suction lift is more than 5 feet (1.5m) or if the dry suction line would be more than 10 feet (3.0 m) long. This arrangement makes the initial priming easy and keeps the suction pipe primed at all times. The pump is built from glass-reinforced thermoplastic moldings. These eliminate all corrosion problems and insulate the water passages from the electric motor. A closed impeller, which requires no field adjustment to maintain efficiency, runs inside a multi-vane separate diffuser. Ample running clearances between impeller and case promote long life and prevent seizure should sand enter the pump. The impeller hub forms an insulating sleeve over the motor shaft and carries the mechanical shaft seal. This seal, which has a pure-carbon rotating face working against a ceramic seat, requires no attention until leakage at the shaft shows that replacement is necessary. For easy routine servicing, the built-in hair and lint strainer has a transparent cover. For easy access to the working parts, the removal of six screws allows the motor, bracket, seal, impeller and diffuser to be withdrawn as a unit. Anti-Vibration Features have been added to the splash cover and base resulting in a quiet running. SHARKWAVE™ assemblies were simplified for ease of maintenance and repair.

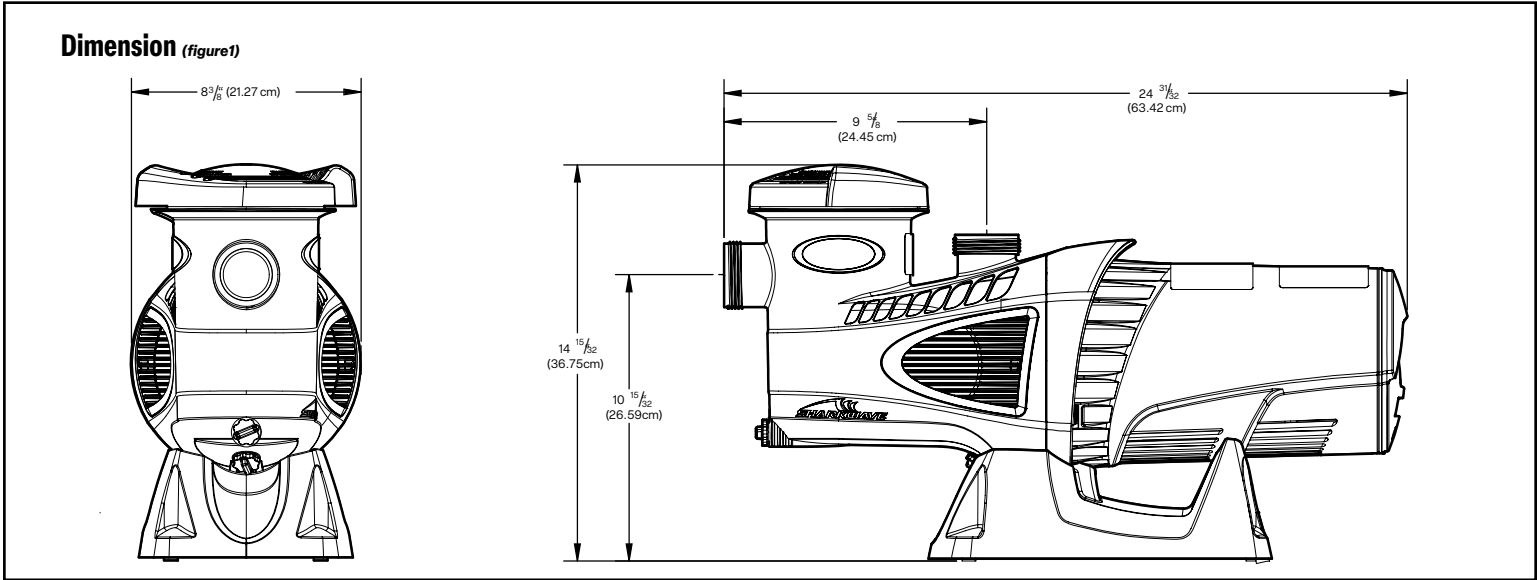

Anti-Vibration Base Installation


STEP 1

Insert the 4 Stem bumpers in the allocated holes underneath the Base.

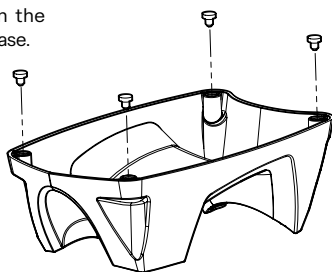


STEP 2

Insert the 2 Stem bumpers in the allocated holes on top of the Base. These bumpers will reduce the vibrations of the Splash Cover.

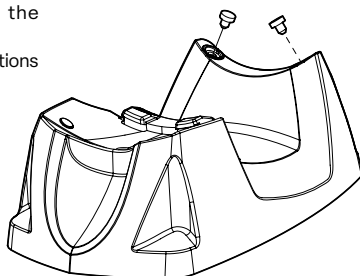

STEP 3


Insert the 2 Base tabs in the appropriate motor bracket cavities. This action blocks the Splash Cover from rotating to limit access to motor live parts.

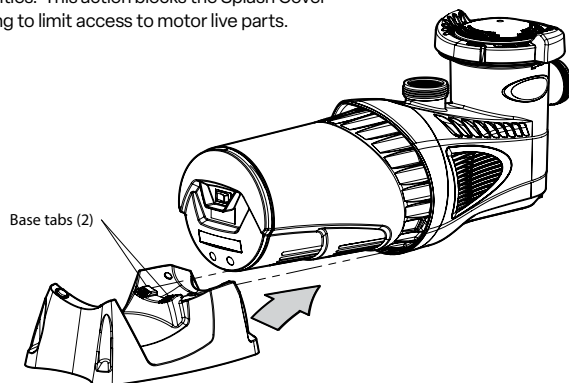

STEP 4

Insert bolt and washer and screw.

WARNING:
Do not over tighten bolt so as not to damage plastic thread in Pump Case.

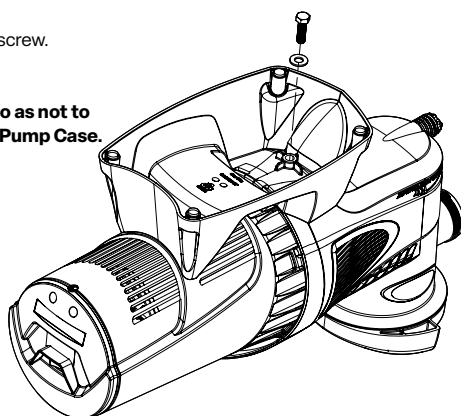

INSTALLATION

Locate the pump as close to the pool as possible, but keep at a minimum distance of at least five feet (1.5M) to prevent it being used as a means of access to the pool by young children (See previous Warning). Locate the pump preferably in a dry, shaded, and well-ventilated area. Should it be impossible to put the pump at or below water level, choose the lowest possible position. This simplifies priming, and adds to the pressure developed by the pump. Prepare a hard, level surface that is large enough to accommodate the associated equipment. Bear the following in mind: Drainage of the filter room or pit; Ventilation of the motor; Access for servicing and winterizing the equipment; Protection of the equipment. Make sure the bearing surface is leveled and straight to reduce vibrations.

PLUMBING

The pump has male / female sockets to receive 1-1/2" (38mm) threaded fittings. Keep the piping as simple as possible, and avoid connecting an elbow directly to the pump inlet (use a length of straight pipe to allow a proper entry of the water). Keep as much of the suction pipe as possible below the water level of the pool. This will reduce the priming time but arrange the pipe to rise continuously toward the pump to prevent high, spots that could form air pockets. Support the pipes independently so that they do not place strain on the pump. Install gate valves in the pump suction and pool return lines close to the filter system for convenient servicing of the equipment. These valves are essential if the equipment is installed below water level. Keep the gate valve in the suction line fully open during operation, and make sure that its gland is kept tight to prevent the entrance of air around the valve stem. Take care during installation to keep the pipes clean, and make sure that the suction system is absolutely airtight.

ELECTRICAL CONNECTIONS

Check that the information on the pump nameplate corresponds to the power supply. Employ a competent electrician to make the wiring installation in accordance with the local electrical code. Every motor requires a fused disconnect switch. LRC pumps are suitable for 115V only. LRC pumps are equipped with a splash cover and a 25 foot (7.5m) three conductor cord ending with a three-pin grounding plug.

STARTING UP

For 2-speed pumps, start and prime the pump at only. Do not change to **LOW SPEED** before the pump is working properly. At **HIGH SPEED** (3450 rpm approx.), the motor develops its full horsepower and the pump generates high capacity and pressure. Use high speed for maximum filtration at peak periods and whenever turbidity levels are high. At other times switch to **LOW SPEED** (1725 rpm approx.). For backwashing and vacuuming, **HIGH SPEED** is required. If the pump is supplied as part of a complete filter system, follow the starting-up procedure described in the separate instructions for the complete filter system. In other cases, proceed as follows:

1. Close the gate valves in the suction and return lines. Remove the cover from the hair and lint strainer and fill the pump completely with water. Replace the cover.
2. Open the gate valves in the suction and return lines and start the pump. If the pump fails to produce a full flow of water within four or five minutes, switch off the power and repeat Step 1. If the pump still fails to work, check for air leaks at the strainer cover, suction line connections, and valve stem glands before repeating Step 1.
3. After about ten minutes of operation check the pool return fittings for air bubbles. A continuous flow of air indicates leaks in the suction line. Locate and correct any leaks immediately.



WARNING

Never run the pump without water in the pump case because lack of water can damage the shaft seal.

CONTROLLING THE OUTPUT

Keep the gate valve in the suction line fully open during operation. Should it be necessary to control the output, use a valve in the return line.

LUBRICATION

The pump requires no lubrication. Refer to manufacturer's recommendations.

DRAINING

There is a drain plug on the pump case. Note that the valves in the suction and return lines must be open to allow complete draining of the pump, but that other provisions may be necessary for draining the filter, heater, and pipe lines.

MAINTENANCE

The pump can be serviced without breaking the pipe connections. Close the gate valves, **SWITCH THE ON/OFF SWITCH TO OFF AND PULL THE PLUG FROM THE RECEPTACLE** before starting work on the pump. During periods when the pump is not in use, and always during servicing, switch the ON/OFF switch to OFF and pull the plug from the receptacle.

NOTE: THE PUMP SHOULD BE SERVICED BY QUALIFIED PERSONNEL ONLY.

MOTOR INFORMATION

SHARKWAVE PUMP MODEL				
Pump Model	Motor HP Rating	Voltage	MAX. Full-Load Current (A)	Max. kW output
1SHW5S1	1	115	9.0	0.37
15SHW5S1	1.5		9.0	0.37
15TSHW5S1	1.5		10.3/2.9	0.56
15SHW35S1*	1.5		9.0	0.37
15TSHW35S1*	1.5		10.3/2.9	0.56
15SHW65S1*	1.5		9.0	0.37
15TSHW65S1*	1.5		10.3/2.9	0.56

MODELS SOLD ONLY IN THE U.S.A.


CLEANING THE STRAINER BASKET

Switch off the power. Close the valves in the suction and return lines. Remove the Strainer Nut and clear cover and lift out the strainer basket. Clean and replace the basket. Take care to clean o-ring and make sure that it is well seated underneath clear cover and place cover back on strainer body. Align and insert Strainer Nut, hand-tightened only (fig.2). Re-open valves. Put pump back into operation.

NOTE: Do not re-tighten Strainer Nut while pump is in operation.


CLOSING STRAINER NUT (figure 2)

1. INSERT

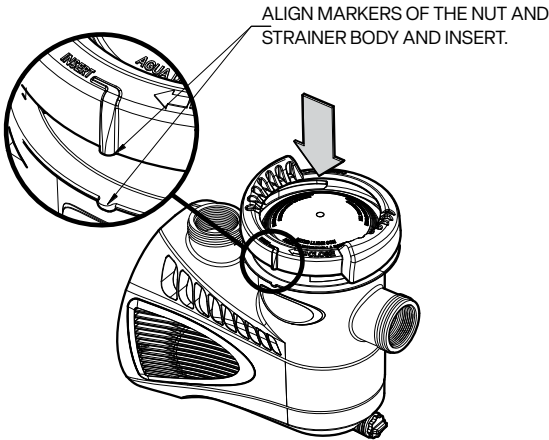

2. ROTATE

ROTATE 1/4 TURN CLOCKWISE TO LOCK

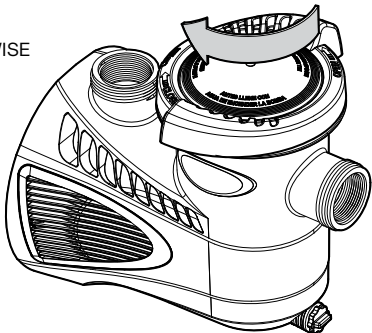

TO DISMANTLE PUMP


NOTE: VERIFY THE ELECTRICAL POWER IS DISCONNECTED BEFORE YOU CONTINUE.
Note: Numbers in brackets refer to item numbers in Figure 5.

1. Remove the back plate (20) by taking out four self-tapping screws (21).
2. Disconnect the black wire (24) from the switch (22).
3. Disassemble base (27) blocking the rotation of the splash cover. Turn the Splash Cover counterclockwise to unlock (see Figure 3).

OPENING THE SPLASH COVER (figure 3)

1. DISENGAGING THE BASE

REMOVE THE SCREW AND THE WASHER, SLIDE THE BASE BACKWARD REMOVING THE BASE INTERLOCK TABS.

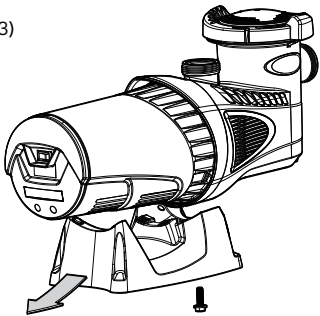


2. UNLOCKING THE SPLASH COVER

TURN COUNTER CLOCKWISE TO DISENGAGE THE SPLASH COVERS BAYONET.

COUNTER CLOCKWISE
UNLOCK COVER

TURN CLOCKWISE TO RE-ENGAGE THE COVER WITHOUT COMPRESSING THE O-RING

CLOCKWISE
LOCK COVER

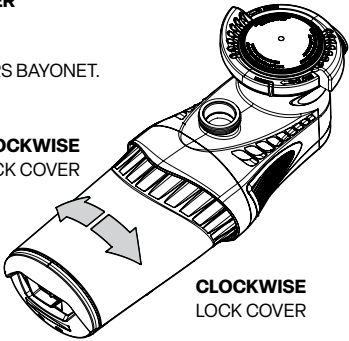

THE FOLLOWING IS FOR US 2 SPEED SHARKWAVE™ PUMP ONLY:


To facilitate access to the motor shaft remove the motor cap screw and remove back cap. It is not necessary to unplug the motor power cord (23), unless the motor (16) or the power cord (23) have to be replaced or repaired.

4. Remove six self- tap screws (14) that holds the pump together, retract the sub-assembly containing: Motor Bracket (13), Main O-Ring (7), Motor (16), Mechanical Shaft Seal Assembly (12), Flinger (15), Impeller (11), Diffuser (9) and Diffuser O-Ring(8)
5. To disassemble Diffuser (9), insert small flat screwdriver between the 2 small snaps on Motor Bracket (, gently lift the diffuser assembly tab and pull the diffuser to free one side. Repeat steps on opposite side to free diffuser (See Figure 4).

1. DISASSEMBLING THE DIFFUSER (figure 4)

INSERT A SMALL SCREW DRIVER BETWEEN THE MOTOR BRACKET TWO SNAPS. LIFT SLOWLY THE DIFFUSER'S TAB TO RELEASE (REPEAT ON THE OTHER SIDE)

ALTERNATIVE SCREW BOSSES

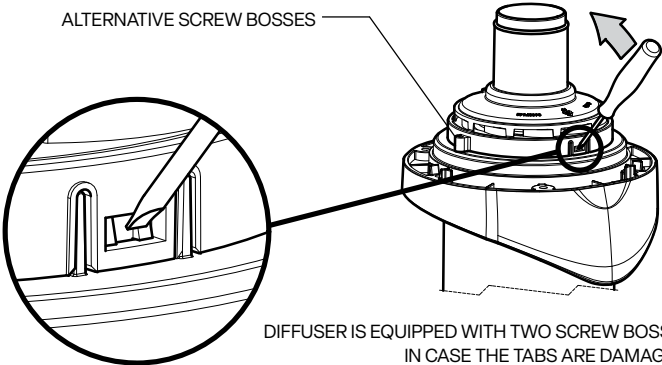

DIFFUSER IS EQUIPPED WITH TWO SCREW BOSSES IN CASE THE TABS ARE DAMAGED. USE (2X) NO.10-24 X 1" 316 STAINLESS STEEL SELF-TAPPING SCREWS TO ATTACH DIFFUSER TO MOTOR BRACKET.

6. Prevent the motor shaft from rotating by inserting a screwdriver in the slot in the end of the shaft at the back of the motor, and unscrew the impeller (11).
7. Remove the four long screws that hold the motor (16) to the bracket (13).

INSPECTION

Inspect all parts of the pump for wear or damage, and order replacements as necessary. Check the shaft seal (12) carefully. Look for cracks in the ceramic seat. Check the seal faces for wear and nicks. Flex the rubber parts and check them for holes and cracks. Replace the complete seal if any part is damaged, or if the seal leaks. Do not use old parts.

SHAFT SEAL REPLACEMENT

Take great care while handling the shaft seal (12) to avoid damage to its carbon and ceramic sealing faces.

TO REMOVE OLD SHAFT SEAL

After dismantling the pump and removing the impeller as already described, pull the rotating parts of the seal from the hub of the impeller (11). Press or tap the stationary section of the seal from the motor bracket

FIT NEW SHAFT SEAL

DO NOT USE OIL OR GREASE ON THE SEAL PARTS, because either may damage the thermoplastic material of the pump through overheating or chemical reaction. Make sure that the pump parts are clean, but be careful not to scratch the surfaces that come into contact with the seal. Moisten the rubber cup of the new stationary section with WATER. Protect the sealing surface with a disc of clean cardboard, and use a light mallet and small wooden block to tap the seal gently into the bracket (13). Be sure that the sealing surface faces the pump. Reassemble the bracket (13) onto the motor (16). Moisten the bore of the new rotating seal assembly with WATER. Push the assembly into position on the hub of the impeller (11) with its sealing surface facing outward. Prevent the motor shaft from rotating by inserting a screwdriver in the screw the impeller (11) to the shaft by hand. Put the diffuser back into place by snapping the Motor Bracket (13) and the diffuser (11) back together. Make sure that the diffuser o-ring (8) is still on. (If the Diffuser assembly tabs are damaged, there are 2 assembly posts provided to screw self-tapping screws no.10-24 x 1") Make sure that the Main O-Ring (7) is properly positioned on the face of the Motor Bracket (13), then reassemble the bracket (13) to the pump Strainer Case(5). Tighten the screws (14) carefully without damaging the thread, apply even tension to the screws (14) by tightening opposite pairs in turn. Reassemble the splash cover (19) and the base (27) (Figure 3). Reinstall the pump and run it for 5 minutes to ensure that no water leaks from the pump case (which would indicate improper seal installation). If any water is observed leaking from the pump case, repeat seal installation procedure.

FREQUENTLY ASKED QUESTIONS

MOTOR DOES NOT START

Disconnect switch open; Fuses blown or thermal overload open; Motor windings burned out; Defective starting switch inside motor; Disconnected or defective wiring.

MOTOR DOES NOT REACH FULL SPEED

Low voltage; Motor windings connected for wrong voltage; Shaft binding or impeller rubbing.

MOTOR OVERHEATS (Protector trips)

Low voltage; Motor windings connected for wrong voltage; Inadequate ventilation.

PUMP DELIVERS NO WATER

Pump not primed; Closed valve in suction or discharge line; Suction or discharge line plugged; Leakage of air into suction system; Impeller plugged.

LOW PUMP CAPACITY

Check setting of dial valve; Valve in suction or discharge line partly closed; Suction or discharge line partly plugged; Suction or discharge line too small; Pump running at reduced speed (see above); Plugged basket in skimmer or hair in lint strainer; Dirty filter; Impeller plugged.

LOW PUMP PRESSURE

Check setting of dial valve; Pump running at reduced speed (see above); Discharge valve or inlet fitting opened too much; Leakage of air into suction system.

HIGH PUMP PRESSURE

Discharge valve or inlet fittings closed too much; Return lines too small; Dirty filter.

NOISY PUMP AND MOTOR

Plugged basket in skimmer or hair in lint strainer; Defective motor bearings; Valve in suction line partly closed; Suction line partly plugged; Vacuum cleaner hose plugged or too small; Piping causing strain on pump case; Impeller rubbing on pump case.

LEAKAGE OF WATER AT SHAFT


Shaft seal requires replacement.

AIR BUBBLES AT INLET FITTINGS

Leakage of air into suction line at connections; Cover of hair and lint strainer not airtight; Restriction in suction line; Low water level in pool.

REPLACEMENT PARTS

SHARKWAVE™

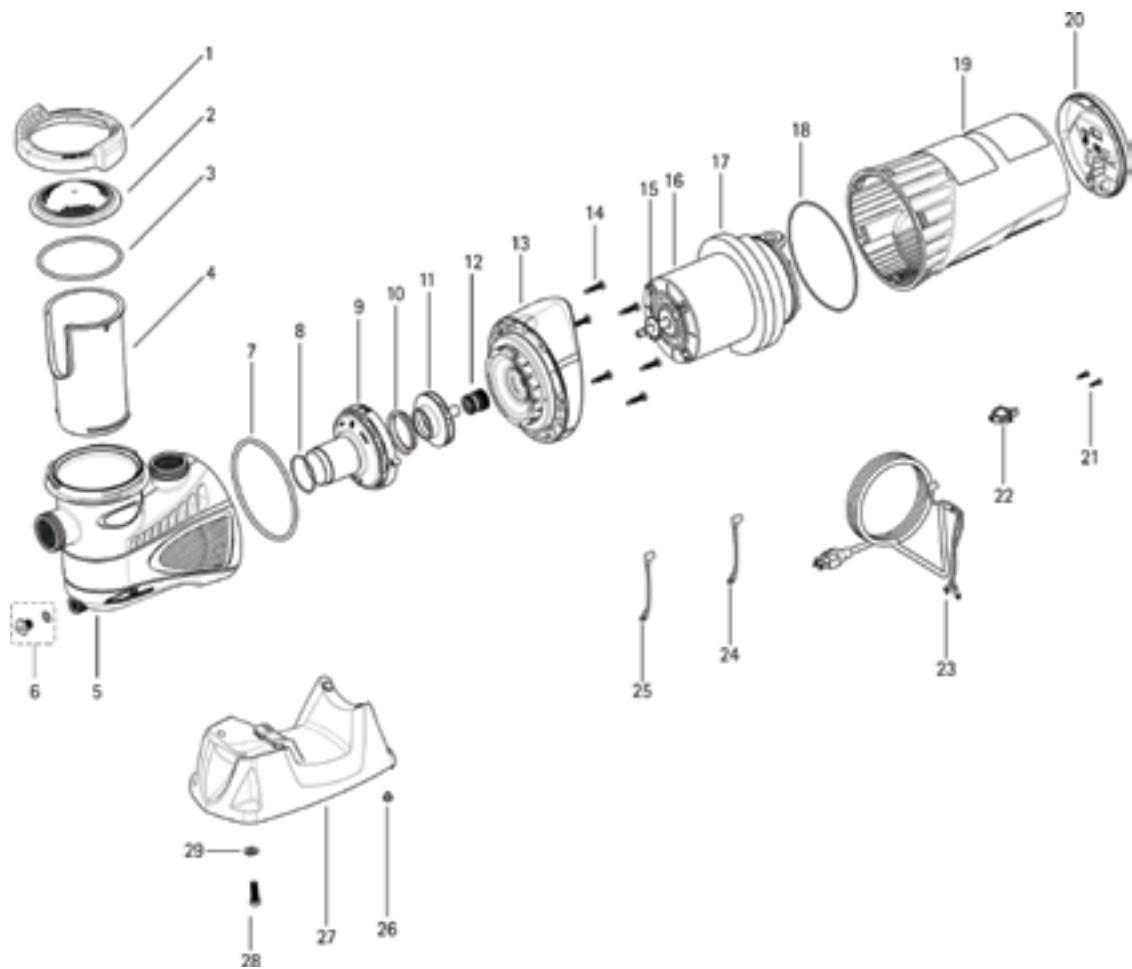

#	DESCRIPTION	PART NB.	#	DESCRIPTION	PART NB.
1	Quater-Turn Strainer Nut	42167970R	16	Motor (Contact your local pool dealer)	
2	Strainer Cover	39078903R	17	Motor Gasket	22901830R
3	Strainer O-Ring	47035241R	18	Splash Cover Counter-Vibration O-Ring	47016707R
4	Strainer Basket	16105215R	19	Splash Cover	85876483R
5	Strainer Pump Body	16032030R	20	Splash Cover End Cap	85876482R
6	Drain Plug with O-Ring (2 per Bag)	31160906R2	21	Phillips Pan Head Stn-Stl Self Tap Screw no.10 x ¼ (2 per bag)	14236510R2
7	Strainer Body Main O-Ring	47036207R	22	Rocker Switch for 1 Speed motor (2 positions)	23199450R
8	SHARKWAVE™ Diffuser O-Ring	47021406R	22a	Rocker Switch for 2 Speed motor (3 positions)	23199455R
9	SHARKWAVE™ Diffuser	06037642R	23	Power Cord with Plug	23832870R
10	Floating Eye Seal	10146207R	24	Insulated Wire (Black)	23444706R
11	Impeller	05391107R	25	Insulated Wire (Red, for 2 speed pump)	23832851R
12	Mechanical Seal	10080208R	26	Stem Bumpers (6 per Bag)	23834021R6
13	Motor Bracket	02653213R	27	SHARKWAVE™ Base	12255347R
14	Robertson/Phillips Pan Head Self Tap Screw 1/4-14 x11/4 (6 per bag)	14263032R6	28	Hex Cap Screw ¾-16 x 1.25"	14129613R
15	Flinger	22340305R	29	Washer	14074025R

CONSUMER INFORMATION

Authorized CARVIN® retailer or distributor personnel are trained professionals. They should be able to answer any question you may have. If you encounter a problem that your retailer or distributor does not solve to your satisfaction, please discuss it with the retailer's or distributor's management. The Service Manager, General Manager, or Owner can help. Almost all problems are solved in this way.

If you are not satisfied with the decision made by the retailer's or distributor's management, contact the CARVIN® technical support.

When you write or call, please provide the following information:

- Product model, serial number and date code.
- Name of retailer or distributor who sold the Product to you.
- The original proof of purchase showing the date of purchase.
- Your name, address and telephone number.
- A detailed description of the problem.
- If sending an email, any relevant photos of the Product and its surroundings.

REPLACEMENT PARTS AVAILABILITY

Replacement parts are available through your CARVIN® retailer or distributor.

WARRANTY

A digital warranty is provided for your product.

<https://carvinpool.com/link/warranty>

TECHNICAL SUPPORT INFORMATION

After contacting your dealer or distributor, if you have any problems with your Product, contact CARVIN® Technical Support.

AMERICA

Web: carvinpool.com/support

Email: help@carvinpool.com

Phone: 1 (450) 250-4500 option 2

Fax: 1 (450) 250-4501

Toll Free: 1 866 979-4501

Mail: CARVIN® POOL EQUIPMENT

Technical Support

4000 boul. Casavant West,

Saint-Hyacinthe, Quebec, Canada, J2S 9E3



LE GROUPE VIF INC.

4000, boulevard Casavant West, Saint-Hyacinthe
Québec, Canada, J2S 9E3

www.carvinpool.com

CARVIN® is a registered trademark of Le Groupe VIF Inc.
In Canada and the United States of America.

