

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

Lighted lamp is HOT!

WARNING — To reduce the risk of FIRE OR INJURY TO PERSONS.

- 1) Turn off / unplug and allow to cool before replacing lamp.
- 2) Lamp gets HOT quickly! Contact only switch / plug when turning on.
- 3) Do not touch hot lens or cowl.
- 4) Do not remain in light if skin feels warm. (Light is intense, it may cause "sunburn".)
- 5) Do not look directly at lighted lamp.
- 6) Keep lamp away from materials that may burn.
- 7) Use only with wattage and lamp marked on fixture.
- 8) Do not touch the inner glass envelope of the lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
- 9) Do not operate the fixture with a damaged or missing lens.

SAFETY INSTRUCTIONS

READ THIS FIRST

KEEP THESE INSTRUCTIONS

This fixture is intended for installation in accordance with the National Electric Code (NEC) and Local code specifications. Failure to adhere to these codes and instructions may result in serious injury and/or property damage and will void the warranty.

- 1) **WARNING:** This fixture is not to be installed within 10 feet (3M) of a pool, spa or fountain.
- 2) This fixture is to be used only with a power unit (transformer) rated a maximum of 300 W (25 AMPS) 15 volts.
- 3) The #18 ga. fixture wire is not intended for direct burial.
- 4) Direct burial rated wire is to be buried a minimum of 6" (152mm) beneath the surface of the ground. **NOTE:** If additional Direct Burial wire is needed, contact your local Kichler® landscape distributor.
 - 8 GA wire can be purchased in length of 250' (76 M), 15503-BK.
 - 10 GA wire can be purchased in length of 250' (76 M), 15504-BK.
 - 12 GA wire can be purchased in lengths of 100' (30 M), 15501-BK; 250' (76 M), 15502-BK; 500' (152M), 15505-BK; and 1000' (304 M), 15506-BK.
- 5) Fixture shall not use a tungsten halogen lamp unless the fixture is marked for use with such lamps.
- 6) Wiring connections must be made with approved/listed wire connection device(s) suitable for the application. Do not exceed manufacturers' wiring combination specifications for size and quantity of conductors.


CAUTION

WHEN INSTALLING KICHLER LANDSCAPE LIGHTING (LINE VOLTAGE OR LOW VOLTAGE), CARE SHOULD BE TAKEN TO KEEP CLEAR OF POTENTIALLY COMBUSTIBLE MATERIALS.

WHEN MAINTAINING THE FIXTURES, BE SURE TO REMOVE LEAVES, PINE NEEDLES, GRASS CLIPPINGS, MULCH, OR ANY DEBRIS THAT HAS ACCUMULATED ON THE LIGHT BULB, LENS, OR BODY OF THE FIXTURE.

ASSEMBLY AND INSTALLATION

- 1) **TURN OFF POWER.**
- 2) Determine desired location for mounting fixture.
- 3) At desired location, hammer stake into ground. To avoid damage to stake, place a board on top of stake or use a rubber mallet. If ground is hard and stake is difficult to install, make a crosscut in ground using a flat shovel.
- 4) Clear away area in ground at wireway opening in stake.
- 5) Unscrew cowl from accent light. Cowl is removed with counter-clockwise quarter-turn twist.
- 6) To install lamp, compress spring into housing and grasp socket. Insert pins of lamp securely into socket. **NOTE:** Use caution when installing. Hold lamp by outer housing. DO NOT touch glass envelope inside. If this happens, clean lamp with denatured alcohol and a lint free cloth.
- 7) Apply a light coating of provided silicone lubricant to o-rings.
- 8) Install cowl onto accent light housing. Cowl can be adjusted to eight different orientations on the housing. Align boss inside cowl with key on fixture housing (see FIG. 2), slide cowl past o-rings and twist clockwise one

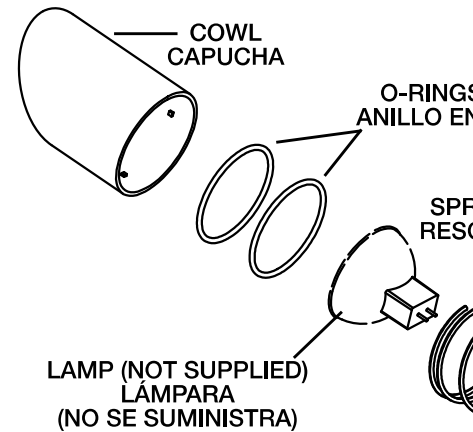

ACCENT LIGHT HOUSING -
CUBIERTA DE LA LUZ DE ACEN

TURN COWL CLOCKWISE TO INSTALL
ON TO ACCENT LIGHT HOUSING
GIRE LA CAPUCHA EN SENTIDO HORARIO
PARA INSTALARLA EN LA CUBIERTA DE LA
LUZ DE ACENTO

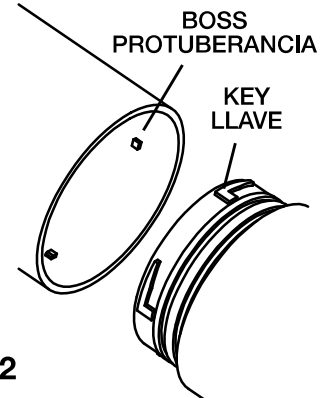


FIG. 2

- 2) Este artefacto debe utilizarse solamente con un
- con capacidad nominal máxima de 300 vatios
- 3) El alambre del artefacto calibre No. 18 no e
- 4) El alambre clasificado para soterrado direct
- pulgadas (152 mm) debajo de la superficie
- alambre de soterrado directo adicional, con
- local Kichler® de productos de jardinería or
- El alambre calibre 8 puede comprarse en
- El alambre calibre 10 puede comprarse en
- El alambre calibre 12 puede comprarse en l
- 100' (30 m.), 15501-BK; 250' (76 m.), 1550
- 1000' (304 m.), 15506-BK.
- 5) El artefacto no debe utilizarse con lámparas
- artefacto esté marcado para usar con tales
- 6) Las conexiones de cableado se deben hacer
- dispositivos) de conexión de cableado apro
- para la aplicación. No exceda las especifica
- cableado del fabricante para el tamaño y ca

PRECAUCION

CUANDO SE INSTALE SISTEMAS DE ALUMBRADO KICHLER® (DE LINEA O CON VOLTAJE BAJO) SE DEBE TENER CUIDADO DE MANTENER LIBRE DE HOJAS, CONOS DE PINO, RECORTES DEL PASTO, CUBIERTA DE LA LUZ DE ACENTO. SE HAYA ACUMULADO EN LA BOMBILLA DE LUZ. EL L

OUTDOOR USE ONLY
DOM ETRE INSTALLE A L'EXTERIEUR

INSTRUCTIONS

For Assembling and Installing Fixtures
Pour L'assemblage et L'installation des Fixtures

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS
IMPORTANT SAFETY INSTRUCTIONS

Lighted lamp is HOT!

WARNING — To reduce the risk of FIRE OR INJURY TO PERSONS.

- 1) Turn off / unplug and allow to cool before replacing lamp.
- 2) Lamp gets HOT quickly! Contact only switch / plug when turning on.
- 3) Do not touch hot lens or cowl.
- 4) Do not remain in light if skin feels warm. (Light is intense, it may cause "sunburn".)
- 5) Do not look directly at lighted lamp.
- 6) Keep lamp away from materials that may burn.
- 7) Use only with wattage and lamp marked on fixture.
- 8) Do not touch the inner glass envelope of the lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
- 9) Do not operate the fixture with a damaged or missing lens.

FOR USE WITH LANDSCAPE LIGHTING SYSTEMS ONLY.

- 1) The device is accepted as a component of a landscape lighting system where the suitability of the CSA or UL labeled combination shall be determined by CSA, UL respectively or the local inspection authorities having jurisdiction.
- 2) Fixture shall be connected to an extra low voltage transformer approved for use with landscape lighting systems.
- 3) This fixture is to be connected to a secondary wiring of the following type:
12 GA 60°C minimum type;
SPT-3 suitable for outdoor use; or
approved landscape lighting cable.

CAUTION

WHEN INSTALLING KICHLER LANDSCAPE LIGHTING (LINE VOLTAGE OR LOW VOLTAGE), CARE SHOULD BE TAKEN TO KEEP CLEAR OF POTENTIALLY COMBUSTIBLE MATERIALS.

WHEN MAINTAINING THE FIXTURES, BE SURE TO REMOVE LEAVES, PINE NEEDLES, GRASS CLIPPINGS, MULCH, OR ANY DEBRIS THAT HAS ACCUMULATED ON THE LIGHT BULB, LENS, OR BODY OF THE FIXTURE.

ASSEMBLY AND INSTALLATION

- 1) **TURN OFF POWER.**
- 2) Determine desired location for mounting fixture.
- 3) At desired location, hammer stake into ground. To avoid damage to stake, place a board on top of stake or use a rubber mallet. If ground is hard and stake is difficult to install, make a crosscut in ground using a flat shovel.
- 4) Clear away area in ground at wireway opening in stake.
- 5) Unscrew cowl from accent light. Cowl is removed with counter-clockwise quarter-turn twist.
- 6) To install lamp, compress spring into housing and grasp socket. Insert pins of lamp securely into socket. **NOTE:** Use caution when installing. Hold lamp by outer housing. **DO NOT** touch glass envelope inside. If this happens, clean lamp with denatured alcohol and a lint free cloth.
- 7) Apply a light coating of provided silicone lubricant to o-rings.
- 8) Install cowl onto accent light housing. Cowl can be adjusted to eight different orientations on the housing. Align boss inside cowl with key on fixture housing (see FIG. 2.), slide cowl past o-rings and twist clockwise one quarter turn.
- 9) Install fixture in stake and adjust to desired aiming direction.
- 10) Adjust angle of accent light by loosening swivel adjustment screw.
- 11) Make wire connections using an approved wiring connectors (not supplied.)
- 12) Locknut available if required (LK87CBR, not supplied) Contact your distributor.

