

# SnapTap<sup>®</sup> PRO

For 80 and 100 lb. 1" 3408 / 3608 HDPE Pipe  
For 100 and 125 lb. 1" 4710 HDPE Pipe



**FOR SWING JOINTS, DRAINS,  
AND SPRINKLER HEADS**

## SnapTap<sup>®</sup> PRO w/FPT Tap

| SKU#  | Size                      | Selling Unit |
|-------|---------------------------|--------------|
| 22710 | 1" Saddle w/ 1/2" FPT Tap | Bag of 25    |



## SnapTap PRO w/90° Elbow

| SKU#  | Size                  | Selling Unit |
|-------|-----------------------|--------------|
| 22715 | 1" Saddle w/90° Elbow | Bag of 25    |



## SnapTap PRO w/Straight Barb

| SKU#  | Size                      | Selling Unit |
|-------|---------------------------|--------------|
| 22720 | 1" Saddle w/Straight Barb | Bag of 25    |



### A. VERSATILE TAP DESIGN

Tap is threaded to handle 90° Elbow, Straight Barb, or appropriate sprinkler heads.

### B. ERGONOMIC HURRICANE HANDLE

to cushion fingers and provide maximum comfort

### C. PRECISE CUTTING TIP

Superior strength patented "cutting tip" cleanly cuts polyethylene pipe for a tight seal every time.

### D. PUSH-ON SADDLE

for the **FASTEST** installation possible.

# SnapTap<sup>®</sup> PRO

For 80 and 100 lb. 1" 3408 / 3608 HDPE Pipe  
For 100 and 125 lb. 1" 4710 HDPE Pipe

## SnapTap<sup>®</sup> PRO

### Installation Instructions

Note: Do not install tap into saddle until saddle is in place on pipe.



Push open end of saddle around pipe with the threaded portion facing upwards.



Using the palm of your hand, press down onto the top of the saddle until you hear it click into place around the pipe.



Screw tap into saddle until the tap locks. Handle will be parallel to pipe.

NOTE: To reposition SnapTap Elbow, turn clockwise only.

### Releasing an Engaged Latch

Slide small flat screwdriver into opening adjacent to latch and twist/pry until latch disengages. Not designed for multiple uses.

