



STOP ATTENTION ¡DETÉNGASE!

*This Manual **MUST** be read carefully before using this product!*
SAVE THIS OWNER'S MANUAL FOR FUTURE REFERENCE

*Vous **DEVEZ** lire ce manuel avant d'utiliser ce produit!*
CONSERVEZ-LE POUR RÉFÉRENCE FUTURE

*¡Este manual **DEBERÁ** ser leído antes de utilizar este producto!*
GUÁRDELO PARA REFERENCIAS FUTURAS



WARNING

To lessen your risk of serious injury or death, follow these rules:

- Read the owner's manual before using your Sportsstuff FUNSTATION.
- This product may only be used by one person at a time. Use by more than one person at the same time increases the chance of injury.
- Not for use by children under six (6) years of age. This product should never be used by children except under adult supervision.
- Please use this product with careful adult supervision and with individuals who understand and are knowledgeable of the product.
- Do not use this product if it is damaged or leaking air.
- Do not use this product under the influence of drugs or alcohol.
- Only use this product in water. Use only in 8 feet of water or more and a safe distance away from boats and personal watercrafts, docks, pilings, bridges and other hazardous objects.
- Remove debris or obstructions under the product before use.
- Do not use in unsafe waters.
- Do not use this product in swimming pools.
- Do not tow this product with anyone on it! This product can be pulled in the water **ONLY** to reach a desired location without exceeding 5mph.



WARNING

- This product is not a lifesaving device
- Do not use this product on, or drag across land or any abrasive surface.
- This product must be properly anchored.
- This product is not designed for aerial tricks or gymnastics.
- Do not attempt or allow somersaults. Landing on your head or neck can cause serious injury, paralysis, or death, even when landing in the middle of the bed.
- Risk increases the higher you jump on this product.
- This product is not to be used by nonswimmers without a USCG approved life vest.
- Always use the product's mounting platform to board the item.
- Users of this product must exercise caution and common sense at all times. **USE AT YOUR OWN RISK!**
- The platform may only be used by one person at a time. Use by more than one person at the same time increases the chance of injury.
- Do not dive off of platform!
- Do not use this platform detached from the trampoline portion.

CAPACITY: 1 PERSON WEIGHT LIMIT: 200 LBS


The manufacturer, KWIK TEK, Inc., does not have control over the use of this product and assumes no liability therein. Under no circumstances is KWIK TEK, Inc. or the seller, liable for any loss, damage, injury or expenses of any kind arising out of the use of this product. It is the responsibility of the user to determine the proper suitability and safety of the product during normal use. This product is subject to age, wear and deterioration from use and weather conditions. We strongly recommend that you inspect the product on a regular basis.

ASSEMBLY:


1. Carefully unfold the trampoline. Please note the jumping area is already in place.
2. Spread out the product to its actual size. Please make sure you have a large enough space to inflate the product.
3. Locate the valve and inflate until firm. Please note you need to utilize a high volume pump to inflate a product of this size. Refer to the specific instructions found in the INFLATION section of this manual. When you are done inflating the product it should be firm to the touch and should not be easy to press on the product.
4. Attach the mounting platform to the trampoline following the instructions given in the MOUNTING PLATFORM CONNECTION section of this manual. Next follow step #3 above to properly inflate the mounting platform.
5. Ensure that the drain vent on the underside center portion of the product is open. This will allow any excess water to drain from the center area upon removal.

6. Once trampoline assembly is complete, it may be carried to a location near the water for anchor assembly. This may take several people to lift and carry the product. Do not attempt to lift this product by yourself. Do not drag across any land surface.
7. To attach the anchor assembly to the trampoline, you need to first turn the trampoline over so that the bottom of the unit is accessible. Once turned over, attach the ends of two of the supplied lengths of rope to opposite underside grommets so that they extend from one side of the trampoline to the other, crossing in the middle, forming an 'X' or '+'. Tie one end of the third supplied rope around the intersection of the other two ropes. Lace the other end of the third rope through the holes in the top of the anchor bag and tie a knot at the end so the bag does not come off. Once completed, the anchor bag will hang freely from the bottom of the trampoline as shown in figure 1A.
8. Utilizing the anchor feature will reduce drifting and unwanted motion of the product. This product may be anchored by filling the attached anchor sack with sand, rocks, or a weight of up to 25lbs. Place the anchor on top of the trampoline until product is in the water at the desired location.
9. The product may be floated or pulled out to the location of your choice where it can remain for use.
10. If pulled to location, there should be no one on the product until towing has stopped and the item is anchored. Do not exceed 5 mph when pulling to location.
11. Once the product is in the desired location, drop the anchor bag in the water.
12. Have fun!

FIGURE 1A:

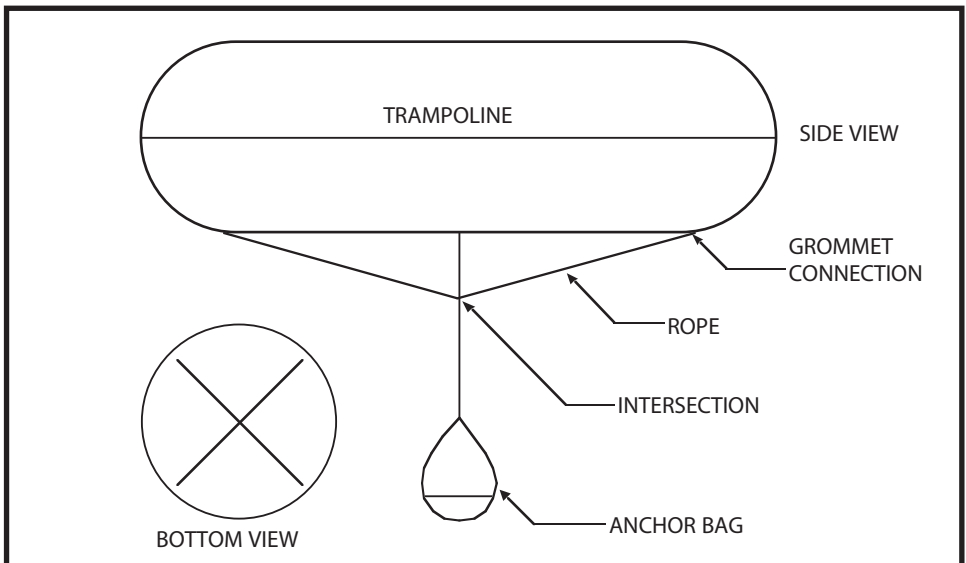

MOUNTING PLATFORM CONNECTION: To connect the mounting platform to the main unit, lace the supplied rope through each unit and tie a knot at each end as shown in the following photos:

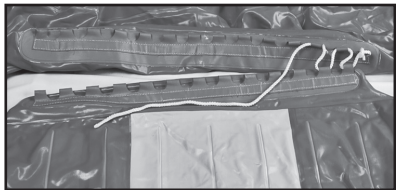

1) Begin by tying a knot around the right-most loop on the main unit. Lace the rope through each loop, alternating between a main unit loop and a mounting platform loop.




2) Continue lacing the rope through the loops, tightening and closing the gap between the two units as you proceed.




3) Once the rope has been laced through all loops, tighten rope and tie a knot around the last remaining loop. As the unit is used, be sure to check the connection and tighten as necessary

INFLATION: This product is equipped with the following types of valves:

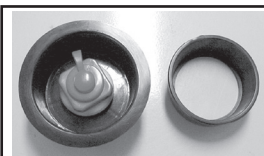

NOTICE: When initially unpacked, the recessed speed valve on this item will have a protective ring within the recessed portion of the valve base. Remove this protective ring before inflating and using the trampoline. The ring is only used to protect the valve during packaging and shipping and serves no functional purpose once unpacked and in use.

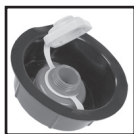

Recessed Speed Valve - Secure the speed valve by firmly screwing the bottom portion of the valve into the base. To inflate, unscrew only the cap (top portion) of the valve. Using the hose from your inflator, inflate through the top opening of the valve. When fully inflated, replace the cap by screwing it clockwise onto the bottom portion of the valve. To deflate, unscrew the bottom portion of the valve from the base in a counter-clockwise direction.



Speed Safety Valve: Pulls out for fast inflation/deflation, then can be pushed in flush with the tube. Secure the valve by firmly fastening the bottom portion of the valve into the base. To inflate, open cap or top portion of the valve. Using the hose from your inflator, inflate through the top opening of the valve.



Photo "A" shows a tube severely underinflated. Note how the adult standing on the product sinks down into the tube. Under inflation will not allow the trampoline to provide maximum bounce and puts undo stress on the unit and its seams, which could cause the tube to rupture.



Photo "B" shows a tube properly inflated. Note how the adult standing on the product barely sinks down into the tube. When properly inflated, all features of the product would remain sturdy and perform better, prolonging the life of the unit.

WARRANTY POLICY:

Kwik Tek warrants, to the original purchaser only, that their high performance products, when used for normal recreational purposes, are free from defects in material and workmanship for a period of ninety (90) days from the date of purchase. This warranty excludes products for rental, for hire, and other uses not considered normal recreational purposes. Kwik Tek will not be held liable for incidental or consequential damages.

THE KWIK TEK WARRANTY DOES NOT COVER:

- Products without the KT Stamp, Kwik Tek Warranty Label, or Kwik Tek embossing on them
- Failures caused by over-inflation and under-inflation
- Snags, tears, cuts and punctures obtained during normal use
- Fading from exposure to sunlight or weathering
- Misuse, abuse and neglect
- Improper storage

For warranty issues call 800-624-1297. You may also send us an email at kwiktek@airhead.com. Please have all information below ready when you call. We are unable to warranty a product without all pertinent information. Kwik Tek will make the final warranty determination which may require product inspection and/or photos of the product which clearly show defect(s).

IN ORDER TO PROCESS YOUR WARRANTY REQUEST, WE REQUIRE THE FOLLOWING THREE ITEMS:

- 1.) Sales receipt with date of purchase.
- 2.) 14-18 digit code with dashes in it (found printed on the unit below the warning on the tube or near the valve.)
- 3.) Photo showing KT stamp on product, Kwik Tek Warranty Label (found on underside of nylon valve flap) and/or Kwik Tek embossing (found on the tube near the base of the valve.)

***YOUR WARRANTY REQUEST CAN NOT BE PROCESSED UNLESS YOU PROVIDE THE INFORMATION REQUIRED ABOVE.**

REPLACEMENT PARTS

If your product is out of warranty, you may be able to purchase replacement parts from our service department by contacting them directly at 800-624-1297.

Replacement parts are shipped within 72 business hours of warranty verification. This warranty is only valid in USA and Canada. If you have questions about this product, replacement parts, or locating a dealer in your area, contact us at:

Kwik Tek, Inc.
12000 E. 45th Avenue Unit 104
Denver, CO 80239
Toll Free: 800-624-1297
Phone: 303-733-3722
Fax: 303-733-8007
Email: kwiktek@airhead.com

Prior authorization is required for returned merchandise. No credit will be given for a product that is sent back without prior authorization from Kwik Tek, Inc. Kwik Tek will not be held responsible for lost or improperly shipped items if a return number is not obtained in advance. After receiving an authorization number, please ship parts as instructed to the following address.

Kwik Tek, Inc. Return Center
12000 E. 45th Avenue Unit 106
Denver, CO 80239
(Please label package with RMA #)

AVERTISSEMENT

Pour minimiser les risques de blessure grave ou mortelle, nous vous invitons à respecter les règles suivantes :

- Lisez attentivement le mode d'emploi avant d'utiliser le FUNSTATION Sportsstuff.
- Ce produit ne doit être utilisé que par une seule personne à la fois. Le risque de blessure augmente si ce produit est utilisé par plus d'une personne à la fois.
- Ce produit ne doit pas être utilisé par des enfants de moins de six ans. Ce produit ne doit jamais être utilisé par des enfants, sauf si un adulte est présent pour les superviser.
- Veillez à ce que le produit soit utilisé sous la surveillance attentive d'un adulte, par des personnes qui comprennent le fonctionnement du produit et savent l'utiliser.
- N'utilisez pas ce produit s'il est endommagé ou s'il présente une fuite d'air.
- N'utilisez pas ce produit après avoir pris des substances affectant votre jugement ou bu de l'alcool.
- N'utilisez ce produit que dans l'eau. Ne l'utilisez qu'à une profondeur d'au moins huit pieds (2,44 mètres) et à une distance de sécurité des bateaux et embarcations personnelles, des docks, des pilotis, des ponts et autres objets dangereux.
- Retirez les débris et les obstructions sous le produit avant de l'utiliser.
- Ne l'utilisez pas dans des eaux dangereuses.
- N'utilisez pas ce produit dans des piscines.
- Ne remorquez pas ce produit si une personne se trouve dessus! Ce produit peut UNIQUEMENT être remorqué dans l'eau jusqu'à un certain emplacement sans dépasser une vitesse de 5 miles par heure (environ 8 km/h).
- Ce n'est pas un accessoire de sauvetage.
- N'utilisez pas ce produit sur le sol ou sur une surface abrasive et ne le faites pas glisser sur ce type de surface.