

Fig. 1





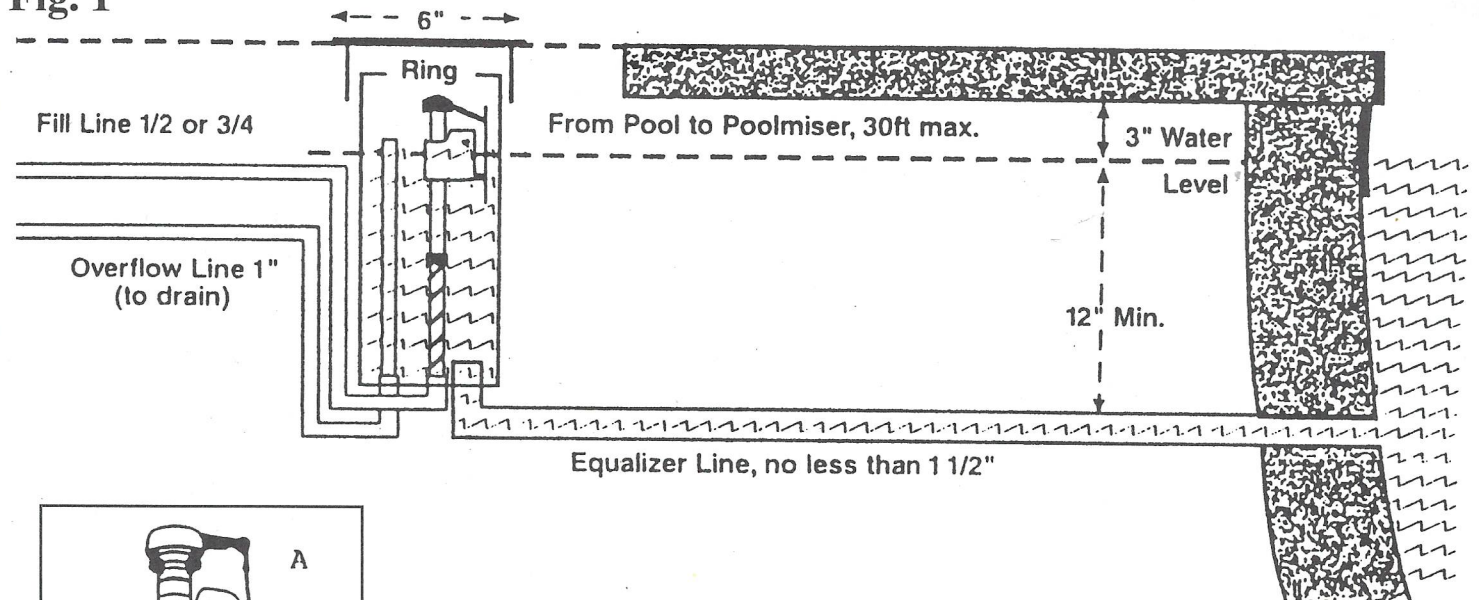


Fig. 2 (CLEARING SAND AND RUST FROM VALVE)

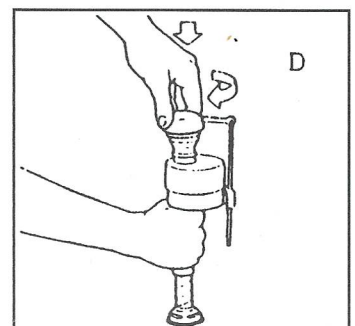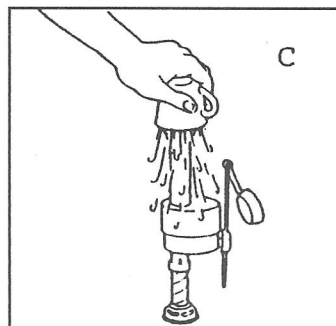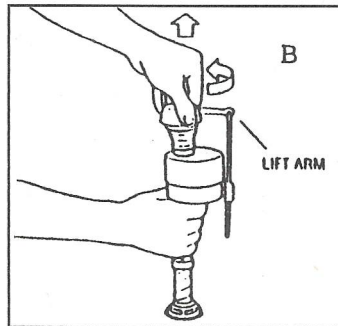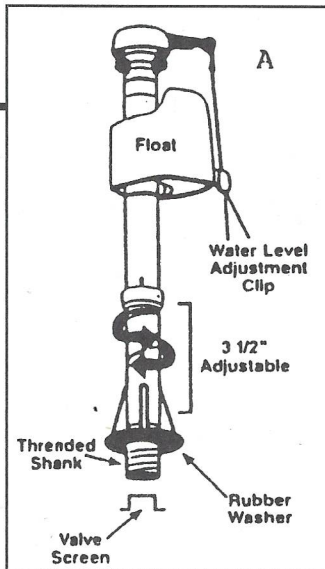

Clear sand and rust from system: Remove valve TOP by tilting arm and rotating top 1/8 turn counterclockwise. While holding a container over the uncapped VALVE to prevent splashing, turn water supply on and off a few times. Replace TOP by engaging lugs and rotating 1/8 turn clockwise. MAKE CERTAIN TOP IS TURNED TO THE LOCKED POSITION. VALVE MAY NOT TURN ON IF TOP IS NOT FULLY TO THE LOCKED POSITION.

PACKING LIST:

- 1 = Tank
- 1 = Ring Lid
- 1 = Valve
- 1 = 1" x 10" Overflow PVC Pipe
- 1 = Instruction Sheet w/pkg.
of 3 screws, 1 filter, 1 washer

WARRANTY

POOLMISER WILL WARRANTY THAT THE TANK, RING AND LID WILL BE FREE FROM DEFECTS AT THE TIME OF SHIPMENT. INSPECT CAREFULLY BEFORE YOU INSTALL THEM. THE FLUIDMASTER VALVE HAS A MANUFACTURER'S WARRANTY TO BE FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP FOR A PERIOD OF THREE YEARS.

FILL IN INFORMATION BELOW; AFFIX POSTAGE AND MAIL TODAY

CUT HERE