

EMERGENCY STOP PUSH BUTTON



USER MANUAL

COMMERCIAL | RESIDENTIAL



701 S Dupont Ave. Ontario CA 92337
theoutdoorplus.com
909.460.5579



SAFETY	3
SPECIFICATIONS	5
WIRING & INSTALLATION	7
OPERATING INSTRUCTIONS	10
TROUBLESHOOTING	11
CONTACT	12

**THIS IS A SAFETY ALERT SYMBOL**

When you see this symbol on the fire feature or manual, look for one of the following signal word panels alerting you to the potential for personal injury, death, or major property damage.

**WARNING**

FOR OUTDOOR USE ONLY. Installation and service must be performed by a qualified installer, service agency, or qualified electrician.

**WARNING**

Before installing, disconnect the system and device from power supply.

**WARNING**

Ensure the Emergency Stop Push Button is installed at a safe distance **AWAY** from the Fire Feature. To avoid potential hazards, the button should be installed at least 10 feet (3 meters) away from the Fire Feature.

**CAUTION**

IMPROPER USE. Use this equipment only for its intended purpose. Misuse or modification of the equipment may result in injury or damage to the equipment.

**WARNING**

The Emergency Stop Push Button must not be bypassed, removed, or disabled.

**WARNING**

The switching process may only be triggered by suitable actuators which are safely connected to the contact element.

**WARNING**

It is the installer's responsibility to ensure a safe installation and to educate the end user as to proper operation.

**WARNING**

The Emergency Stop Push Button must not be used as a substitute for protective measures or other safety functions. The Button should be added as an additional safety measure.

**WARNING**

The Emergency Stop function must not impair the effectiveness of safety functions on safety equipment.

**WARNING**

It is the installer's responsibility to ensure that the Emergency Stop Push Button complies with the required safety category in combination with the control.

**WARNING**


If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

**WARNING**

NEVER leave the Fire Feature unattended.

SPECIFICATIONS

PART NUMBER OPT-ESTOP

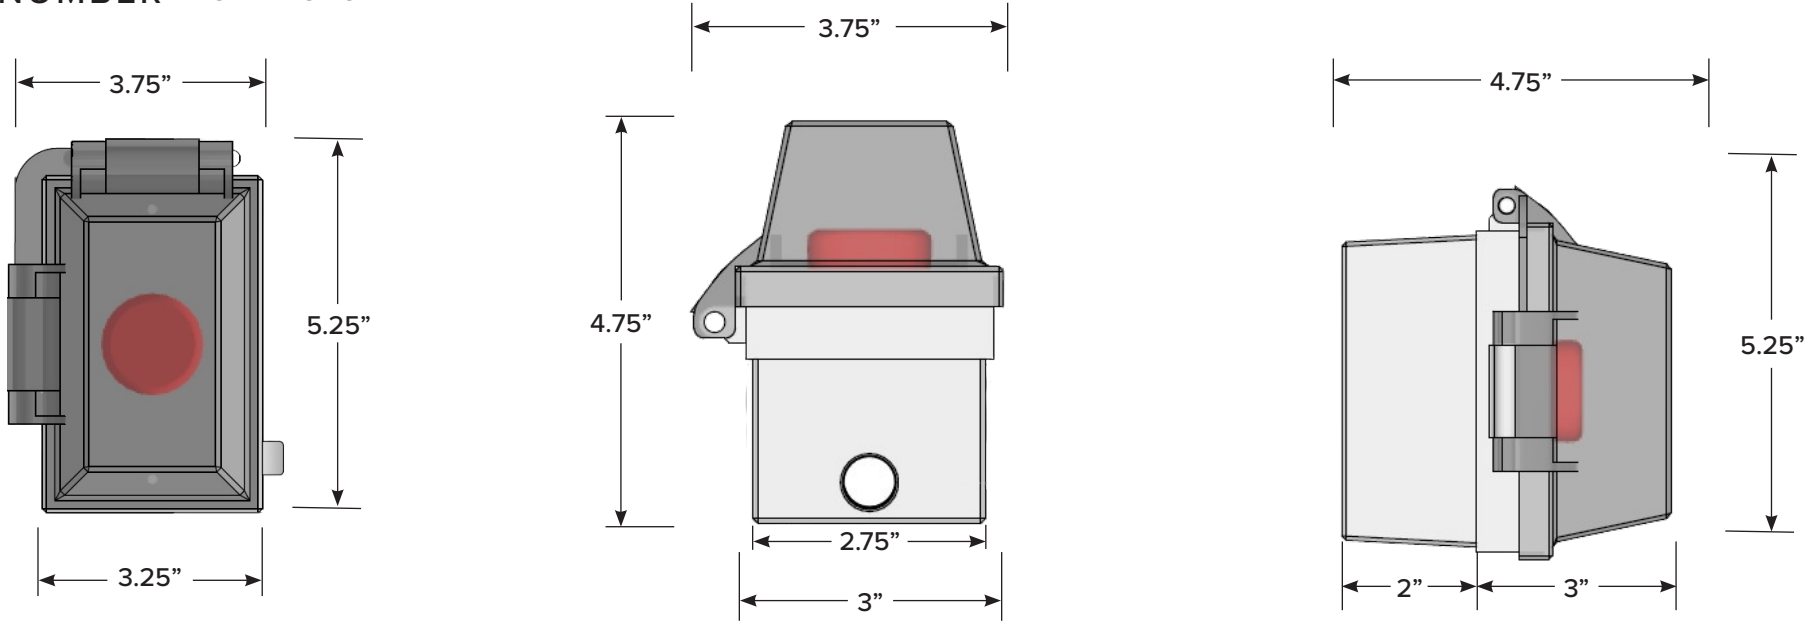


FRONT VIEW

BOTTOM VIEW

LEFT-SIDE VIEW

PART NUMBER OPT-ESTOPKEY

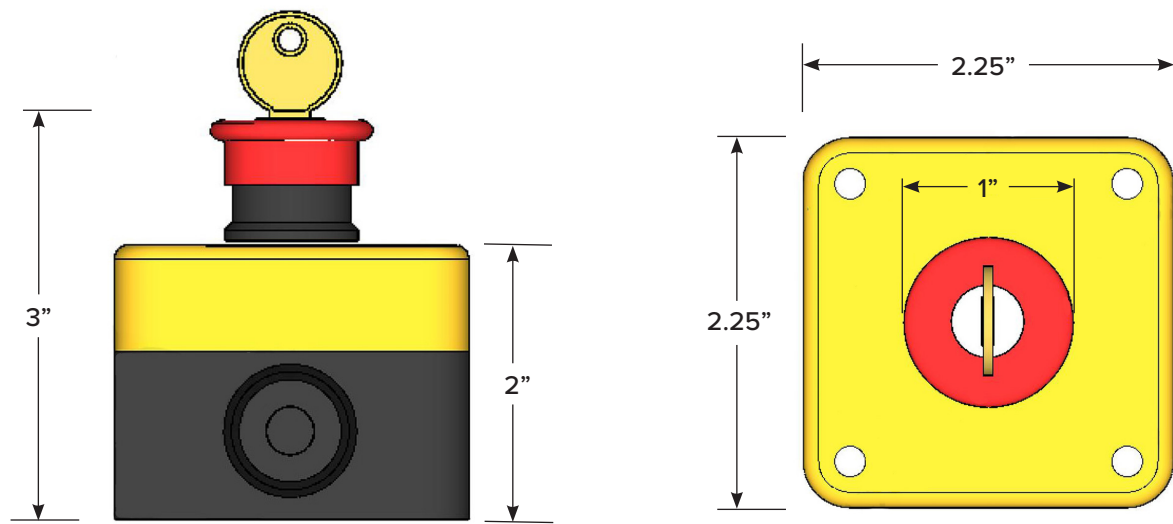

FRONT VIEW

TOP VIEW

SPECIFICATIONS

Mechanical Durability	1,000,000 Cycles
Rated Current (Ith)	10 A
Resistance	<= 25 mOhm
Impulse Withstand Voltage	6 kV
Vibration Resistance	15 G (f=10 Hz to 500 Hz)
Shock Resistance	100 G
Overvoltage Category	Class II
Pollution Degree	3
Rated Insulation	600 V
Ambient Temperature For Operation	-25° to 70° C / -13° to 158° F
Suited for 110V Only	
2x Openings for Conduit (1/2")	
To access terminals, remove the electrical box on the rear of the unit. Remove the screw on the face of the unit to remove the electrical box. This unit is only compatible with 110VAC.	



WARNING

Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.



WARNING

Do not obstruct the emergency stop button with equipment or furniture. Keep the area around the button clear for immediate access.



WARNING

The Emergency Stop Button should only be used in emergencies. Misuse may result in equipment damage or operational disruptions.



WARNING

Inspect the Emergency Stop Button regularly to ensure it is functioning correctly.


USING A SAFETY TOWER




SAFETY
TOWER
INFO

NOTE


The Emergency Stop Push Button is recommended to be installed between 10-20 feet away from the feature in a clearly visible location.

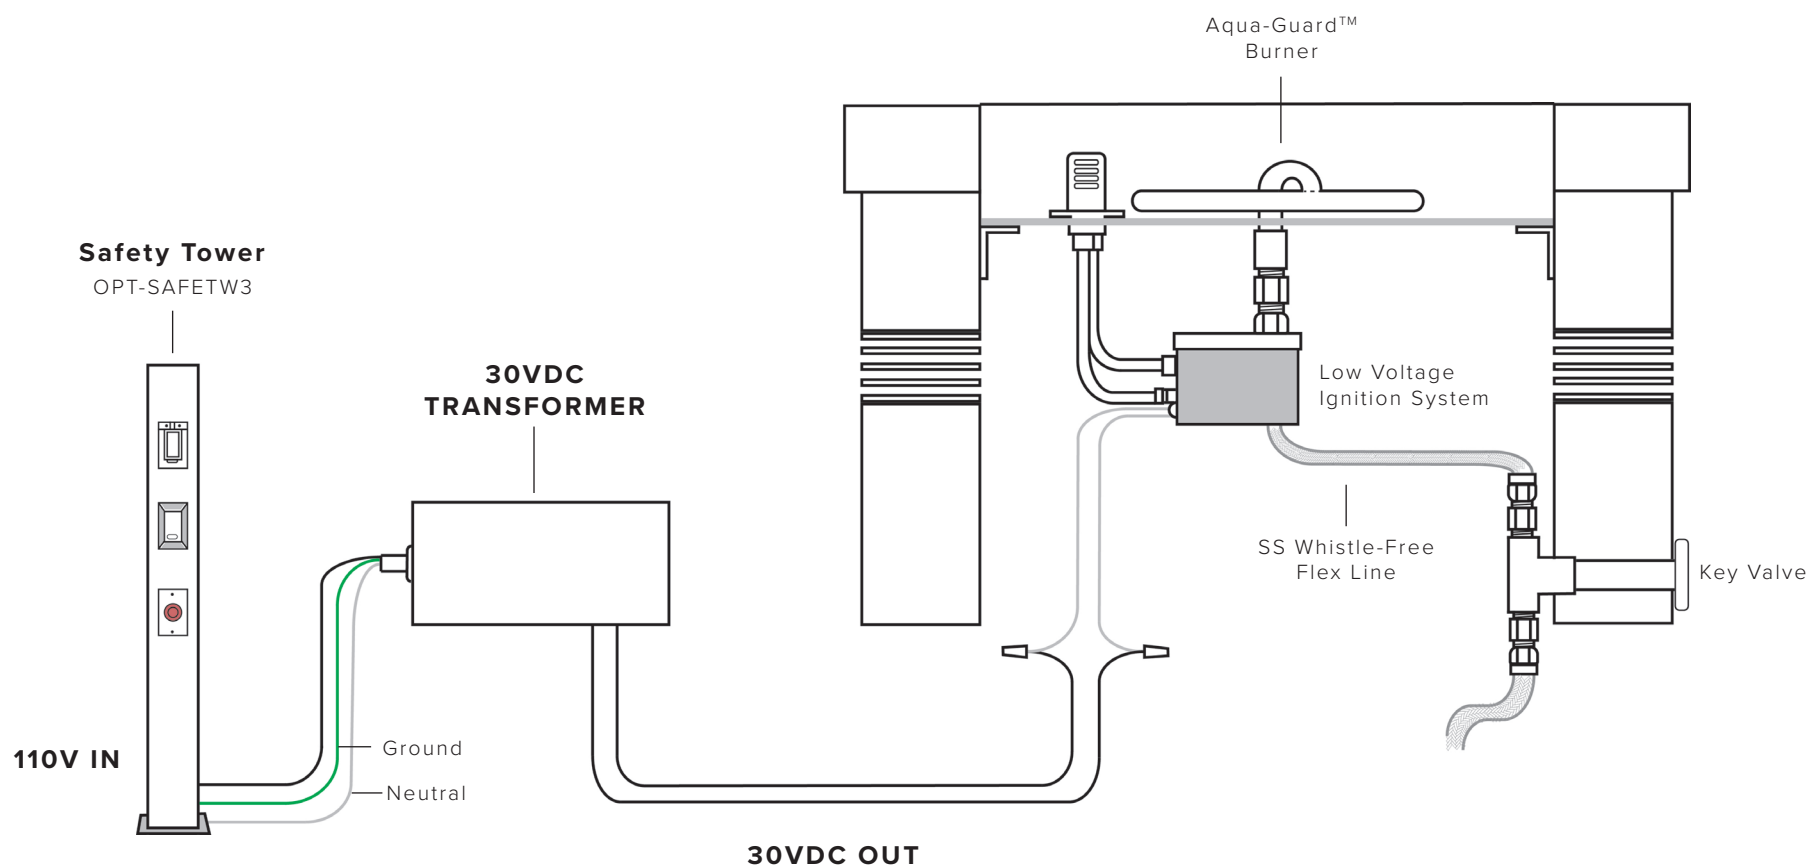

USING A DIAL TIMER & E-STOP

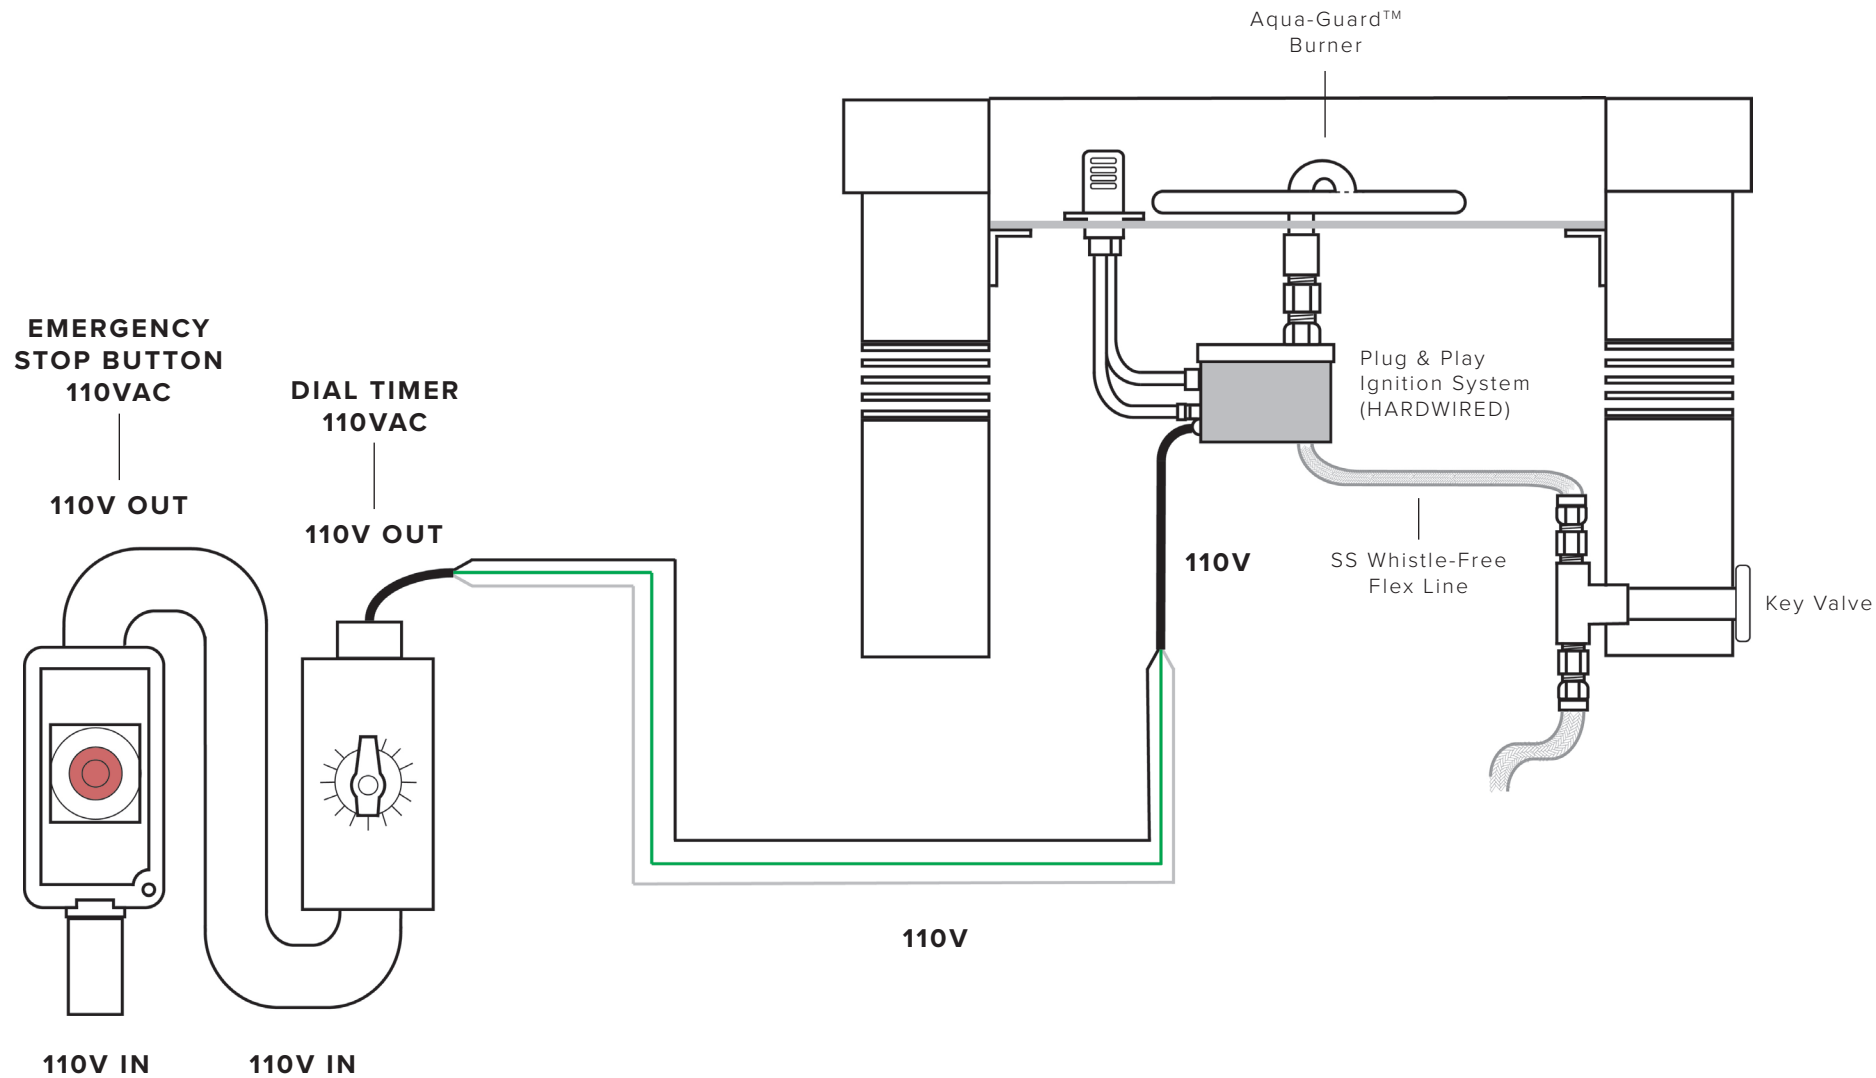

USING A GFCI OUTLET, DIAL TIMER, & E-STOP

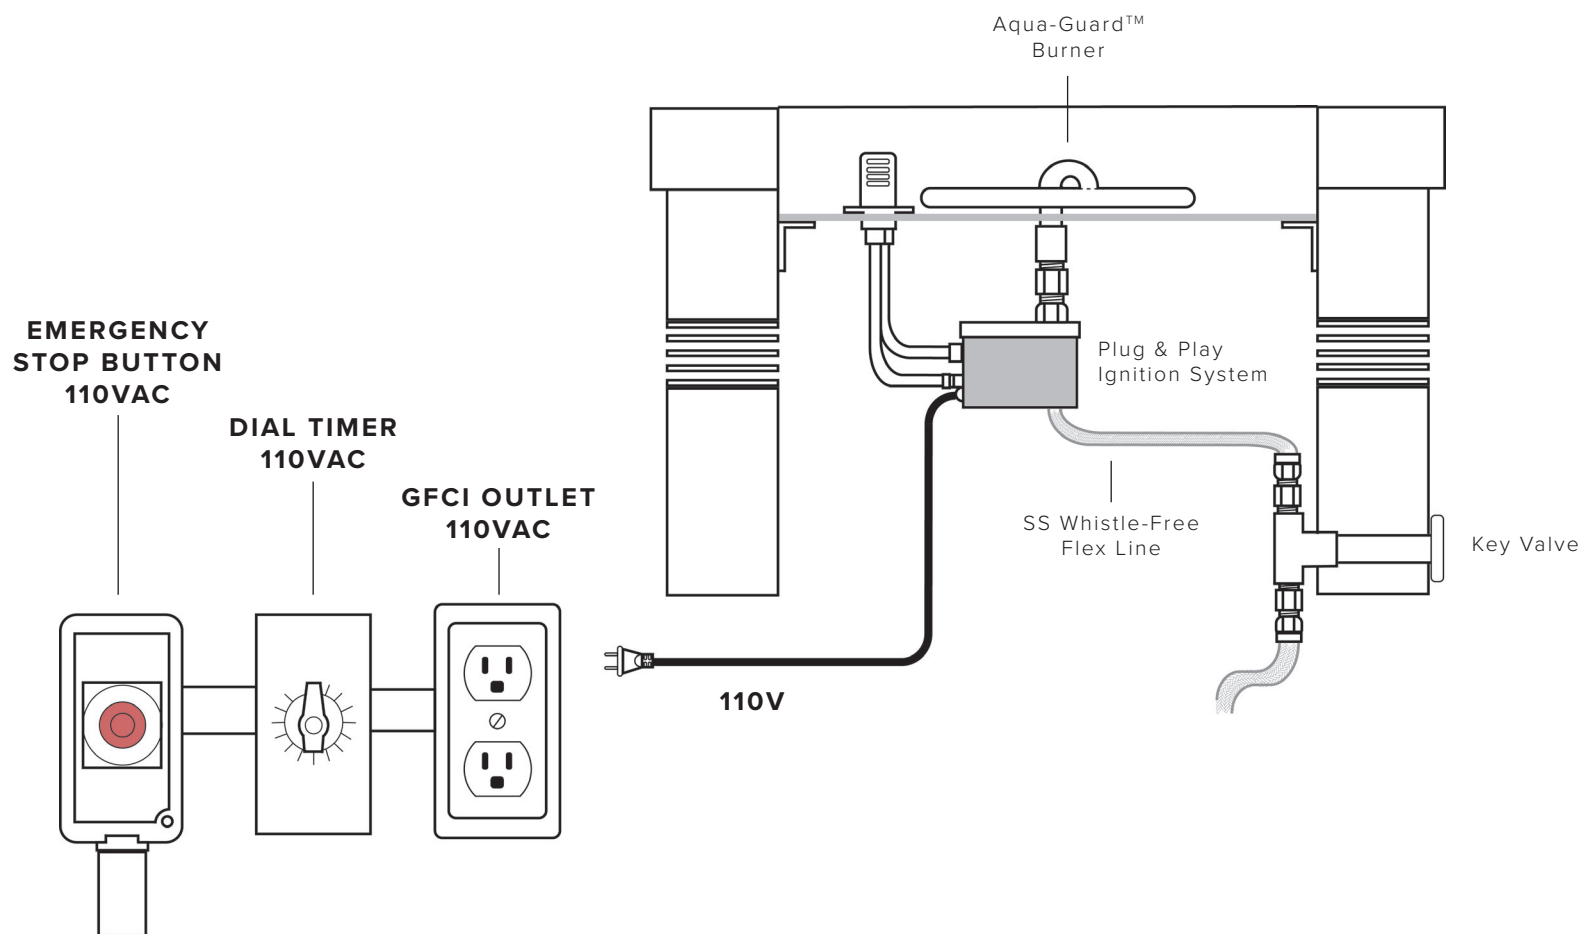

WARNING

Thoroughly test the Emergency Stop Button before operating your outdoor feature. Test the connection to your outdoor feature to ensure it operates as intended.

EMERGENCY STOP PUSH BUTTON

1. Activation:

- In an emergency, press the red emergency stop button firmly.
- The Fire Feature will immediately cease operation to prevent accidents or hazards.

2. Resetting:

- Rotate the button clockwise until it pops back out.
- Ensure it is fully reset before restarting the Fire Feature.

NOTE

Only authorized personnel should have access to the keys.

Ensure the button is fully reset before restarting the equipment.

Ensure the Emergency Stop Push Button is installed at a safe distance **AWAY** from the Fire Feature.

EMERGENCY STOP PUSH BUTTON WITH KEY

1. Activation:

- In an emergency, press and turn the key to activate the emergency stop function.
- The Fire Feature will immediately cease operation to prevent accidents or hazards.

2. Resetting:

- Turn the key to the designated reset position (the button should pop back out).
- Remove the key and store it in a secure location.

Problem	Solution
The Emergency Stop Button is not working at all.	Check the wiring connecting the Emergency Stop Button to the Fire Feature. Ensure that the wires are securely connected and not frayed or damaged.
The Emergency Stop Button is stuck in the “pressed” position.	Check the physical condition of the Emergency Stop Button. Ensure that the button is not physically damaged, or obstructed by foreign material.
	Apply a small amount of lubricant to the surrounding areas of the Emergency Stop Button. Press and pull the button gently to see if it loosens.
	If the key or button remains stuck, contact the The Outdoor Plus for technical support and assistance.
The Emergency Stop Button activates unexpectedly.	Ensure the button is not being accidentally bumped or pressed. Check for any mechanical damage or wear in the button assembly.
	Confirm that the button is securely installed and not loose or misaligned. Adjust the installation if necessary to prevent unintended activation.



PROUDLY DESIGNED &
MADE IN THE **USA**

 **THE OUTDOOR PLUS**
USA MANUFACTURER OF FIRE & WATER PRODUCTS

701 S DUPONT AVE
ONTARIO, CA 91761
(909) 460 - 5579

theoutdoorplus.com

