

SCAG **POWER EQUIPMENT** ***ILLUSTRATED PARTS*** ***MANUAL***

V-RIDE[®] XL

Model:

**SVRXL-52V-38FX-EFI
SVRXL-52V-38FX-EFI-NFT
SVRXL-52V-40BV-EFI
SVRXL-61V-38CV-EFI
SVRXL-61V-38FX-EFI
SVRXL-61V-38FX-EFI-NFT
SVRXL-61V-40BV-EFI
SVRXL-72V-38FX-EFI
SVRXL-72V-40BV-EFI**



The specific models that this book covers are listed on the inside cover.

Table of Contents

SECTION 1 - ILLUSTRATED PARTS LIST	2
8.1 SCAG APPROVED ATTACHMENTS AND ACCESSORIES.	2
SVRXL - 52V, 61V, 72V CUTTER DECK	4
SVRXL CUTTER DECK CONTROLS	6
SVRXL SHEET METAL COMPONENTS	8
SVRXL STEERING CONTROLS	10
SVRXL FUEL SYSTEM	12
SVRXL HYDRAULICS AND ENGINE COMPONENTS	14
SVRXL ELECTRICAL SYSTEM	16
BDP-16A HYDRAULIC PUMP ASSEMBLY WITH COOLING FAN	18
REPLACEMENT DECALS AND INFORMATION PLATES	20
SVRXL ELECTRICAL SCHEMATIC - ELECTRIC START MODELS.....	21
SVRXL - KAWASAKI 38FX EFI ELECTRICAL SCHEMATIC	22
SVRXL - BRIGGS & STRATTON 40BV EFI ELECTRICAL SCHEMATIC	23

This manual covers the operating instructions and illustrated parts list for:		
SVRXL-52V-38FX-EFI	with a serial number of	070D00001 to 070D99999
SVRXL-52V-38FX-EFI-NFT	with a serial number of	189D00001 to 189D99999
SVRXL-52V-40BV-EFI	with a serial number of	071D00001 to 071D99999
SVRXL-61V-38CV-EFI	with a serial number of	072D00001 to 072D99999
SVRXL-61V-38FX-EFI	with a serial number of	073D00001 to 073D99999
SVRXL-61V-38FX-EFI-NFT	with a serial number of	190D00001 to 190D99999
SVRXL-61V-40BV-EFI	with a serial number of	074D00001 to 074D99999
SVRXL-72V-38FX-EFI	with a serial number of	075D00001 to 075D99999
SVRXL-72V-40BV-EFI	with a serial number of	076D00001 to 076D99999
Always use the entire serial number listed on the serial number tag when referring to this product.		

ILLUSTRATED PARTS LIST

8.1 SCAG APPROVED ATTACHMENTS AND ACCESSORIES.


Attachments and accessories manufactured by companies other than Scag Power Equipment are not approved for use on this machine.

Scag approved attachments and accessories:

<u>Accessories</u>	<u>P/N</u>	<u>Accessories</u>	<u>P/N</u>
<u>Grass Catchers</u>		<u>Scag Premium Lubricants</u>	
GC-SVRXL (V-Ride XL 2-Bag Catcher)	901Y	Chassis Grease	486257
- Install Kit 52GC-SVRXL (52)	901Z	Spindle Grease	486258
- Install Kit 61GC-SVRXL (61)	902A	20w50 Hydraulic System Oil (1 gal)	486254
		20w50 Hydraulic System Oil (1 qt)	486255
<u>Mulching Accessories</u>			
Mulch Plate (52)	9287		
Mulch Plate (61)	9288		
Mulch Plate (72)	920F		
Hurricane Plus Mulch System (52)	9284		
Hurricane Plus Mulch System (61)	9285		
Hurricane Plus Mulch System (72)	920E		
<u>Micellaneous</u>			
Blade Buddy	9212		
Chrome Wheel Cover - 12" (52/61/72 models)	920J		
LED Light Kit	923R		
Lawn Striper	926L		
Dual Wheel Kit	926K		
<u>Electric Operator-Controlled Discharge Chute</u>			
52V	926M		
61V	926N		
72V	926P		

ILLUSTRATED PARTS LIST

SVRXL - 52V, 61V, 72V CUTTER DECK

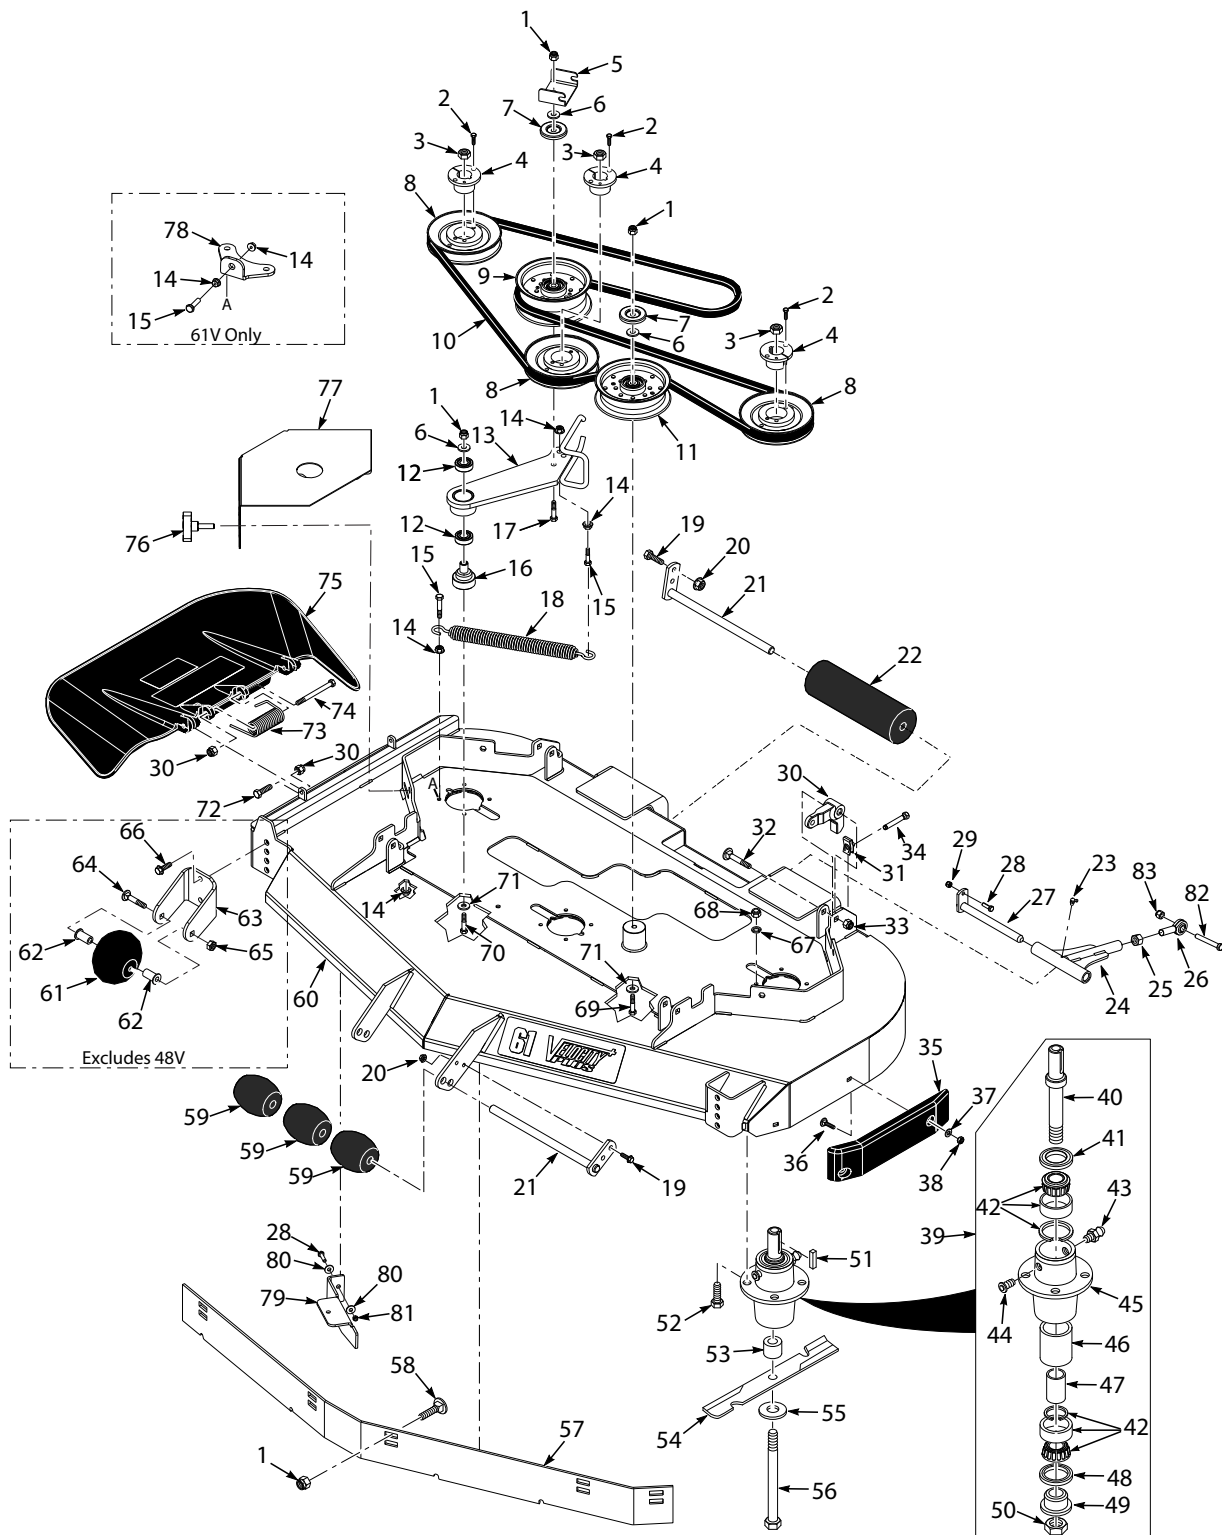


SVRXL - 52V, 61V, 72V CUTTER DECK

Ref. No.	Part No.	Description
1	04021-09	Nut, Elastic Stop 3/8-16
2	04001-172	Bolt, Hex Head 1/4-20 x 1" Gr.8
3	04020-09	Nut, 5/8-11
4	48926	Tapered Hub
5	424615	Bracket, Belt Guide
6	04043-04	Washer, Flat 3/8-.391 x .938 x .105 HD
7	424367	Dust Shield
8	487786	Pulley, 6.45" Dia. - 52V
	487787	Pulley, 7.5" Dia - 61V
	487788	Pulley, 8.75" Dia - 72V
9	483210	Pulley, 5" Idler
10	487789	Belt, Cutter Deck - 52V
	487790	Belt, Cutter Deck - 61V
	487791	Belt, Cutter Deck - 72V
11	483215	Pulley, 5" Idler
12	48224	Bearing
13	463609	Idler Arm Assy. - 52V (Incl. #12)
	463610	Idler Arm Assy. - 61V (Incl. #12)
	463611	Idler Arm Assy. - 72V (Incl. #12)
14	04019-04	Nut, Serrated Flange 3/8-16
15	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2" Gr.8
16	43681	Pivot, Idler
17	04001-62	Bolt, Hex Head 3/8-16 x 3-1/4"
18	484020	Spring
19	04001-09	Bolt, Hex Head 5/16-18 x1"
20	04117-01	Nut, Flange Elastic Stop 5/16-18
21	45944	Shaft Weldment
22	48038	Guide Roller
23	48114-08	Grease Fitting, 90 Degree
24	463552	Pusharm Assy, LH (Incl. #25, 26)
	463553	Pusharm Assy, RH (Incl. #25, 26)
25	04020-16	Nut, 5/18 - 18
26	48763	Rod End, 5/8 Male RH
27	451240	Shaft Weldment, Pusharm Mounting
28	04001-09	Bolt, Hex Head 5/16-18 x 1"
29	04021-10	Nut, Elastic Stop 5/16-18
30	485528	Lever, Deck Level
31	04110-03	U-Nut, 3/8-16
32	04003-42	Bolt, Carriage 7/16-14 x 2-1/4"
30	04021-11	Nut, Elastic Stop 7/16-14
34	04107-05	Bolt, Hex Head 3/8-16 x 2-1/2" Special Lock
35	483176	Pad, Wear
36	04003-12	Bolt, Carriage 5/16-18 x 3/4"
37	04040-04	Washer, Flat 5/16-.344 x .688 x .065
38	04021-04	Nut, Center Lock 5/16-18
39	461663	Spindle Assembly
40	43589	Spindle Shaft
41	481024	Seal, Cutter Spindle
42	481022	Bearing, Tapered

Ref. No.	Part No.	Description
43	48114-04	Grease Fitting
44	487661	Relief Fitting, Cutter Spindle
45	43644	Spindle Housing
46	43312	Spacer, Outside
47	43296	Spacer, Inside
48	481025	Seal, Cutter Spindle
49	43297	Spindle Bushing
50	481035	Nut, 1.06 - 18
51	04063-08	Key, 1/4 x 1/4 x 2"
52	04001-176	Bolt, Hex Head 5/16-18 x 1-3/4" Gr.8
53	43590	Spacer, Spindle Bottom
54	482878	Cutter Blade, 18" (52V)
	482881	Cutter Blade, 21" (61V)
	482882	Cutter Blade, 21" (72V)
55	04043-06	Washer, Flat 5/8-.688 x 1.75 x .134 HD
56	04001-41	Bolt, Hex Head 5/8-11 x 9-1/2"
57	424840	Baffle, Flange - 52V
	424841	Baffle, Flange - 61V
	424917	Baffle, Flange - 72V
58	04003-23	Bolt, Carriage 3/8-16 x 1"
59	482295	Wheel, Anti-Scalp
60	463601	Cutter Deck w/Decals - 52V
	463602	Cutter Deck w/Decals - 61V
	463603	Cutter Deck w/Decals - 72V
61	481632	Wheel, Anti-Scalp (Incl. #64)
62	487033-01	Bushing, Bronze
63	427865	Bracket, Anti-Scalp Wheel
64	04003-26	Bolt, Carriage 3/8-16 x 4"
65	04021-05	Nut, Center Lock 3/8-16
66	04017-27	Bolt, Hex Head Serrated Flange 3/8-16 x 1"
67	04030-03	Washer, Lock 5/16"
68	04021-22	Nut, Elastic Stop 5/16-18 Gr. 8
69	04001-47	Bolt, Hex Head 3/8-16 x 5"
70	04001-62	Bolt, Hex Head 3/8-16 x 3-1/4"
71	04041-38	Washer, Flat 3/8-.406 x 2.25 x .1875
72	04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
73	483378	Spring, Discharge Chute
74	04001-154	Bolt, Hex Head 5/16-18 x 4-3/4"
75	461845	Discharge Chute Assy. - 52V
	461846	Discharge Chute Assy. - 61V
	462132	Discharge Chute Assy. - 72V
76	481625-01	Knob w/Stud
	04110-03	U-Nut, 3/8-16 (not shown)
77	429689	Belt Cover, LH, RH- 52V
	429658	Belt Cover - LH, RH - 61V
	429681	Belt Cover, LH - 72V
	429692	Belt Cover, RH - 72V
78	427399	Anchor Bracket -
79	424677	Turbo Baffle - 52V
	424209	Turbo Baffle - 61V, 72V
80	04040-15	Washer, Flat 5/16-.375 x .875 x .083
81	04021-10	Nut, Elastic Stop 5/16-18
82	04021-13	Bolt, Hex Head 3/8 - 16 x 2.5"
83	04001-79	Nut, Elastic Stop 5/8 - 11

SVRXL CUTTER DECK CONTROLS

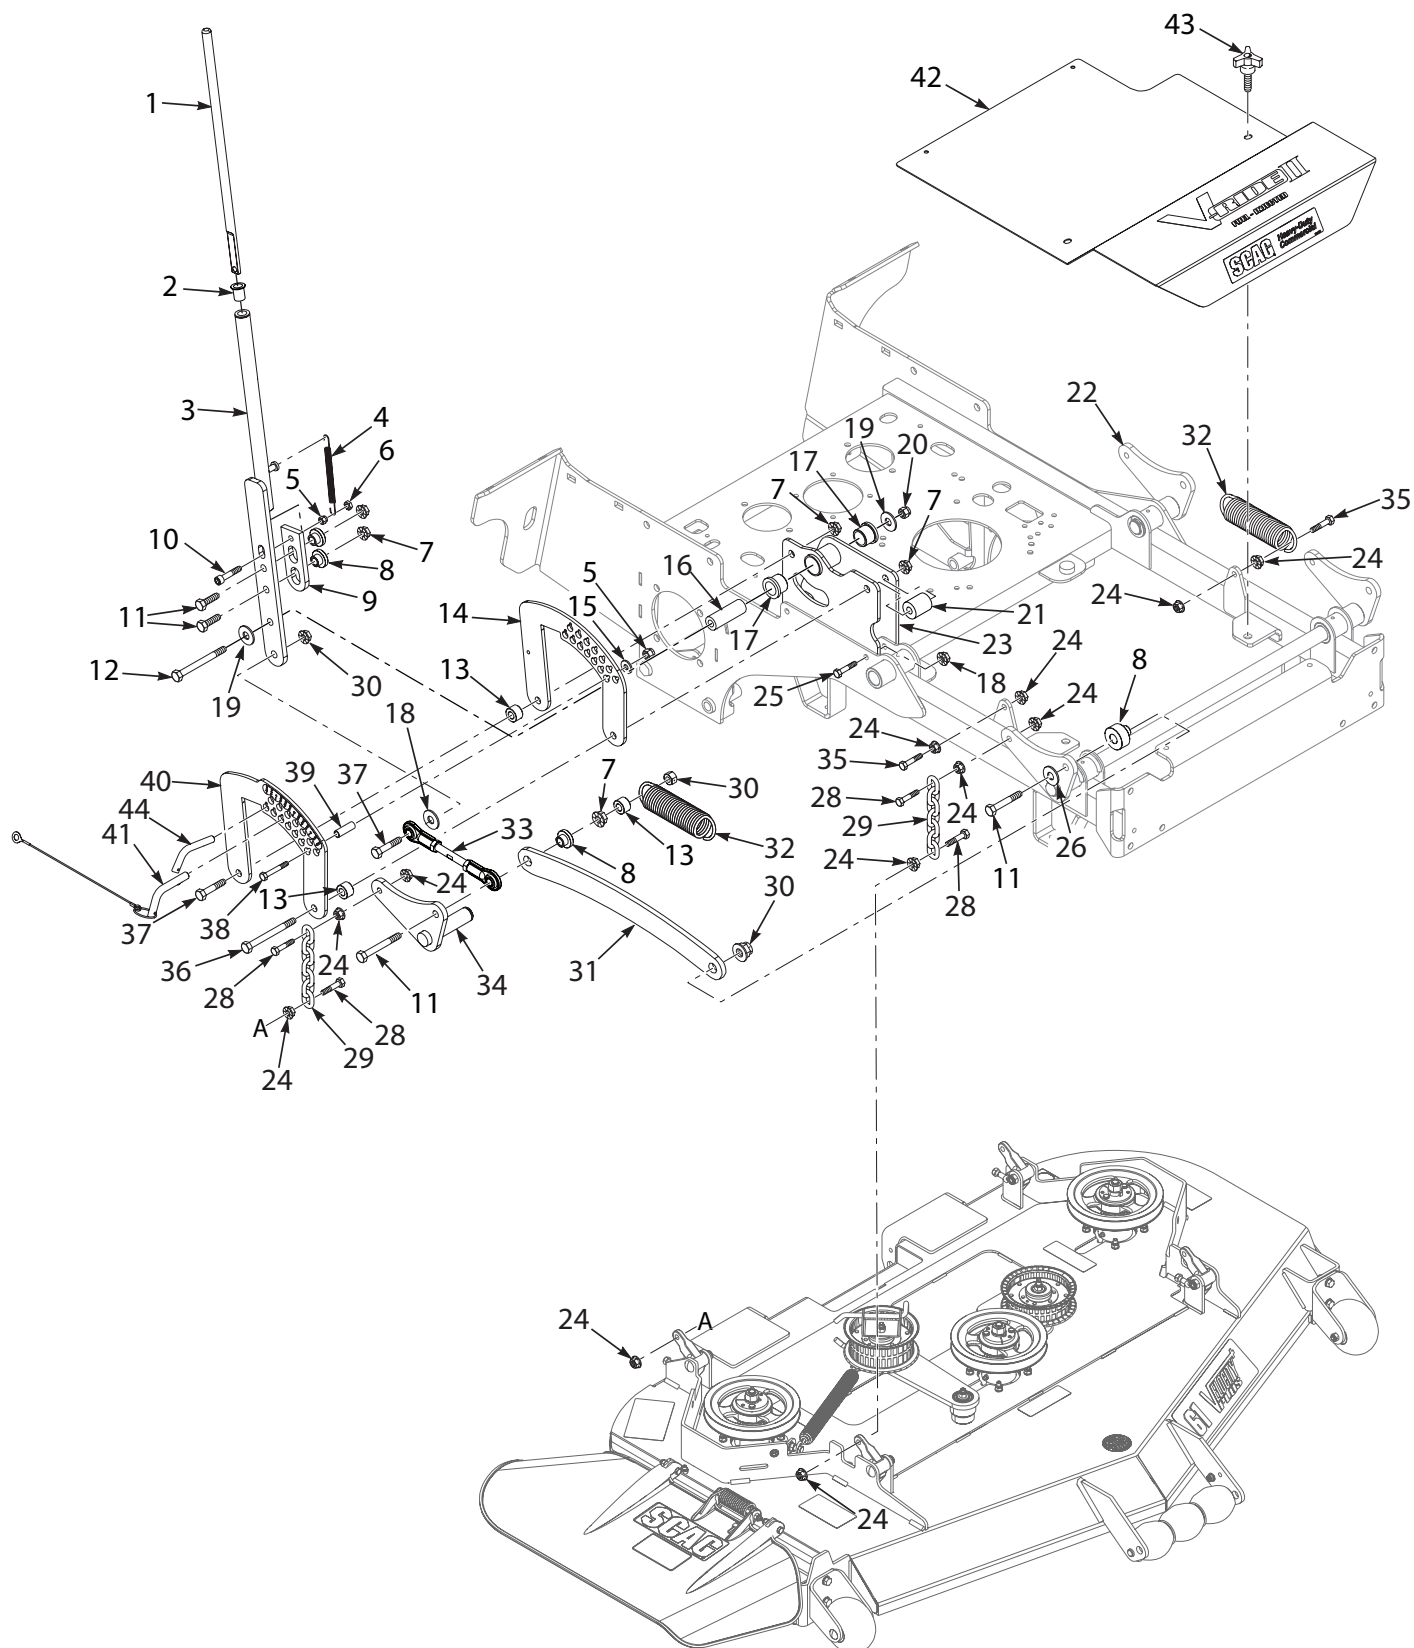


SVRXL CUTTER DECK CONTROLS

Ref. No.	Part No.	Description
1	431224	Rod, Actuator, Deck Latch
2	483453-14	Bearing, .625 ID
3	453257	Handle Weldment, Deck Latch
4	483600	Spring, Deck Latch
5	04021-09	Nut, Elastic Stop 3/8-16
6	04021-05	Nut, Center Lock 3/8-16
7	04019-06	Nut, Serrated Flange 1/2-13
8	431087	Bushing, Deck Lift
9	429732	Deck Latch, Outer
10	04015-41	Capscrew, Socket Head 3/8-16 x 1-3/4"
11	04001-183	Bolt, Hex Head 1/2-13 x 1-3/4"
12	04001-194	Bolt, Hex Head 1/2-13 x 4-1/4"
13	43806	Spacer, Deck Linkage
14	429582	Bracket, Deck Height
15	04041-07	Flatwasher, 3/8-.391 x .938 x .105
16	43872	Sleeve, Pivot
17	483453-03	Bearing
18	04117-02	Nut, Elastic Stop, 3/8-16
19	04043-08	Washer, Flat, 1/2-.562 x 1.375 x .109 HD
20	04021-07	Nut, Elastic Stop 1/2-13
21	431054	Spacer, Decklift Pivot
22	453258	Arm Weldment, LH
23	463561	Deck Lift Pivot Assy. (Incl. #18)

Ref. No.	Part No.	Description
24	04019-04	Nut, Serrated Flange 3/8-16
25	04001-19	Bolt, Hex Head 3/8-16 x 1"
26	04043-08	Washer, Flat, 1/2-.562 x 1.375 x .109 HD
27	04001-52	Bolt, Hex Head 1/2-13 x 2-1/2"
28	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
29	482628	Chain Assy. (INCL #25,29)
30	04117-04	Nut, Flange Elastic Stop 1/2-13
31	429442	Link, Deck Lift
32	481598	Spring, Deck Lift
33	487656	Linkage Assy., Deck Lift
	487657	Link, Deck Lift
	481765	Rod End RH
	481766	Rod End LH
	04020-27	Jam Nut, 1/2-20 UNF RH
	04020-28	Jam Nut, 1/2-20 UNF LH
34	427201	Arm Weldment, RH
35	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2" Gr.8
36	04001-87	Bolt, Hex Head 1/2-13 x 4"
37	04001-72	Bolt, Hex Head, 1/2-13 x 2"
38	04001-46	Bolt, Hex Head 3/8-16 2-1/4"
39	43668	Spacer
40	463600	Lift Assembly, Deck Height
41	485857	Pin Assy. w/Lanyard
42	494214	Belt Cover w/Decals
43	481625-01	Knob w/Stud
44	485172	Pin Weight Retention

SVRXL SHEET METAL COMPONENTS

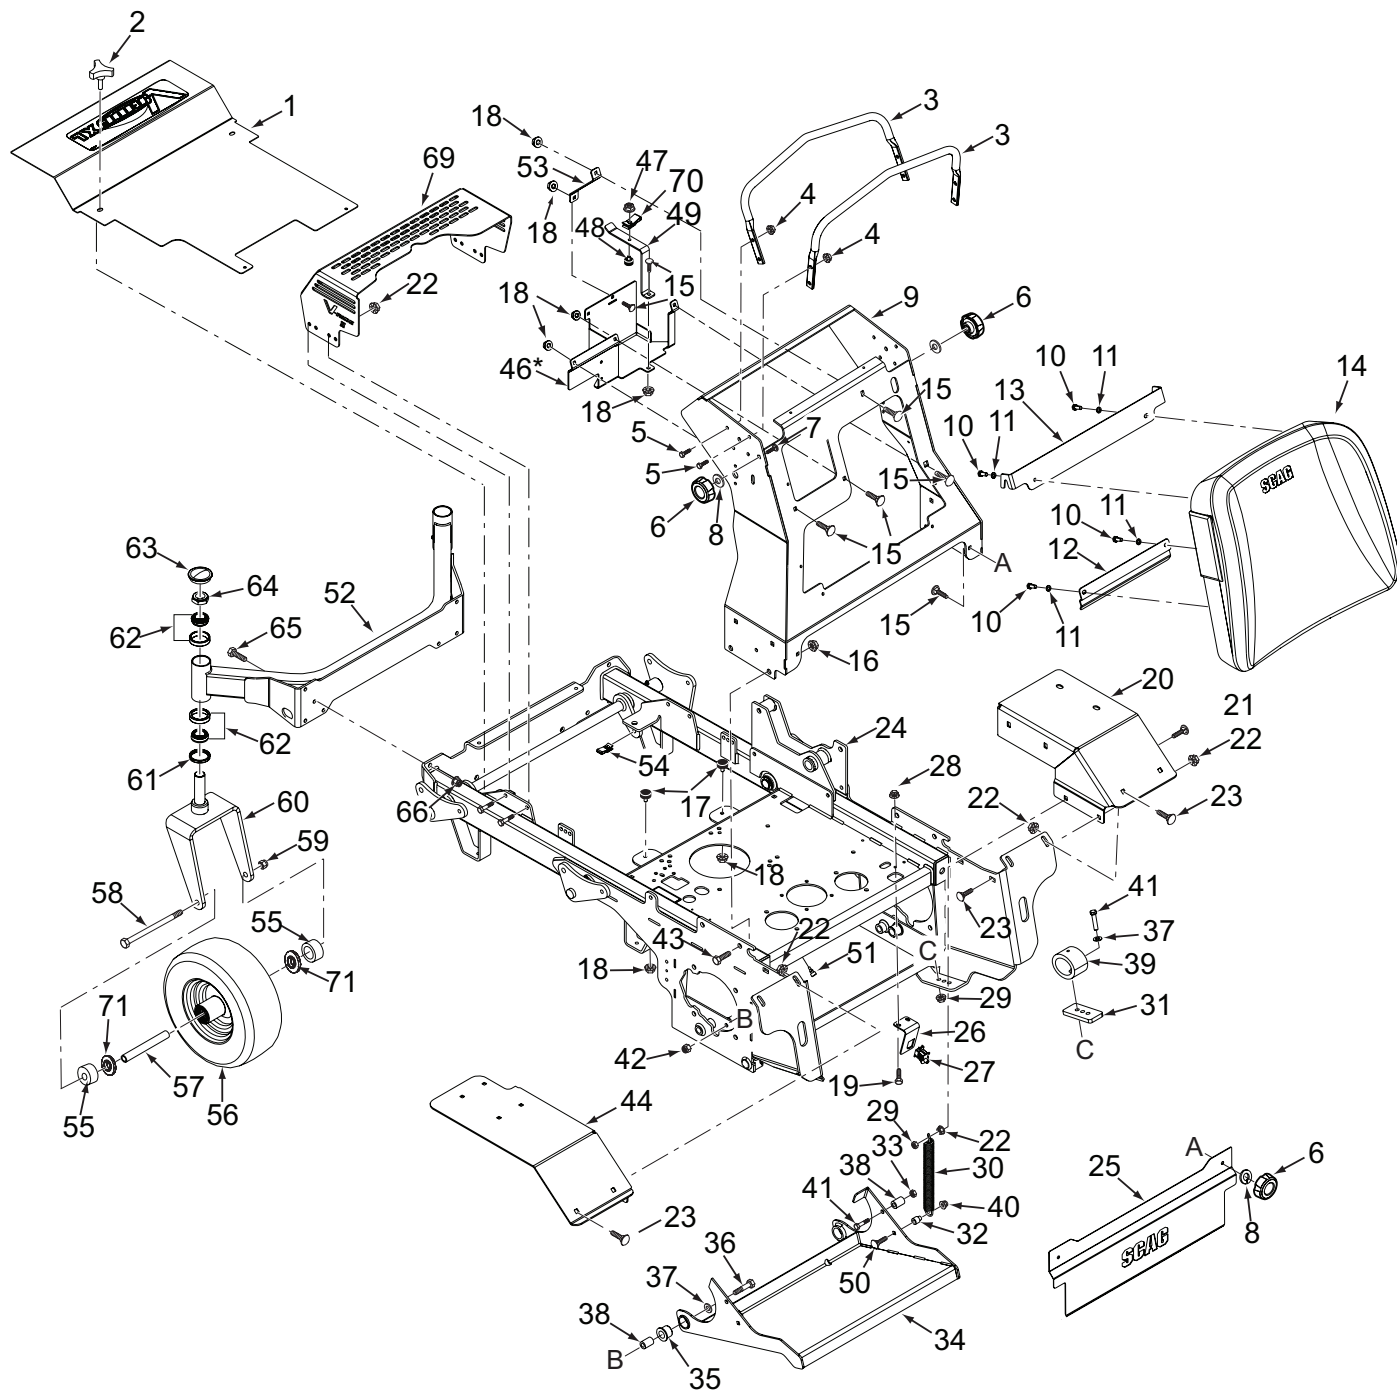

SVRXL SHEET METAL COMPONENTS

Ref. No.	Part No.	Description
1	494214	Belt Cover w/Decals
2	481625-01	Knob w/Stud
3	427189	Reference Bar
4	04019-03	Nut, Serrated Flange 5/16-18
5	04001-08	Bolt, Hex head 5/16-18 x 3/4"
6	481885-06	Knob, 5/16-18
7	04003-04	Bolt, Carriage 5/16-18 x 1"
8	04024-03	Nut, Push-On 5/16
9	453252	Handlebar Weldment
10	04001-08	Bolt, Hex head 5/16-18 x 3/4"
11	04030-03	Washer, Lock 5/16"
12	427292	Bracket, Knee Pad - Lower
13	427289	Bracket, Knee Pad - Upper
14	463291	Operator Pad Assy, SVRXL (INCL. 10,11,12,13)
15	04003-12	Bolt, Carriage 5/16-18 x 3/4"
16	04112-05	Nut, Spiral Lock 1/2-13
17	481284	Rubber Bumper
18	04019-03	Nut, Serrated Flange 5/16-18
19	04001-01	Bolt, Hex Head 1/4-20 x 3/4"
20	429603	Fender, RH
21	04003-05	Bolt, Carriage 3/8-16 x 1-1/2"
22	04019-04	Nut, Serrated Flange 3/8-16
23	04003-31	Bolt, Carriage 3/8-16 x 3/4"
24	463367	Mainframe Assy. - SVRXL
25	429654	Guard, Foot -SVRXL
26	428491	Switch Bracket, OPC Switch
27	48717	Switch, OPC - SVRXL
28	04019-02	Nut, Serrated Flange 1/4-20
29	04117-02	Nut, Flange Elastic Stop 3/8-16
30	48755	Spring
31	428526	Riser, Bumper
32	43602	Spacer
33	04021-05	Nut, Elastic Stop 3/8-18
34	463562	Footplate Assy, SVRXL (Incl. #35)
35	486834	Bearing
36	04001-45	Bolt, Hex Head 3/8-16 x 2"
37	04041-07	Washer, Flat 3/8-.391 x .938 x .105
38	43572	Spacer
39	486758	Isolator, Footplate
40	04117-01	Locknut w/flange Elastic Stop

Ref. No.	Part No.	Description
41	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
42	04021-09	Nut, Elastic Stop 3/8-16
43	04017-36	Bolt, Hex Head Serrated Flange 1/2-13 x 1"
44	429602	Fender, LH
45	04110-01	U-Nut 1/4 - 20
46	429835	Battery Box, Tray
47	04019-03	Nut, Serrated Flange 5/16-18
48	481284	Bumper, Rubber
49	429836	Strap, Battery Box
50	04003-38	Carriage Bolt 5/16-18 x 1-1/2"
51	485846	Bumper, Plug
52	453440	Caster Support Weldment (52)
	453441	Caster Support Weldment (61)
	453442	Caster Support Weldment (72)
53	429837	Support Strap, Battery Box
54	04110-04	U-Nut 3/8-16
55	487686	Grass Shield, Caster
56	487924	Caster Wheel Assy., 13 X 6.5-6
57	487684	Spanner, Caster Wheel
58	04001-134	Bolt, Hex Head 1/2-13 x 7-1/2" (52)
	04001-167	Bolt, Hex Head 1/2-13 x 9-1/2" (61)
59	04021-07	Nut, Elastic Stop 1/2-13
60	453110	Yoke Weldment (52, 61, 72)
61	481025	Seal, 2" x 1.625 Bore
62	48668	Bearing
63	484195	Cap, Grease
64	04021-20	Nut, Elastic Stop 1" - 14 Jam
65	04001-28	Bolt, Hex Head 7/16-14 x 1-1/4"
66	04117-05	Nut, Flange Elastic Stop 7/16-14
67	04110-04	U-Nut, 3/8-16
68	04003-12	Bolt, Carriage 5/16-18 x 3/4"
69	429649	Heat Shield Muffler
70	48030-11	Cable Clamp
71	487685	Bearing, Caster

This technical drawing is an exploded view of a mechanical assembly, likely a piece of industrial equipment. The central component is a rectangular housing (35) with a circular fan or filter element (36) inside. Various parts are shown in their relative positions, with dashed lines indicating the assembly sequence and alignment. The parts are numbered as follows:

- 1: Top frame rail
- 2: Screws/bushings for the top frame
- 3: Mounting bracket
- 4: Pin/bushing
- 5: Hose/pipe
- 6: Elbow fitting
- 7, 8, 9, 10, 11, 14: Various fittings and screws
- 12, 13, 15: Fittings and connectors
- 16: Long vertical pipe
- 17, 18: Fittings and connectors at the bottom
- 19: Flange/plate
- 20, 21, 22: Base plate and mounting brackets
- 23, 24, 25: Screws and bushings
- 26, 27, 28: Screws and bushings for the side panel
- 29: Lever or handle
- 30, 31, 32: Components of the lever assembly
- 33, 34, 40, 41: Fittings and screws for the top left
- 36, 37: Fan/filter element and its frame
- 38, 39: Internal components of the housing
- 42, 43: Screws and bushings for the side panel
- 44, 45, 46, 47: Various fittings, screws, and internal components

SVRXL STEERING CONTROLS

Ref. No.	Part No.	Description
1	427189	Reference Bar
2	04019-03	Nut, Serrated Flange 5/16-18
3	483504	Bearing
4	04001-62	Bolt, Hex Head 3/8-16 x 3-1/4"
5	04001-01	Bolt, Hex Head 1/4-20 x 3/4"
6	462912	Handlebar Assy., LH (Incl.# 7, 8)
	462913	Handlebar Assy., RH (Incl. #7, 8)
	484092	Grip, Control Lever
7	43600	Spacer, Bearing
8	48224	Bearing
9	04019-04	Nut, Serrated Flange 3/8-16
10	04001-45	Bolt, Hex Head 3/8-16 x 2"
11	431024	Spacer, Controls
12	04043-04	Washer, Flat 3/8-.391 x .938 x .105 HD
13	04021-09	Nut, Elastic Stop 3/8-16
14	04001-10	Bolt, Hex Head 5/16-18 x 1-1/4"
15	04021-10	Nut, Elastic Stop 5/16-18
16	487784	Linkage Assy., Steering
	487785	Link, Steering
	482072	Rod End, 5/16-24 RH
	484073	Rod End, 5/16-20 LH
	04020-30	Jam Nut, 5/16-20 UNF LH
	04020-31	Jam Nut, 5/16-20 UNF RH
17	04001-17	Screw, Hex Head Socket, 5/16-18 x 1" (32/36)
18	43976	Spacer
19	452842	Brake Paddle Weldment, RH
20	04003-23	Bolt, Carriage 3/8-16 x 1"
21	453253	Bellcrank Weldment, Brake

Ref. No.	Part No.	Description
22	452841	Brake Paddle Weldment, LH
23	04001-32	Bolt Hex Head 3/8-16 x 1-1/4"
24	04117-02	Nut, Flange Elastic Stop 3/8-16
25	48100-30	Bushing, Oilite
26	04117-03	Nut, Flange Elastic Stop 1/4-20
27	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
28	429754	Link, Brake Engage
29	463265	Brake Lever Assy. - SVRXL (Incl. #30,32)
30	486696	Grip, Brake Lever
31	04063-05	Key, 3/16 X 3/16 X 1.50
32	04012-15	Set Screw 1/4-20 x .38 x 1/4"
33	04040-03	Washer, Flat 1/4-.281 x .625 x .065
34	452830	Lock Weldment, Neutral
35	04010-12	Screw, #10-32 x 3/4" Taptite
36	04019-02	Nut, Serrated Flange 1/4-20
37	427269	Bracket, Neutral Switch
38	481637	Switch, Interlock
39	422373	Plate, Threaded
40	04019-03	Nut, Serrated Flange 5/16-18
41	04001-14	Bolt, Hex Head, 1/4-20 x 1"
42	04001-11	Bolt, Hex Head, 5/16-18 x 1 1/2"
43	484038	Spring, Brake Return
44	04040-04	Washer, Flat 5/16- .344 x .688 x .065
45	04001-11	Bolt, Hex Head, 5/16-18 x 1 1/2"
46*	4200256	Stiffner, Pumps
47	04117-01	Nut, Flange Elastic Stop, 5/16-18

This exploded view diagram illustrates the assembly of a Vermeer 2000L snowblower. The main body (15) is shown with the chute assembly (19) and the base plate assembly (16) being attached. The chute assembly includes the chute (20) and the chute housing (19). The base plate assembly includes the base plate (16) and the base plate cover (17). The diagram shows the following components and their assembly sequence:


- Chute Assembly (19):**
 - Chute (20) is attached to the chute housing (19) using screws (22).
 - The chute housing (19) is attached to the main body (15) using a pin (2) and a nut (3).
 - The chute housing (19) is also attached to the base plate assembly (16) using a pin (2) and a nut (3).
- Base Plate Assembly (16):**
 - The base plate (16) is attached to the main body (15) using a pin (2) and a nut (3).
 - The base plate (16) is also attached to the chute housing (19) using a pin (2) and a nut (3).
- Main Body (15):**
 - The main body (15) is the central component of the snowblower.
 - The main body (15) is attached to the base plate assembly (16) using a pin (2) and a nut (3).
- Other Components:**
 - Pin (2) and Nut (3) are used to attach the chute housing (19) and the base plate assembly (16) to the main body (15).
 - Pin (4) and Nut (5) are used to attach the chute housing (19) to the main body (15).
 - Pin (6) and Nut (7) are used to attach the chute housing (19) to the main body (15).
 - Pin (8) and Nut (9) are used to attach the chute housing (19) to the main body (15).
 - Pin (10) and Nut (11) are used to attach the chute housing (19) to the main body (15).
 - Pin (12) and Nut (13) are used to attach the chute housing (19) to the main body (15).
 - Pin (14) and Nut (15) are used to attach the chute housing (19) to the main body (15).
 - Pin (16) and Nut (17) are used to attach the chute housing (19) to the main body (15).
 - Pin (18) and Nut (19) are used to attach the chute housing (19) to the main body (15).
 - Pin (20) and Nut (21) are used to attach the chute housing (19) to the main body (15).
 - Pin (22) and Nut (23) are used to attach the chute housing (19) to the main body (15).

SVRXL FUEL SYSTEM

Ref. No.	Part No.	Description
1	487689	Fuel Gauge Assy., 14.6" (32) (Incl. #2)
2	484242	Seal, Fuel Gauge
3	484286	Fuel Cap, Tethered
	484297-01	Fuel Cap, Tethered - CA models only
4	484279-03	Tube, Fuel Tank Insert
5	487802	Valve, Fuel Shutoff (32)
6	482571	Bushing, .56 Viton
7	486852	Remote Vent
8	483617	Fuel Hose, 1/4" ID (order by inch)
9	48059-01	Clamp, Fuel Hose
10	48059-02	Clamp, Fuel Hose 7/32" ID
11	484347	Hose, Vapor Recovery 1/4" (order by inch)
12	484343-01	Mender, 1/4 x 3/16 w/.02 Hole

Ref. No.	Part No.	Description
13	48059-05	Clamp, Vapor Recovery Hose 3/16"
14	484345-16	Hose, Vapor Recovery 3/16" (order by inch)
15	463618	Fuel Tank Assy. RH, (Incl. #1,2,5,6,7, 15, 28)
16	04040-15	Washer, Flat 5/16-.375 x .875 x .083
17	04030-03	Washer, Lock 5/16"
18	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
19	463617	Fuel Tank Assy. LH, (Incl. #1,2,5,6,7, 26, 28)
20	429564	Plate, LH Tank
21	429565	Plate, RH Tank
22	04139-01	Hex Head Capscrew, 1/4-20 x 1/2"
23	487691	Fuel Pickup Line

SVRXL HYDRAULICS AND ENGINE COMPONENTS

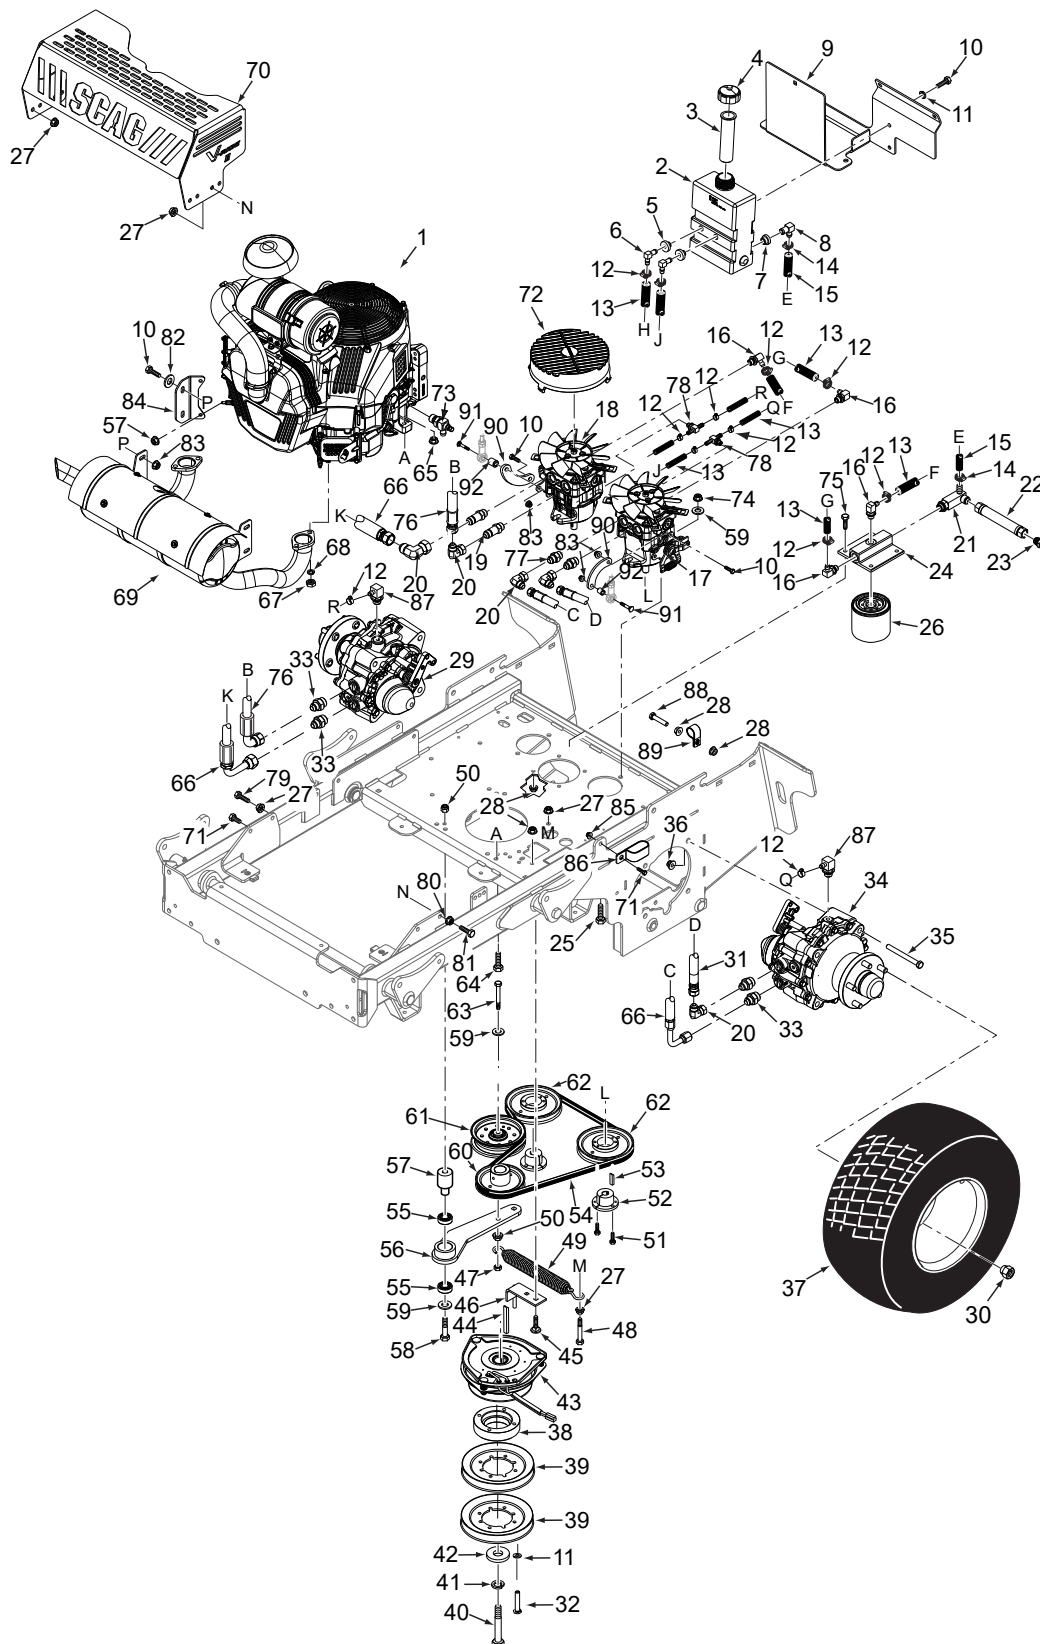

SVRXL HYDRAULICS AND ENGINE COMPONENTS


Ref. No.	Part No.	Description
1	*	Engine, Briggs & Stratton 40BV-EFI (61G877-0016-J1)
	*	Engine, Kawasaki 38FX-EFI (FXT00V-AW13R)
	*	Engine, Kohler 38CV-EFI (PS-ECV980-3025)
2	462946	Hydro Tank Assy., SVRXL (Incl. #3,4,5,6,7,8)
3	481507	Insert, Filler Neck
4	481164	Cap, Hydro Tank
5	482571	Bushing, .56 Viton
6	482572	Fitting, 90 Degree x .38 Hose
7	482573	Bushing, .78 Viton
8	482574	Fitting, 90 Degree x .50 Hose
9	429835	Tray, Battery Box
	429160	Battery Box Cover
10	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
11	04030-03	Washer, Lock 5/16"
12	48136-13	Clamp, Hose
13	48811	Hose, 3/8" Pushlock (order by inch)
14	48136-05	Clamp, Hose
15	48351	Hose, 1/2" Pushlock (order by inch)
16	482266-01	Elbow, 90 Degree - O-Ring
17	486914	Pump Assy. LH (PR-2HCC-NA1F-XLXX)
18	486915	Pump Assy. RH (PR-2KCC-NB1F-XLXX)
19	485830	Union, O-Ring to JIC
20	481203-02	Elbow, JIC Swivel
21	485847	Tee, 3/4 O-Ring
22	485870	Drain, Hose Assembly (Incl. #23)
23	48771-02	Plug, JIC 3/4-16 UNF
24	482417	Filter Head
25	04001-20	Bolt, Hex Head 3/8-16 x 1 1/2"
26	48462-01	Filter
27	04019-04	Nut, Serrated Flange 3/8-16
28	04019-03	Nut, Serrated Flange 5/16-18
29	487578	Wheel Motor, RH (HGM-18H-XXCK)
30	04028-02	Wheel Nut,
31	485792	Hose Assy., SVRII - 27.50
32	04002-34	Metric Hex Head Capscrew 1.25 X 50
33	48572-04	Tube, Union 1/2 x 3/4 - 16
34	487577	Wheel Motor, LH (HGM-18H-XXCG)
35**	04063-25	Key, Woodruff 5/16 x 1"
36	04117-04	Nut, Flange Elastic Stop, 1/2-13
37	487739	Wheel Assy., 24 x 9.5 - 12 (4-Ply) (52)
	487806	Tire, 24 x 9.5 - 12 (52)
	487793	Rim w/Stem (52)
	487792	Wheel Assy., 24 x 12 - 12 (4-Ply) (61)
	485953	Tire, 24 x 12 -12 (4-Ply) (61)
	487742	Rim w/Stem (61)
	487795	Wheel Assy., 24 x 12 - 12 (4-Ply) (72)
	487796	Rim w/Stem (72)
38	431082	Hub, Clutch Pulley
39	486172	Pulley, Clutch 7.3
40	04102-08	Bolt, Hex Head, 7/16-20 X 1.50w/Patch
41	04030-05	Washer, Lock 3/8"
42	04041-28	Washer, Flat 7/16, .469 x 1.75 x .25
43	486913	Clutch, GT 3.5
44	04063-28	Key, 1/4 x 1/4 x 3-1/2"
45	04003-12	Bolt, Carriage 5/16-18 x 3/4"
46	453493	Anti-Rotation Bracket
47	04019-04	Nut, Serrated Flange 3/8-16
48	04001-54	Bolt, Hex Head 3/8-16 x 3"

Ref. No.	Part No.	Description
49	483112	Spring, Transmission Idler
50	04019-04	Nut, Serrated Flange 3/8-16
51	04001-172	Bolt, Hex Head 1/4-20 x 1" Gr.8
52	481884	Tapered hub, 17MM Bore
53	04063-14	Key, 5 x 5 x 25mm
54	487821	Belt, Pump Drive
55	48224	Bearing
56	453013	Idler Arm Weldment, Pump Drive
57	43683	Pivot, Idler
58	04001-62	Bolt, Hex Head 3/8-16 x 3-1/4"
59	04043-04	Washer, Flat 3/8-.391 x .938 x .105 HD
60	483802	Pulley, 4.75" OD - 1.125 Bore
61	483213	Pulley, 4-1/2" Idler
62	482649	Pulley, 5.45" OD - Tapered Bore
63	04001-46	Bolt, Hex Head 3/8-16 2-1/4"
64	04001-20	Bolt, Hex Head 3/8-16 x 1 1/2"
65	04134-03	Nut, Top Lock w/ Flange, 3/8-16
66	485791	Hose Assy, 30.00
67	04025-04	Nut, N8-1.25
	04130-01	Lock Nut, M8-1.25 -8H
68	04033-01	Washer, Lock M8 Spring
69	487620	Muffler, Briggs & Stratton 40BV-EFI (STT-31BV)
	486814	Muffler, Kawasaki 38FX-EFI (M20 THD)
	487362	Muffler, Kohler 38CV-EFI (1/2 NPT)
**	*	Gasket, Muffler; Briggs & Stratton BV
	*	Gasket, Muffler; Kawasaki FX
	*	Gasket, Muffler; Kohler CV
70	429649	Heat Shield Muffler
71	04001-19	Bolt, Hex Head 3/8-16 x 4-3/4"
72	485564	Fan Cover, Pump
73	483017	Oil Drain, Briggs & Stratton BV
	484089	Oil Drain, Kawasaki FX
	487401	Oil Drain, Kohler CV
74	04021-09	Nut, Elastic Stop 3/8-16
75	04001-09	Bolt, 5/16-18 x 1"
76	04121-01	Nut, Metric Hex Head W/Flange, 6-1.0-6H
77	48572-04	Union, 3/4"-16 JIC x 3/4"-16 O-Ring
78	482277	Fitting, Tee- O-Ring
79	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2" Gr. 8
80	04019-04	Nut, Serrated Flange 3/8-16
81	04001-19	Bolt, Hex Head 3/8-16 x 1"
82	04040-15	Washer, Flat 5/16-.375 x .875 x .083
83	04117-01	Nut, Flange Elastic Stop 5/16-18
84	428248	Bracket, Muffler Mount
85	04117-02	Nut, Flange Elastic Stop 3/8-16
86	48030-18	Clamp, Cable
87	482266-02	Elbow, 90Degree - O-Ring
88	04001-11	Bolt, Hex Head
89	48030-10	Clamp, Cable .75
90	4200256	Stiffener, Pumps
91	04001-17	Bolt, Hex Head, 5/16-18 UNC X 2.00
92	43749	Spacer
93	04021-10	Locknut, 5/16-18 Elastic Stop
94	431009	Bushing

* Not available through Scag Power Equipment.

** Item not shown.

SVRXL ELECTRICAL SYSTEM

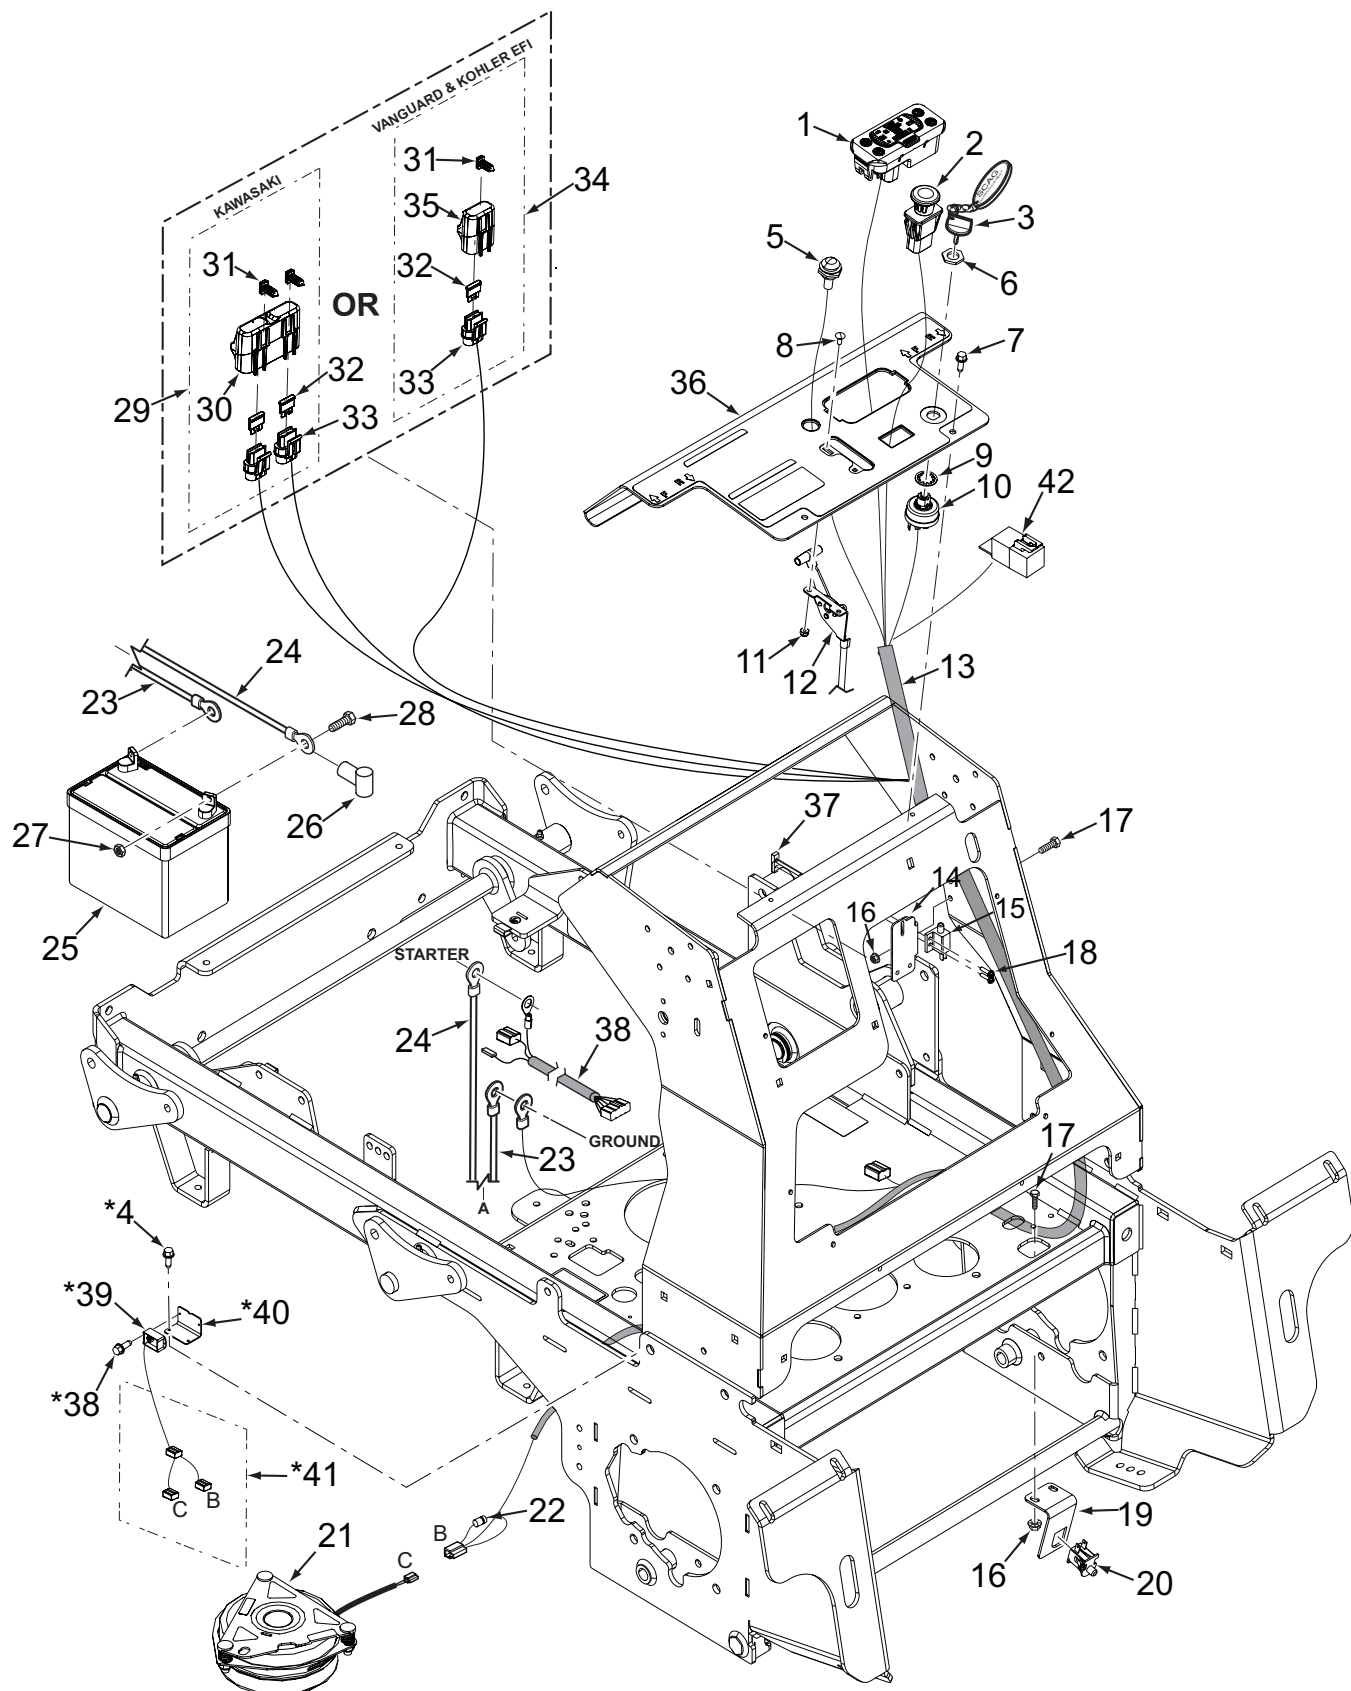


SVRXL ELECTRICAL SYSTEM

Ref. No.	Part No.	Description
1	487353	Tiger Eye, Cluster Gauge
2	485833	Switch, PTO
3	462069	Key Assy., w/Fob
4	04011-11	Screw, #10-32 x .56 Shakeproof
5	481182	Indicator Light
6	48017-04	Nut, Special 5/8-32
7	04011-14	Screw, 1/4-20 x 3/4" Taptite
8	04003-43	Bolt, Carriage #10-24 x 1/2"
9	48017-03	Washer, Lock 5/8" Internal Tooth
10	48798	Switch, Key (Incl. #8, 9)
11	04021-26	Nut, Elastic Stop #10-24
12	486873	Throttle Control, Briggs & Stratton, Kawasaki
	483975	Throttle Control, Kohler
13	486827	Wire Harness, SVRII-E Gov - Kawasaki FX
	486770	Wire Harness, SVRII-48/52-EFI - Kohler CV
	487036	Wire Harness, S40BV-EFI - Briggs & Stratton BV
14	427269	Bracket, Neutral Switch
15	481637	Switch, N/O
16	04019-02	Nut, Serrated Flange 1/4-20
17	04001-01	Bolt, Hex Head 1/4-20 x 3/4"
18	04010-12	Screw, #10-32 x 3/4" Taptite
19	428491	MTG Bracket, Operator Presence
20	48717	Switch
21	486913	Clutch w/Tag GT3.5--FE05
22	483958	Diode, 600V - 6A
23	48029-24	Battery Cable, 39" Black
24	48029-30	Battery Cable, 44" Red w/Braid
25	*	Battery, 350 CCA
26	48126	Rubber Boot
27	04020-02	Nut, 1/4-20
28	04001-01	Bolt, Hex Head 1/4-20 x 3/4"
29	483642	Double Fuse Assy. (Incl. #30, 31, 32, 33)
30	483571	Cover, Sealed Double
31	482588	Clip, Wire
32	48298	Fuse, 20 Amp
33	483629	Fuse Holder
34	485739	Single Fuse Assy. (Incl. #31, 33, 35)
35	483643	Cover, Sealed Single
36	463619	Control Panel w/Decal
37	422373	Plate, Threaded
38	486139	Wire Harness Adapter - Briggs & Stratton 40BV-EFI
	485678	Wire Harness Adapter - Kawasaki FX
39	486321	Soft Start Module, Clutch
40	428497	Mounting Bracket, Soft Start Module
41	486325	Wire Harness, Soft Start
**	485568	Power Plug, 12V
42	483013	Relay Switch, 12V

* Not available through Scag Power Equipment.

** Item not shown.

BDP-16A HYDRAULIC PUMP ASSEMBLY with COOLING FAN

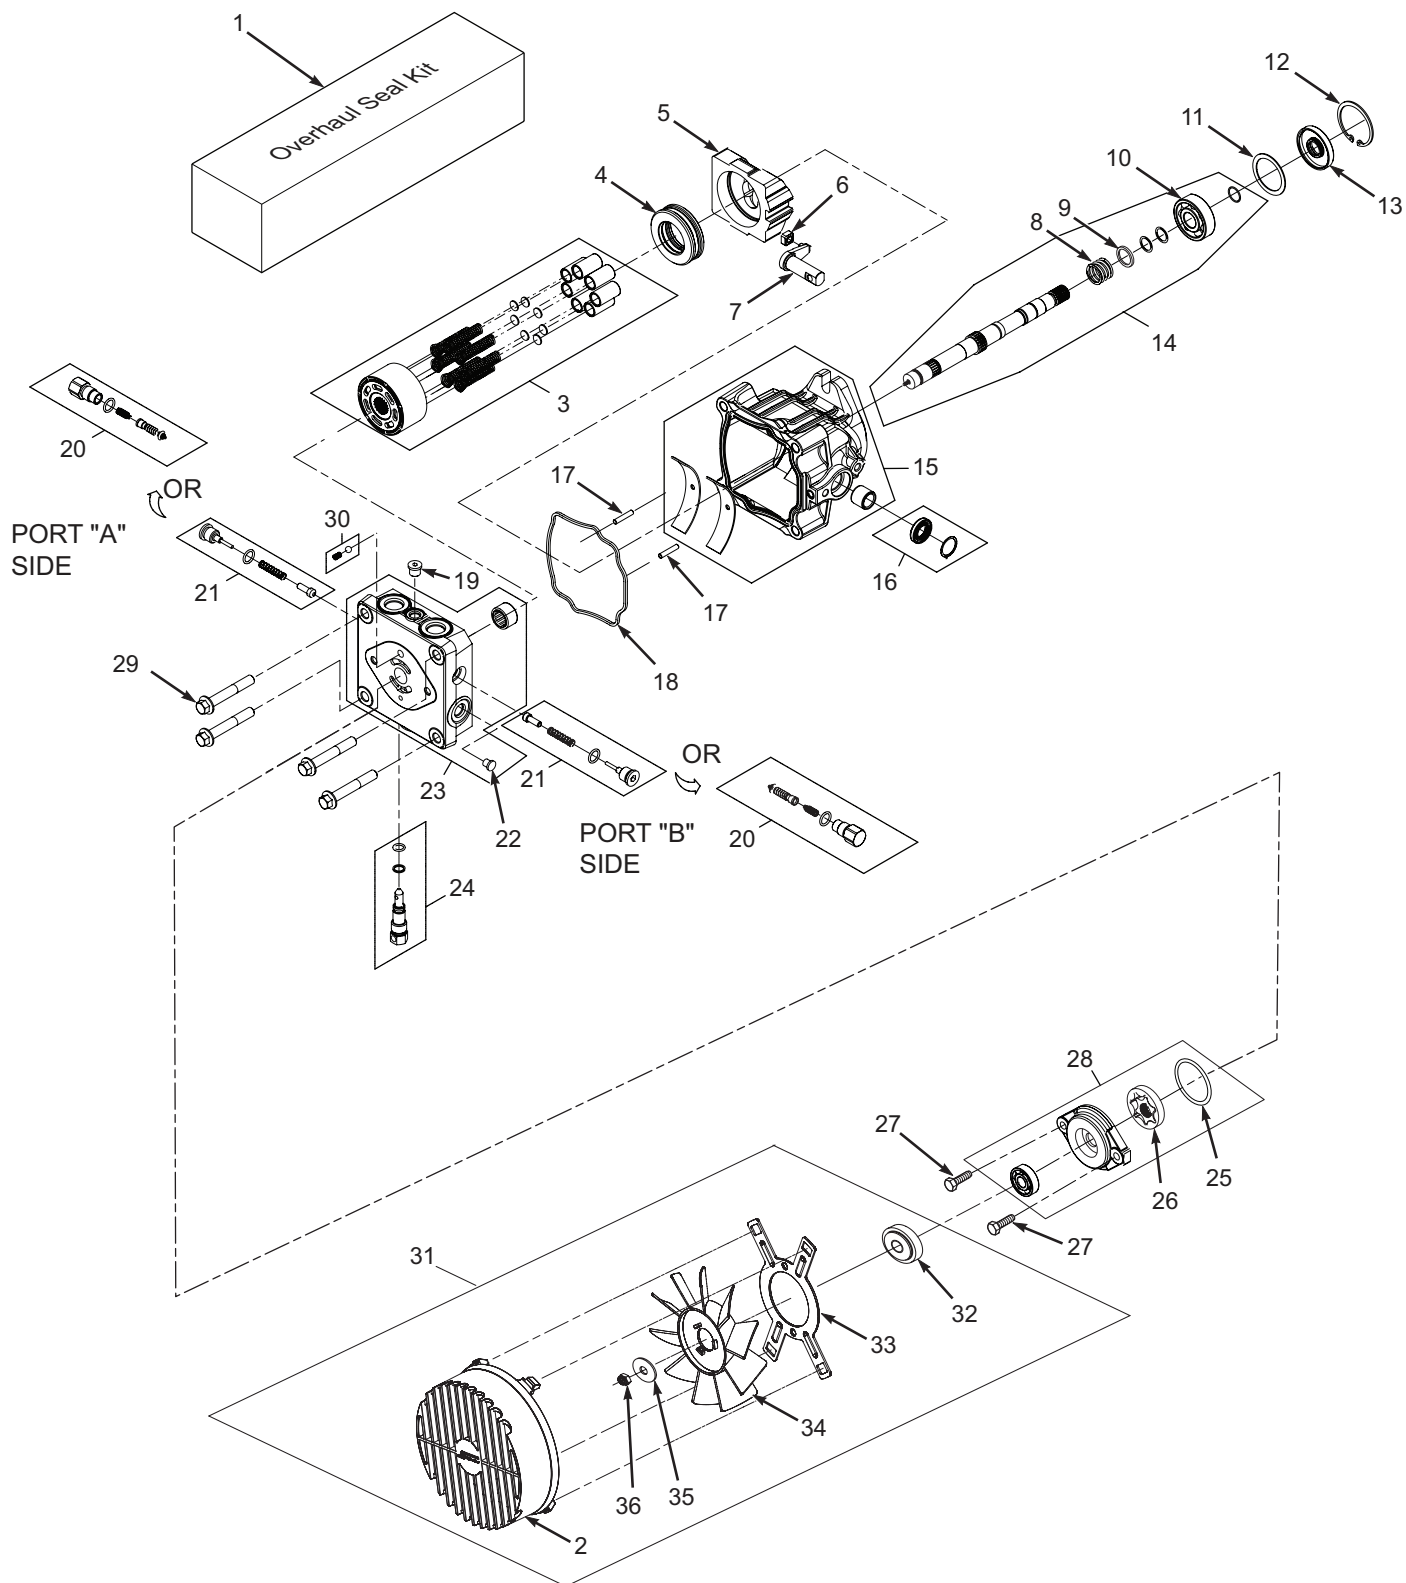

BDP-16A HYDRAULIC PUMP ASSEMBLY with COOLING FAN

Ref. No.	Part No.	Description
1	HG70740	Overhaul Seal Kit
2	HG52059	Fan Cover
	485879	Fan Cover w/ Notch (25LP Right Side Pump Only)
3	HG72158	Cylinder Block Kit - 16cc
4	HG51462	Thrust Ball Bearing Assembly
5	HG51436	Variable Swashplate
6	HG2000015	Slot Guide
7	HG2000014	Trunnion Arm
8	HG2000025	Block Spring
9	HG2000024	Block Thrust Washer
10	HG2000032	Shaft Ball Bearing
11	HG2000023	Spacer
12	HG2000038	Retaining Ring
13	HG51092	Seal
14	HG70578	Kit, Pump Shaft (keyed thru taper)
15	HG70738	Housing Kit
16	HG70739	Trunnion Seal Kit
17	HG50641	Pin
18	HG51437	O-Ring
19	HG9005110-7500	Straight Thread Plug
20	HG70743	Shock Valve Kit (.031 Orifice)
21	HG70742	Shock Valve Kit (.024 Orifice)
22	HG9005200-7500	Straight Thread Plug
23	HG70736	End Cap Kit
24	HG2513030	Bypass Valve Kit
25	HG9004100-1430	O-Ring
26	HG50406	Gerotor Assembly (.19 cu.in./rev.)
27	HG50173	Socket Head Cap Screw (M8 x 1.25-25mm)
28	HG70924	Charge Pump Kit (.19 STD. Splined)
29	HG51457	Hex Screw, Flanged Head (M10 x 1.50-65mm)
30	HG70402	Charge Relief Kit
31	HG71287	Fan Kit (incl. items 32, 34, 35, 36)
32	HG51348	Hub
33	HG52016	Bracket, Shroud
34	HG52014	Fan
35	HG52256	Washer
36	HG44809	Nut


REPLACEMENT DECALS AND INFORMATION PLATES



1




2

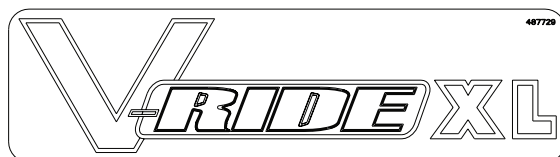

3




4

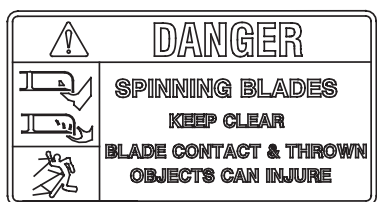


5




6

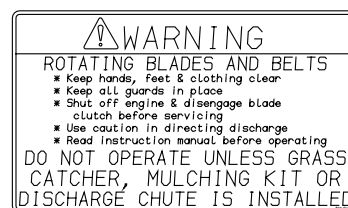

8

 


7

 


13




9

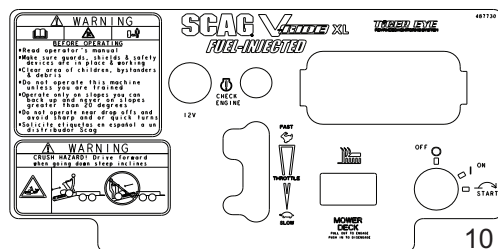


10

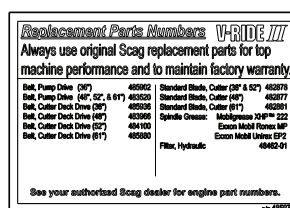

11

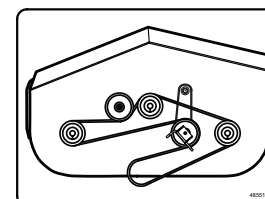


12

 

14



15

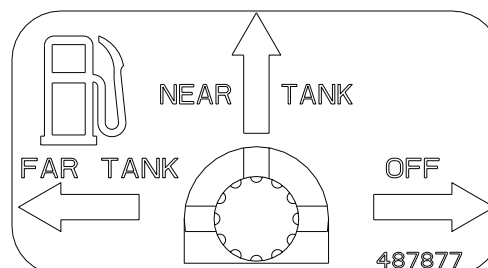


16


REPLACEMENT DECALS AND INFORMATION PLATES

Ref. No.	Part No.	Description
1	483402	Decal, Warning - Belt Cover
2	483405	Decal, Warning
3	487729	Decal, Belt Cover
	485871	Decal, Belt Cover - EFI
4	483200	Decal, 52V
	483201	Decal, 61V
5	483505	Decal, Spinning Blades
6	485403	Decal, Metalcraft - USA
7	487699	Decal, Deck Height - Outer
8	483406	Decal, Warning - Knives
9	484453	Decal, Scag Heavy Duty Commercial
10	487730	Decal, Instrument Panel - SVRXL
11	486498	Decal, SVRII Replacement Parts
12	485517	Decal, Belt Routing - SVRII-32A/36A
	485518	Decal, Belt Routing - SVRII-48V, SVRII-52V & SVRII-61V
13	487698	Decal, Deck Height - Inner
14	487804	Decal, Upper Engine Belt
15	487803	Decal, Lower Engine Belt
16	487877	Decal, Fuel Tank Selector

SVRXL ELECTRICAL SCHEMATIC - ELECTRIC START MODELS (shown with Key Off, PTO Off, Park Brake Applied, OPC Disengaged)

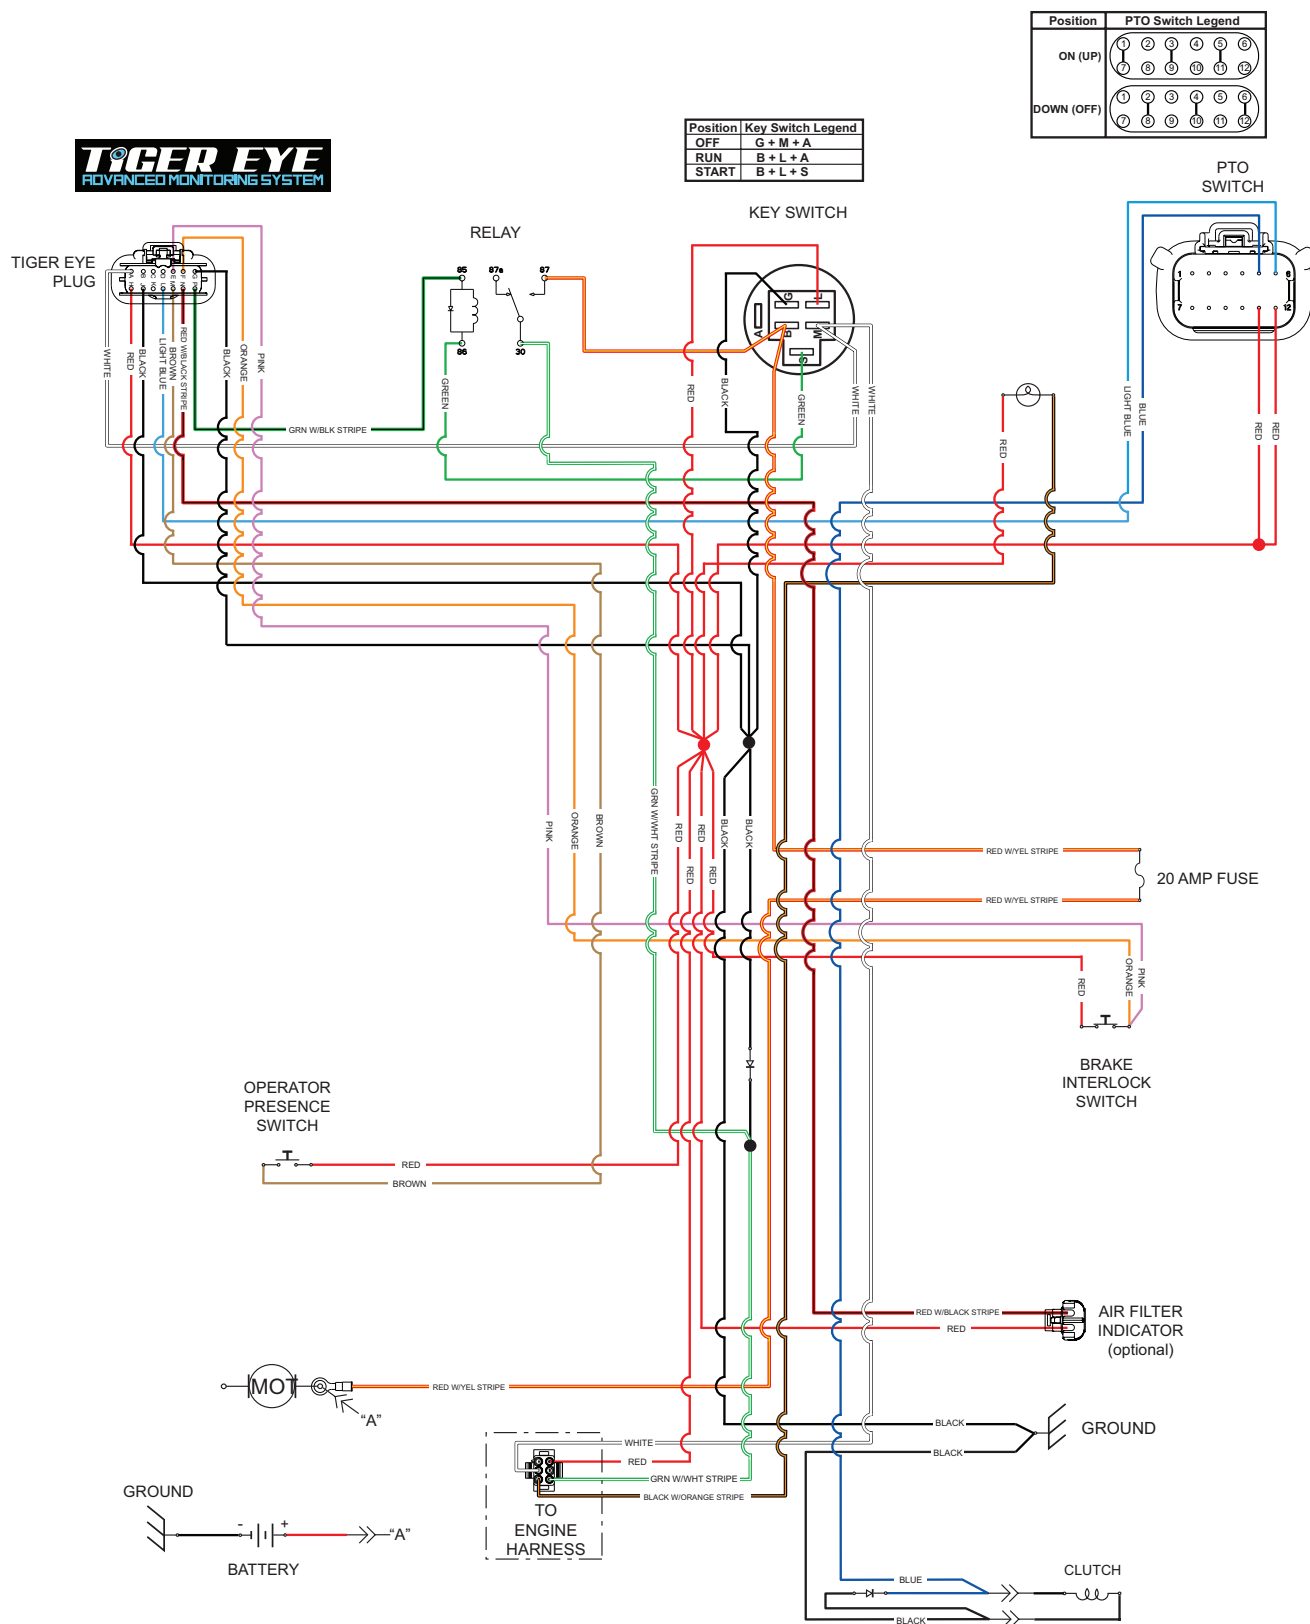


SVRXL - KAWASAKI 38FX EFI ELECTRICAL SCHEMATIC (shown with Key Off, PTO Off, Park Brake Applied, OPC Disengaged)

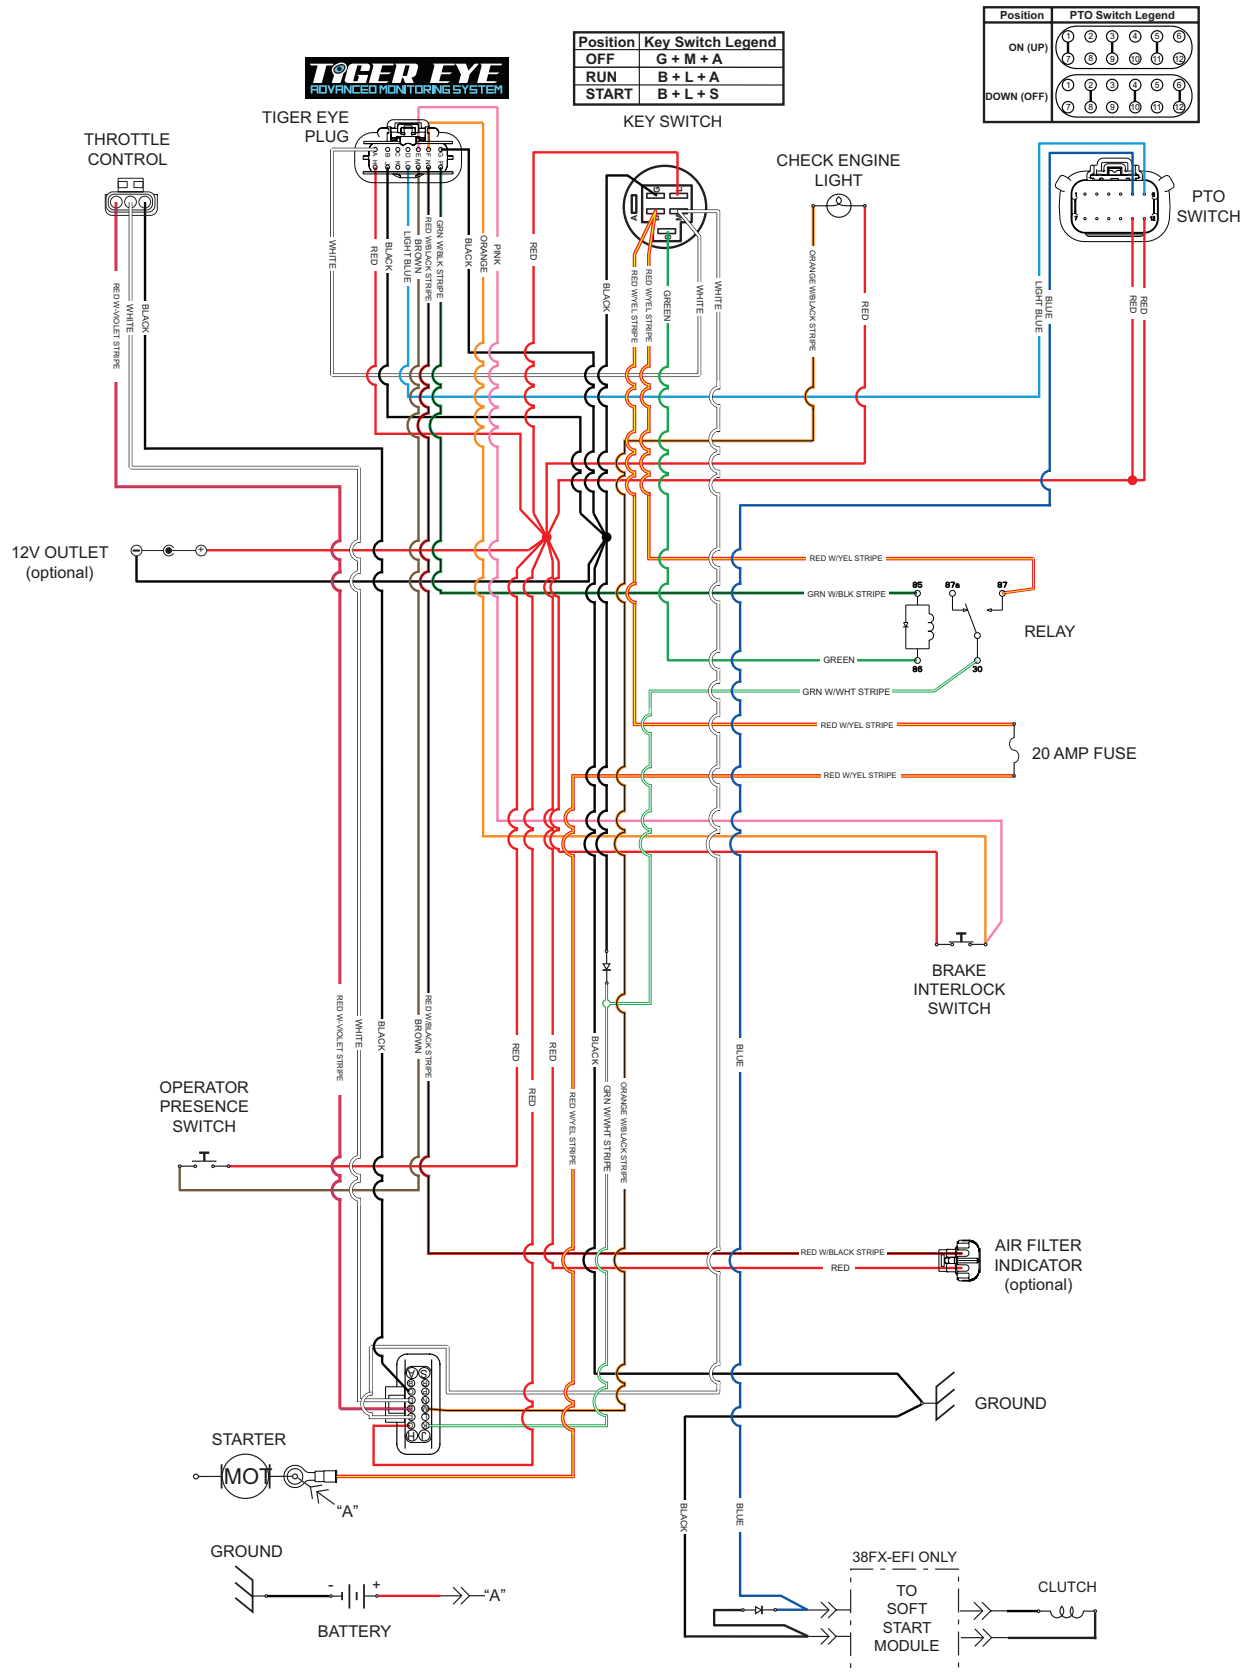

SVRXL - Briggs & Stratton 40BV EFI ELECTRICAL SCHEMATIC

(shown with Key Off, PTO Off, Park Brake Applied, OPC Disengaged)

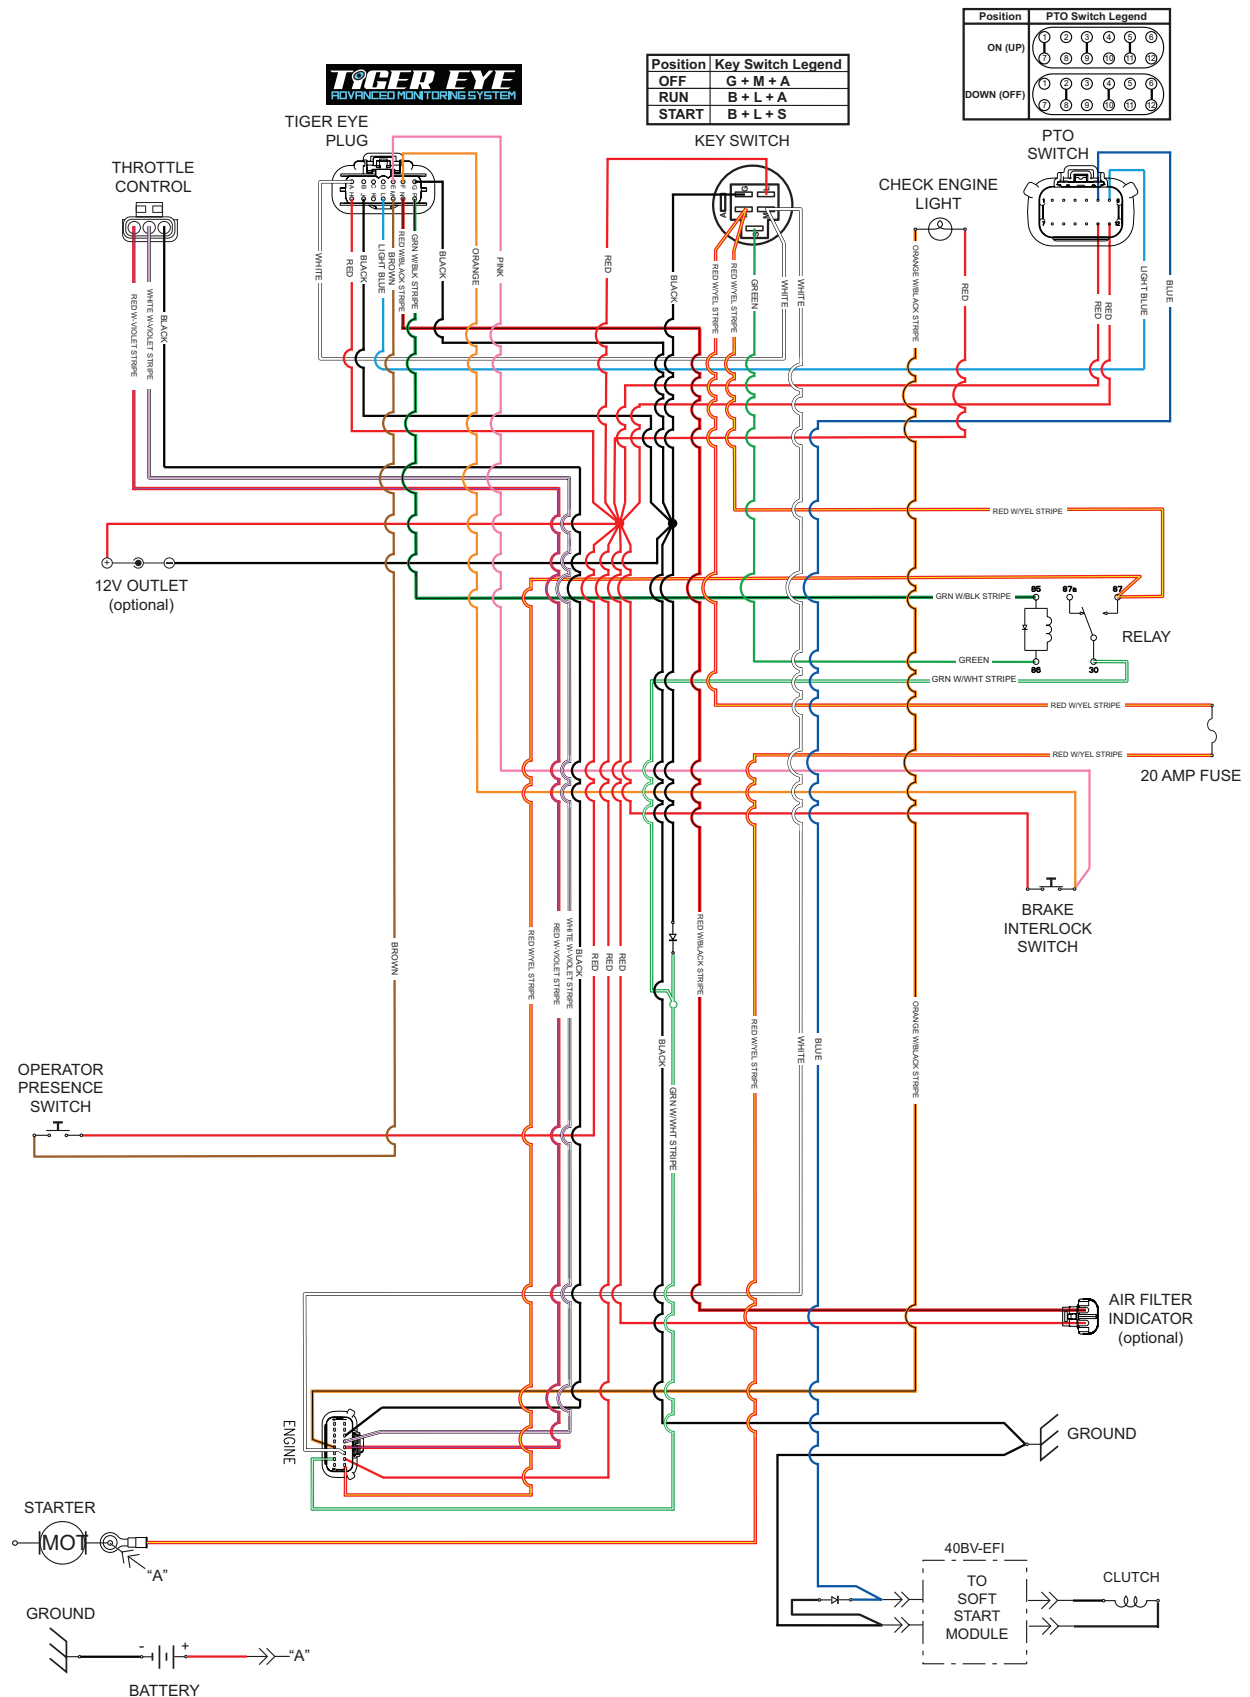

NOTES