



# ColorLogic® Bubbler

## Owner's Manual

	<b>Contents</b>
	BeforeYouBegin.....2
	Installation.....5
	Operation.....12
	Winterization.....12
Warranty.....18	

WFBCUS1100  
WFB100

Hayward Pool Products  
620 Division Street, Elizabeth NJ 07207  
Phone (908)-355-7995  
[www.hayward.com](http://www.hayward.com)



# HAYWARD®

## IMPORTANT SAFETY INSTRUCTIONS

When using this electrical equipment, basic safety precautions should always be followed, including the following:



### READ AND FOLLOW ALL INSTRUCTIONS

**▲ WARNING** - Read and follow all instructions in this owner's manual and on the equipment. Failure to follow instructions can cause severe injury and/or death.



**▲ WARNING** – ELECTRIC SHOCK HAZARD. MOUNTING A LUMINAIRE THAT REQUIRES BONDING OR GROUNDING IN THIS NICHE CAN CAUSE SEVERE INJURY AND/OR DEATH. DO NOT MOUNT NON-UL LISTED LIGHTS OR ANY LUMINAIRE THAT REQUIRES BONDING OR GROUNDING IN THIS NICHE.



**▲ WARNING** – Risk of Electric Shock. Hazardous voltage can shock, burn, and cause death or serious property damage. All electrical wiring MUST be in conformance with applicable local codes, regulations, and the National Electrical Code (NEC). To reduce the risk of electric shock, do NOT use an extension cord to connect unit to electric supply. Provide a properly located electrical receptacle. Before working on any electrical equipment, turn off power supply to the equipment.



**▲ WARNING** – Risk of Electric Shock. Opening light can cause shock, burn and severe injury. Light has no user serviceable parts inside. Do not open light.

**▲ NOTICE** – This swimming pool product is UL listed for permanently installed pools or spas only. It is not listed for storable pools or spas. Permanently installed pools and spas are those constructed in or partially in the ground and all others capable of holding water in a depth greater than 42 in (1.07 m). Storable pools and spas are those constructed on or above the ground and capable of holding water to a maximum of 42 in (1.07 m).



**▲ WARNING** – Electrical shock hazard. Damage to wiring can cause severe injury or death. To reduce the risk of electric shock replace damaged wiring immediately. Locate conduit to prevent abuse from lawn mowers, hedge trimmers and other equipment.

## SAVE THESE INSTRUCTIONS



# HAYWARD®

## Before You Begin

The Hayward WFB100 ColorLogic® Bubbler has been designed for use with all Hayward Accent Lights and provides lighted water for small fountains and other water effects. The ColorLogic® Bubbler must be installed as specified by these instructions. Please follow ALL of the instructions enclosed with this unit. It is recommended to keep the unit in its original packaging until the site is prepared for installation.

### Compatibility

The Hayward WFB100 ColorLogic® Bubbler is compatible with the following Hayward Accent Light models:

- Hayward ColorLogic® 320
- Hayward ColorLogic® 160
- Hayward ColorLogic® 320 Network
- Hayward ColorLogic® 160 Network
- Hayward CrystaLogic® 320
- Hayward CrystaLogic® 160


Note that the WFBCUS1100 version comes packaged with one ColorLogic® 320 Accent Light with a 100' cord.

### What's Included

Refer to the image and the table on the following page for a list of all items included with the Hayward WFB100 ColorLogic® Bubbler.



# HAYWARD®

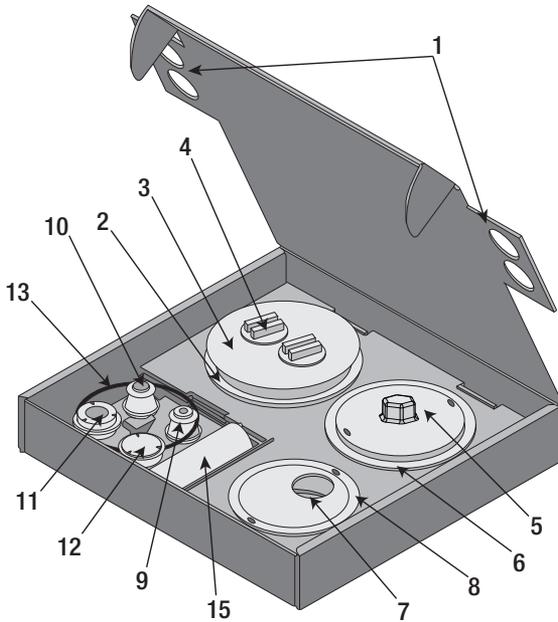


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	--	Cardboard Pipe Spacer	2
2	G1-046397	Housing	1
3	G1-068159	Gunite Shield	1
4	SP1022C	1-1/2" Threaded Plug with O-Ring	2
5	G1-046400	Plaster Shield	1
6	G1-046399	Plaster Ring	1
7	G1-046398	Lens	1
8	G1-046393	Retaining Ring	1
9*	G1-046395	ColorLogic Bubbler Nozzle, 1/2"	1
10*	G1-046396	ColorLogic Bubbler Nozzle, 3/4"	1
11*	G1-046394	ColorLogic Bubbler Nozzle Nut	1
12*	G1-046403	ColorLogic Bubbler Nozzle Threaded Plug	1
13*	SP0710XZ3	Plaster Shield O-Ring (For Winterization Only)	1
14*	SP1022CZ2	O-Ring For Nozzle and Plug	2
15*	G1-046401	ColorLogic Bubbler Tool	1

\* Comes In Plastic Bag



# HAYWARD®

## Exploded View

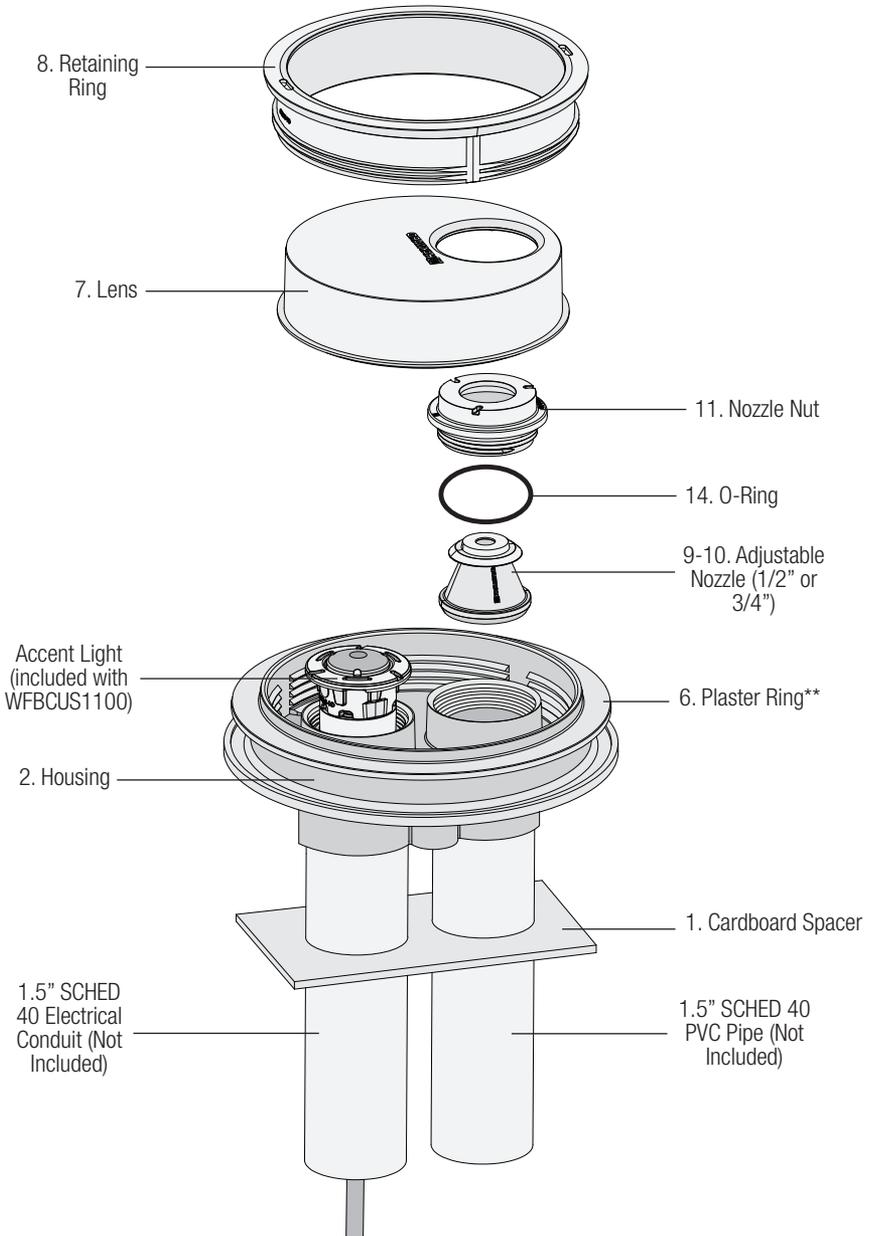

\*\*Plaster Ring only adjustable during Installation.




# HAYWARD®

## Installation

### System Overview

The diagram below shows an overview of a fully installed ColorLogic Bubbler system.

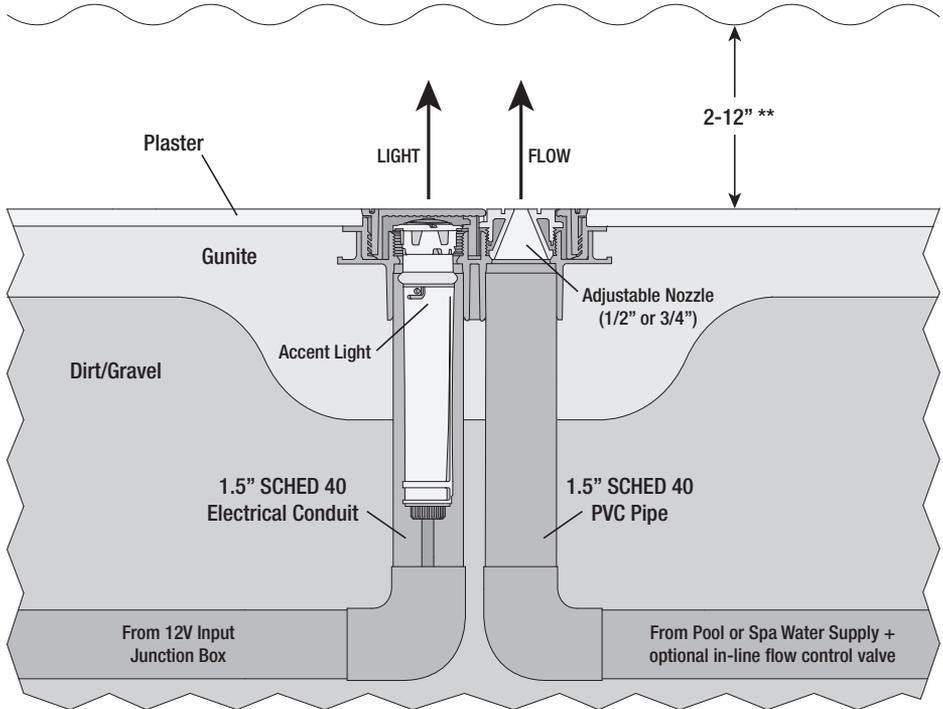

**\*\*Hayward recommends mounting the ColorLogic® Bubbler no more than 12" below the surface of the water when installed as a bubbler/fountain for the best combination of water and light.**

Determine the location for the ColorLogic® Bubbler. Rough-in plumbing pipe and electrical conduit by plumbing the water line to the desired pumping system and the electrical line to the Accent Light junction box as shown above. It is recommended that you use 1.5" SCHED 40 Electrical Conduit for the electrical line. Use the two provided cardboard pipe spacers to ensure proper distance from the plumbing and electrical pipes (as shown on page 7). Keep the cardboard pipe spacers on the pipes to make installation of the housing easier later on. If you have lost or discarded the pipe spacers, note that the distance between the centers of each pipe should be exactly 2.5".


**NOTE:** If finite control will be desired, be sure to install an in-line flow control valve to adjust the height and flow of the water stream from the ColorLogic® Bubbler.




# HAYWARD®

Use the looped plumbing scheme below if multiple bubblers will be installed at the same depth.

Use the plumbing scheme below with individual valves if bubblers will be installed at different depths.

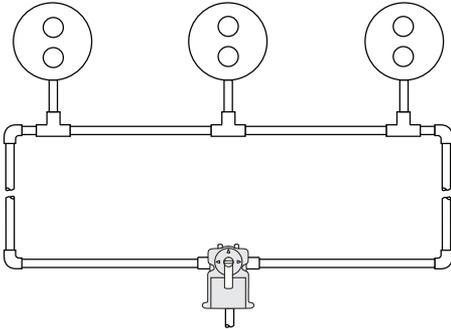

From Pool or Spa Water Supply

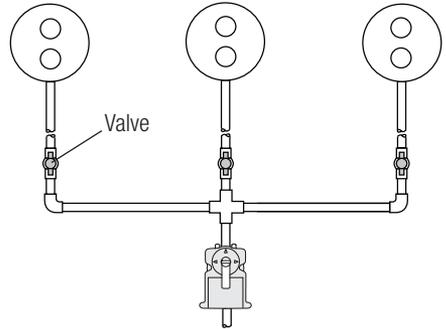


From Pool or Spa Water Supply

## Installation Steps

Follow the steps below to ensure proper installation of the ColorLogic Bubbler.


1. Cut the two pieces of 1.5" pipe to no less than 2" beneath the surface level to ensure proper final installation height. The pipes should also be at least 14" in height to accommodate for the length of the accent light that will be used (if lighting is desired). If lighting will not be used, it is recommended that you still leave enough room in case a future upgrade is desired. See the image below for reference.

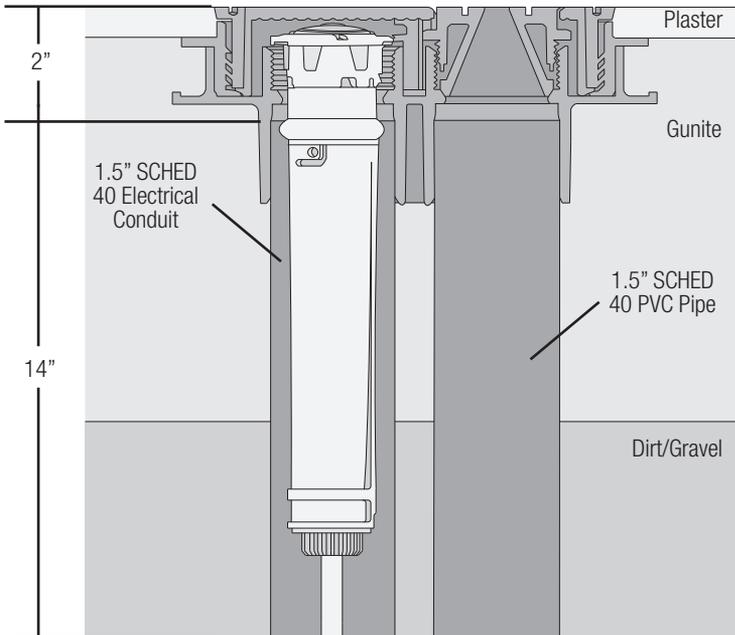




# HAYWARD®


- Remove the following parts from the box: Housing, Gunite Shield, and 2 Threaded Plugs. These parts come assembled together as shown below. **DO NOT DISASSEMBLE.**

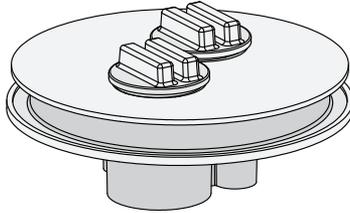

- Verify that the cardboard spacers are on the 2 pipes to ensure proper distance between them (as seen below). If the spacers are not on the pipes, put them on now to make the next step easier.

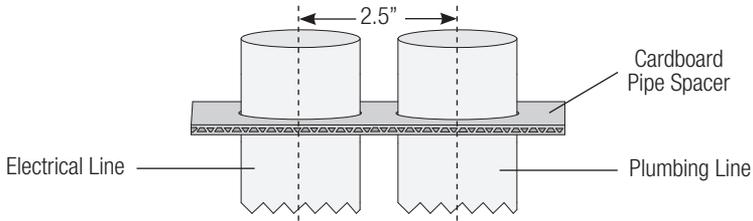

- Glue the housing assembly to the two pipes as shown below. Note that the ports are reversible so it does not matter which one is used for the electrical line or the plumbing line. Verify that the housing is fully installed to ensure flush installation to the surface level. Remove the cardboard spacers by tearing them off by hand or with a utility knife.

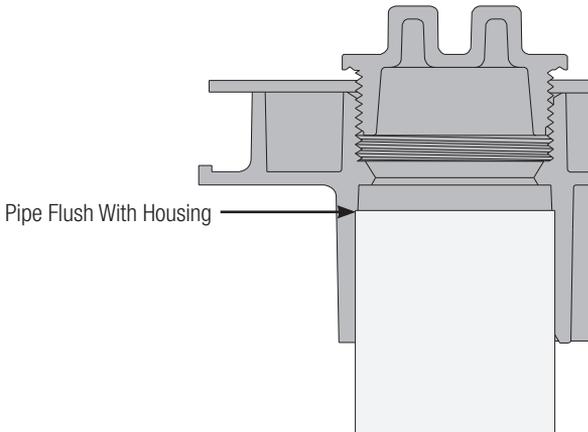


- Backfill the pit beneath the housing with dirt and/or gravel to about halfway up the pipes. The System Overview diagram on page 5 shows the approximate level that the dirt/gravel should be at.




# HAYWARD®


6. Apply gunite and fill behind the housing up to the level shown in the System Overview diagram on page 5 and below.

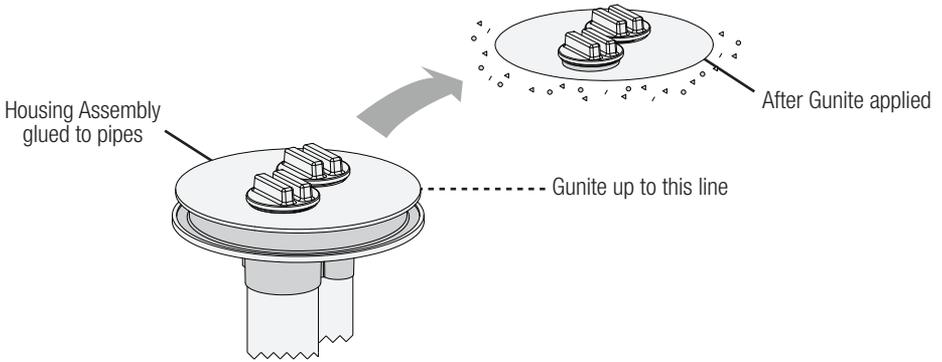

7. Wait for the gunite to cure. Once cured, remove the 2 threaded plugs and the gunite shield from the housing assembly. Discard the gunite shield but save the plugs in case of future maintenance.


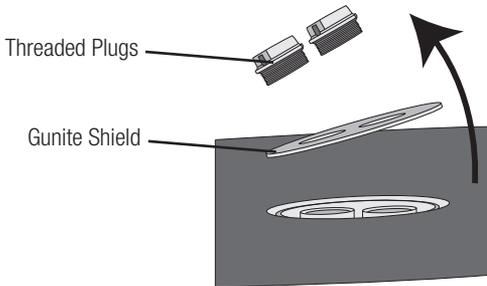


8. Remove the following parts from the box: the plaster ring and the plaster shield. These parts come assembled together as shown below. **DO NOT DISASSEMBLE. IMPORTANT: No o-ring is to be installed with the plaster shield; this is for winterization purposes only (See page 12 for winterization instructions).**

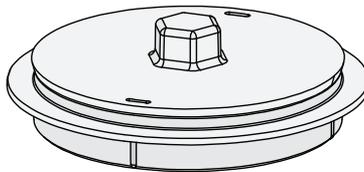




9. Install the plaster shield assembly onto the housing and verify that the surface of the plaster shield is level with the finished surface. If the housing was not installed level in step 4, use the plaster ring to achieve a level finished surface by pulling up on the edge of the plaster ring until level. See images below for reference.

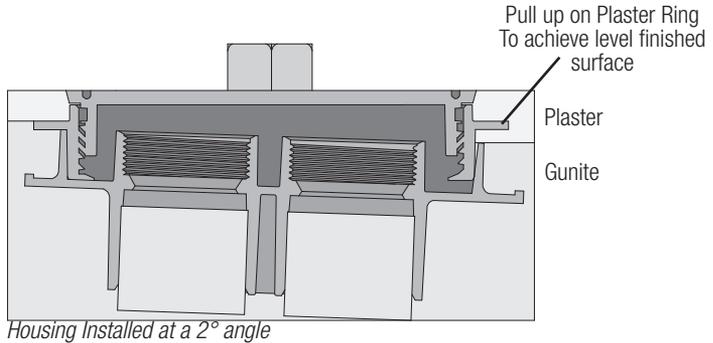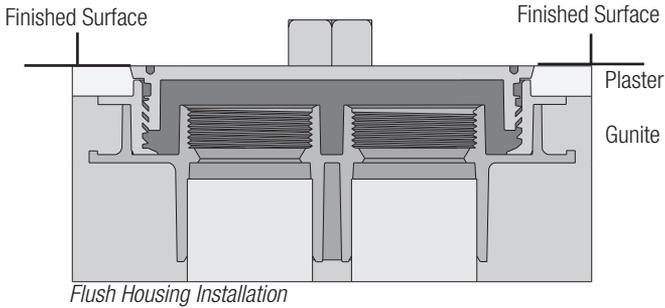


10. Apply and smooth out plaster around the edge of the plaster shield as seen below. The surface of the plaster should be even with the finished surface level.

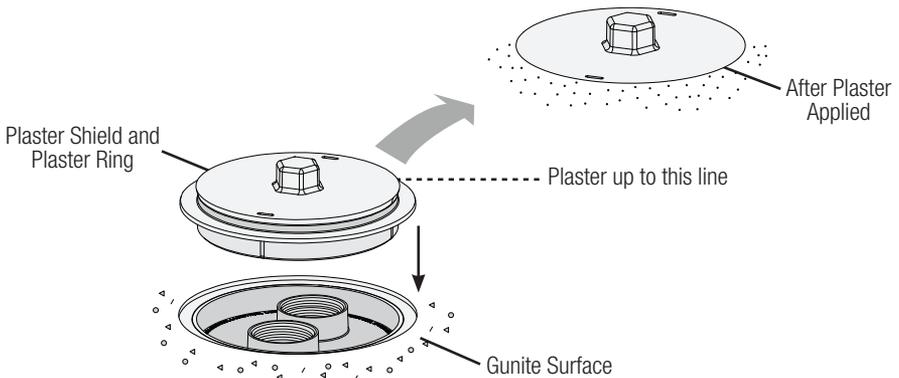




# HAYWARD®

11. Wait for the plaster to cure. Once cured, remove the plaster shield using the ColorLogic® Bubbler Tool as shown below. Verify that the slots on the plaster shield are free of plaster and/or debris before inserting the tool. If you do not have the ColorLogic Bubbler Tool on hand, use a 1-1/4" wrench to remove the plaster shield. Note that the plaster shield may require an initial tap to loosen. Save the plaster shield for winterization, if needed (See page 12 for winterization instructions).

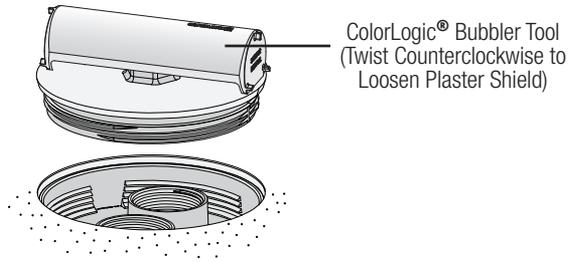


12. Flush the water line to remove any foreign material from construction that may be inside the system.
13. Remove the following parts from the box: Desired nozzle (1/2" or 3/4"), nozzle nut, and o-ring. Install the nozzle, nozzle nut, and o-ring for the desired effect in the water port and fasten it in place using the provided ColorLogic® Bubbler tool. See images below for reference.

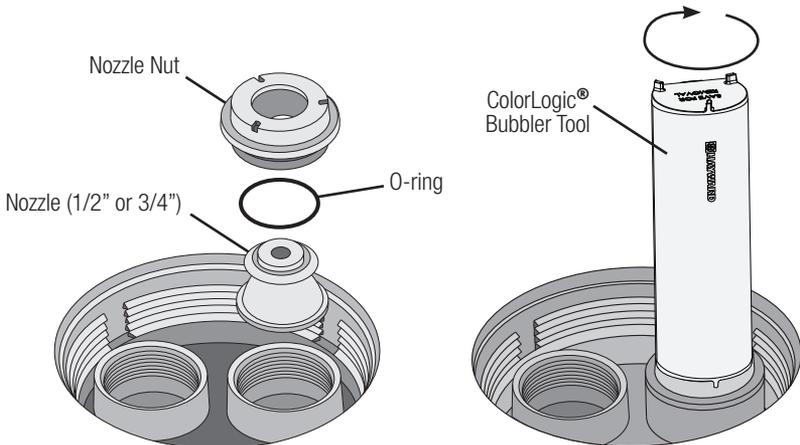




# HAYWARD®

14. If lighting will be used in the system, install the accent light into the lighting port by feeding the cord through the electrical conduit to the 12V input junction box. Wire the light as instructed in the supplied owner's manual and fasten it to the housing using the tool provided with the Accent Light. See images below for reference.

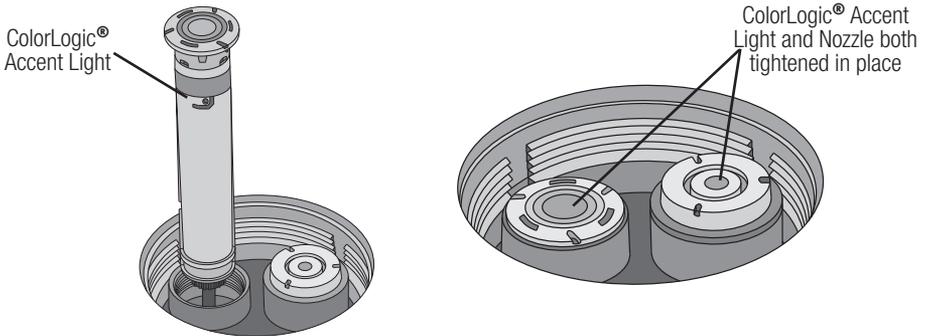

15. If lighting will not be used in the system, remove the following parts from the box: ColorLogic® Bubbler nozzle threaded plug and an o-ring. Install the plug with the o-ring into the lighting port. Tighten the plug using the provided ColorLogic® Bubbler tool (In a similar fashion as seen in step 13).
16. Remove the following parts from the box: the lens and the retaining ring. Install the lens, making sure that the open hole is over the nozzle. Thread on the retaining ring using the provided ColorLogic® Bubbler tool. See images below for reference.

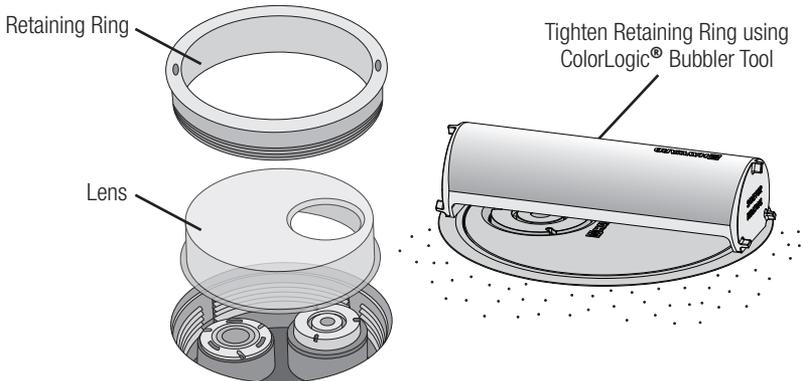



## Operation

### Plume Height Adjustment

After the system has been started, you can adjust the water flow to get the desired effect. The following tables provide approximate values for water column height with combinations of GPM and depth of the ColorLogic® Bubbler. *NOTE: Water heights may vary.*

#### Plume height at given water depths:


3/4" Nozzle Orifice					
Depth	4"	6"	8"	10"	12"
15gpm	11	8	5	4.5	3.5
20gpm	15	10	7	6	5
25gpm	24	16	11	9	8
30gpm	35	21	17	12	10.5
35gpm	45	30	20.5	15	13
40gpm	--	37.5	27	20	15

1/2" Nozzle Orifice					
Depth	4"	6"	8"	10"	12"
10gpm	31	16	--	--	--
15gpm	48	26	15.5	12	10
20gpm	75	43	25	19	15

## Winterization

When the pool is to be prepared for winter or will be out of service for a long period of time, the following steps should be followed to ensure that the bubbler unit will not be damaged:

**If water WILL be below bubbler level:** remove retaining ring, lens, nozzle nut, and nozzle. Vacuum or soak up all residual pool water from niche. Install the plaster shield that was saved from installation along with the included O-ring. If these parts were not saved from installation, a replacement winterization kit is available (GLX-BKT-XX) for order. See page 13 for details.

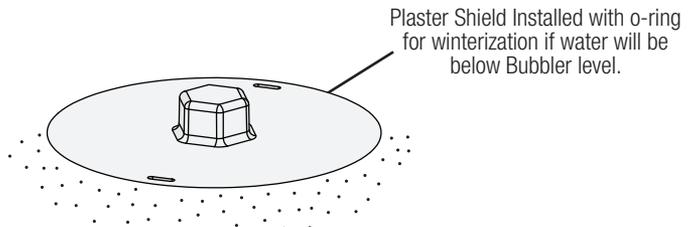



# HAYWARD®

**If water WILL NOT be below bubbler level:** remove retaining ring, lens, nozzle nut, and nozzle.


- Retrieve the following parts:
  - SCHED 40 PVC cut to be just above the water level
  - SCHED 40 PVC threaded male 1.5" to 1.5" Slip Adapter
  - SCHED 40 PVC Slip to 1.5" Threaded Female Adapter
  - SCHED 40 PVC 1.5" Threaded Plug
- Glue the pipe to the threaded male adapter.
- Glue the other end of the pipe (top) to the threaded female adapter.
- Apply thread seal tape to the threaded male adapter and thread the adapter into the side replacing the nozzle nut. (See image on the following page)
- Use compressed air or some other source to remove all the water from the lines.
- Apply thread seal tape to the Threaded Plug and then thread the Plug into the female adapter to finish sealing the system.
- If using an Accent Light, keep the light in the port. If you are not using an Accent Light, make sure that the ColorLogic Bubbler Nozzle Threaded Plug and an O-Ring are screwed into the lighting port.

**IMPORTANT: Do not use glue within the ColorLogic® Bubbler**

**REPLACEMENT ORDER:** In the event the plaster shield is misplaced, please Visit [www.hayward.com](http://www.hayward.com). Search for GLX-BKT.



# HAYWARD®

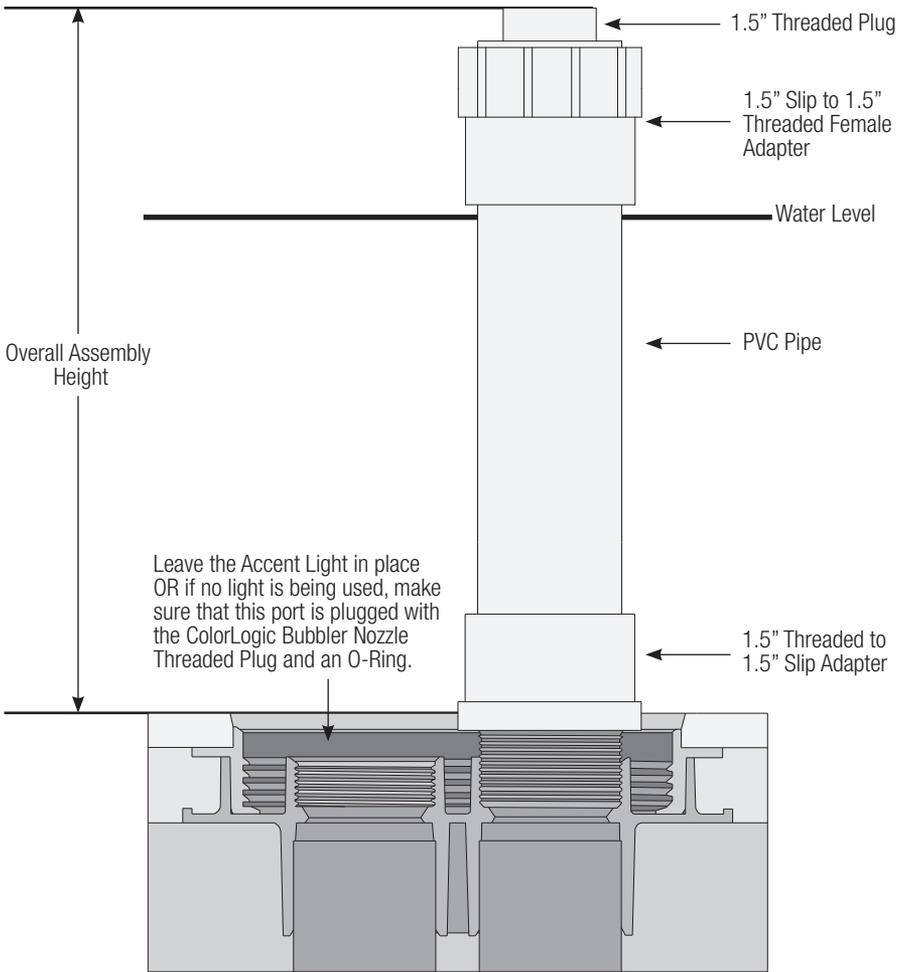



**HAYWARD®**



# HAYWARD®



**WARNING** - Read and follow all instructions in this owner's manual and on the equipment. Failure to follow instructions can cause severe injury and/or death.

**WARNING** – Suction Entrapment Hazard Suction in suction outlets and/or suction outlet covers which are, damaged, broken, cracked, missing, or unsecured can cause severe injury and/or death due to the following entrapment hazards:



**Hair Entrapment** - Hair can become entangled in suction outlet cover.



**Limb Entrapment** - A limb inserted into an opening of a suction outlet sump or suction outlet cover that is damaged, broken, cracked, missing, or not securely attached can result in a mechanical bind or swelling of the limb.



**Body Suction Entrapment** - A negative pressure applied to a large portion of the body or limbs can result in an entrapment.



**Evisceration/ Disembowelment** - A negative pressure applied directly to the intestines through an unprotected suction outlet sump or suction outlet cover which is, damaged, broken, cracked, missing, or unsecured can result in evisceration/ disembowelment.



**Mechanical Entrapment** - There is potential for jewelry, swimsuit, hair decorations, finger, toe or knuckle to be caught in an opening of a suction outlet cover resulting in mechanical entrapment.

**WARNING** - To Reduce the risk of Entrapment Hazards:

- When outlets are small enough to be blocked by a person, a minimum of two functioning suction outlets per pump must be installed. Suction outlets in the same plane (i.e. floor or wall), must be installed a minimum of three feet (3') [1 meter] apart, as measured from near point to near point.
- Dual suction fittings shall be placed in such locations and distances to avoid "dual blockage" by a user.
- Dual suction fittings shall not be located on seating areas or on the backrest for such seating areas.
- The maximum system flow rate shall not exceed the flow rating of as listed on Table 1.
- Never use Pool or Spa if any suction outlet component is damaged, broken, cracked, missing, or not securely attached.
- Replace damaged, broken, cracked, missing, or not securely attached suction outlet components immediately.
- In addition two or more suction outlets per pump installed in accordance with latest ASME, APSP Standards and CPSC guidelines, follow all National, State, and Local codes applicable.
- Installation of a vacuum release or vent system, which relieves entrapping suction, is recommended.

**WARNING** – Failure to remove pressure test plugs and/or plugs used in winterization of the pool/spa from the suction outlets can result in an increase potential for suction entrapment as described above.

**WARNING** – Failure to keep suction outlet components clear of debris, such as leaves, dirt, hair, paper and other material can result in an increase potential for suction entrapment as described above.

**WARNING** – Suction outlet components have a finite life, the cover/grate should be inspected frequently and replaced at least every ten years or if found to be damaged, broken, cracked, missing, or not securely attached.

**CAUTION** – Components such as the filtration system, pumps and heater must be positioned so as to prevent their being used as means of access to the pool by young children. To reduce risk of injury, do not permit children to use or climb on this product. Closely supervise children at all times. Components such as the filtration system, pumps, and heaters must be positioned to prevent children from using them as a means of access to the pool.



**WARNING – Hazardous Pressure:** Pool and spa water circulation systems operate under hazardous pressure during start up, normal operation, and after pump shut off. Stand clear of circulation system equipment during pump start up. Failure to follow safety and operation instructions could result in violent separation of the pump housing and cover, and/or filter housing and clamp due to pressure in the system, which could cause property damage, severe personal injury, or death. Before servicing pool and spa water circulation system, all system and pump controls must be in off position and filter manual air relief valve must be in open position. Before starting system pump, all system valves must be set in a position to allow system water to return back to the pool. Do not change filter control valve position while system pump is running. Before starting system pump, fully open filter manual air relief valve. Do not close filter manual air relief valve until a steady stream of water (not air or air and water) is discharged.



# HAYWARD®



**WARNING – Separation Hazard:** Failure to follow safety and operation instructions could result in violent separation of pump and/or filter components. Strainer cover must be properly secured to pump housing with strainer cover lock ring. Before servicing pool and spa circulation system, filters manual air relief valve must be in open position. Do not operate pool and spa circulation system if a system component is not assembled properly, damaged, or missing. Do not operate pool and spa circulation system unless filter manual air relief valve body is in locked position in filter upper body. Never operate or test the circulation system at more than 50 PSI. Do not purge the system with compressed air. Purging the system with compressed air can cause components to explode, with risk of severe injury or death to anyone nearby. Use only a low pressure (below 5 PSI), high volume blower when air purging the pump, filter, or piping.



**WARNING – Risk of Electric Shock:** All electrical wiring MUST be in conformance with applicable local codes, regulations, and the National Electric Code (NEC). Hazardous voltage can shock, burn, and cause death or serious property damage. To reduce the risk of electric shock, do NOT use an extension cord to connect unit to electric supply. Provide a properly located electrical receptacle. Before working on any electrical equipment, turn off power supply to the equipment. To reduce the risk of electric shock replace damaged wiring immediately. Locate conduit to prevent abuse from lawn mowers, hedge trimmers and other equipment. Do NOT ground to a gas supply line.

**WARNING – Risk of Electric Shock:** Failure to ground all electrical equipment can cause serious or fatal electrical shock hazard. Electrical ground all electrical equipment before connecting to electrical power supply.

**WARNING – Risk of Electric Shock:** Failure to bond all electrical equipment to pool structure will increase risk for electrocution and could result in injury or death. To reduce the risk of electric shock, see installation instructions and consult a professional electrician on how to bond all electrical equipment. Also, contact a licensed electrician for information on local electrical codes for bonding requirements.

**Notes to electrician:** Use a solid copper conductor, size 8 or larger. Run a continuous wire from external bonding lug to reinforcing rod or mesh. Connect a No. 8 AWG (8.4 mm<sup>2</sup>) [No. 6 AWG (13.3 mm<sup>2</sup>) for Canada] solid copper bonding wire to the pressure wire connector provided on the electrical equipment and to all metal parts of swimming pool, spa, or hot tub, and metal piping (except gas piping), and conduit within 5 ft. (1.5 m) of inside walls of swimming pool, spa, or hot tub.

**IMPORTANT** - Reference NEC codes for all wiring standards including, but not limited to, grounding, bonding and other general wiring procedures.

**WARNING – Risk of Electric Shock:** The electrical equipment must be connected only to a supply circuit that is protected by a ground-fault circuit-interrupter (GFCI). Such a GFCI should be provided by the installer and should be tested on a routine basis. To test the GFCI, push the test button. The GFCI should interrupt power. Push reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the electrical equipment without the test button being pushed, a ground current is flowing, indicating the possibility of an electrical shock. Do not use this electrical equipment. Disconnect the electrical equipment and have the problem corrected by a qualified service representative before using.

**CAUTION** – HAYWARD® pumps are intended for use with permanently-installed pools and may be used with hot tubs and spas if so marked. Do not use with storable pools. A permanently-installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage. A storable pool is constructed so that it is capable of being readily disassembled for storage and reassembled to its original integrity.

## SAVE THESE INSTRUCTIONS



# HAYWARD®

**LIMITED WARRANTY** (effective 03/01/12) Hayward warrants its Pro Logic, OnCommand and E-Command pool automation products as well as its Aqua Rite, Aqua Rite Pro, Aqua Plus and SwimPure chlorination products to be free of defects in materials and workmanship, under normal use and service, for a period of three (3) years. Hayward also warrants its Aqua Trol chlorination products to be free of defects in materials and workmanship, under normal use and service for a period of one (1) year. These warranties are applicable from the initial date of purchase on private residential swimming pools in the US and Canada. Installations of product for use on commercial pools in the US and Canada is covered for a period of one (1) year for defects in materials and workmanship. Hayward warrants all accessories and replacement parts for the above-identified pool automation and chlorination products for a period of one (1) year. Accessories also include remotes, actuators, base stations, temperature sensors, flow switches and chemistry probes. Each of these warranties is not transferable and applies only to the original owner.

Hayward shall not be responsible for cartage, removal, repair or installation labor or any other such costs incurred in obtaining warranty replacements or repair.

Proof of purchase is required for warranty service. If written proof of purchase is not provided, the manufacturing date code will be the sole determinant of the date of installation of the product. To obtain warranty service or repair, please contact the place of purchase or the nearest Hayward authorized warranty service center. For more information on authorized service centers please contact the Hayward Technical Service Support Center (61 Whitecap Road, North Kingstown RI, 02852) or visit the Hayward web site at [www.hayward.com](http://www.hayward.com).

#### **WARRANTY EXCLUSIONS:**

1. Material supplied or workmanship performed by others in process of installation.
2. Damage resulting from improper installation including installation on pools larger than the product rating.
3. Problems resulting from failure to install, operate or maintain the product(s) in accordance with the recommendations contained in the owners manual(s).
4. Problems resulting from failure to maintain pool water chemistry in accordance with the recommendations in the owners manual(s).
5. Problems resulting from tampering, accident, abuse, negligence, unauthorized repairs or alternations, fire, flood, lightning, freezing, external water, degradation of natural stone used in or immediately adjacent to a pool or spa, war or acts of God.
6. Use of a non-genuine Hayward replacement salt chlorination cell on any Hayward automation or chlorination product will void the warranty for that product.

The express limited warranty above constitutes the entire warranty of Hayward Pool Products with respect to its products and is in lieu of all other warranties expressed or implied, including warranties of merchantability or fitness for a particular purpose. In no event shall Hayward Pool products be responsible for any consequential, special or incidental damages of any nature. Some states do not allow a limitation on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.



For further information or consumer  
technical support, visit our website at  
**[www.hayward.com](http://www.hayward.com)**



Hayward is a registered trademark and ColorLogic® is a  
trademark of Hayward Industries, Inc. © 2016 Hayward Industries, Inc.

All other trademarks not owned by Hayward are the property of their respective owners.  
Hayward is not in any way affiliated with or endorsed by those third parties.

**USE ONLY HAYWARD GENUINE REPLACEMENT PARTS**