

This electronic 7-day timer is accurate to the minute, and has the capacity to accept up to 16 set points (8 ON and 8 OFF times) and can be set to repeat the daily program 15 different ways.

1	Mo	Tu	We	Th	Fr	Sa	Su
2	Mo	Tu	We	Th	Fr	Sa	Su
3	Mo	Tu	We	Th	Fr	Sa	Su
4	Mo	Tu	We	Th	Fr	Sa	Su
5	Mo	Tu	We	Th	Fr	Sa	Su
6	Mo	Tu	We	Th	Fr	Sa	Su
7	Mo	Tu	We	Th	Fr	Sa	Su
8	Mo	Tu	We	Th	Fr	Sa	Su
9	Mo	Tu	We	Th	Fr	Sa	Su
10	Mo	Tu	We	Th	Fr	Sa	Su
11	Mo	Tu	We	Th	Fr	Sa	Su
12	Mo	Tu	We	Th	Fr	Sa	Su
13	Mo	Tu	We	Th	Fr	Sa	Su
14	Mo	Tu	We	Th	Fr	Sa	Su
15	Mo	Tu	We	Th	Fr	Sa	Su

INTERMATIC® www.intermatic.com
Intermatic Plaza, Spring Grove, IL 60081-9698
©Copyright 1999 Intermatic Inc.


Programming Instructions

To Set or Change the Day and Time:

To clear entire memory, press **ⓧ** key.
Hold down the **CLOCK** key while pressing either the **DAY**, **HOUR** or **MINUTE** keys. Continue pressing until the desired day or number is shown. Then simply lift finger off the **CLOCK** key to set.

To Set Program (ON/OFF times):

Press **TIMER** key once to enter into program mode. Display will show "1 ON - - - -".

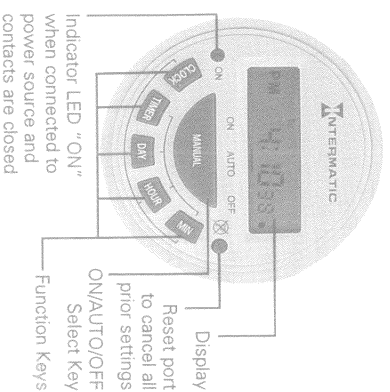

Indicator LED "ON" when connected to power source and contacts are closed


Press **DAY** key to choose any of 15 different day combinations for the first ON time. *Note: days of the week having the same program should be copied by selecting the desired combination of days.*

Press the **HOUR** key and then the **MINUTE** key to select the desired first ON time. Press **TIMER** key once. Display will show "1 OFF - - - -". Repeat previous step to select the desired first OFF time. Repeat the entire sequence to complete up to eight total ON/OFF times as desired.

Caution:

1. For voltage and electrical RATING information, please refer to marking on back of timer.
2. See back of timer for proper wire connections.
3. Press reset key **ⓧ** before first use to clear memory.
4. To replace battery, disconnect electricity first, then open battery compartment on back of timer and install new lithium battery type CR2032.

INTERMATIC® Programmable Digital Timer Instruction Manual

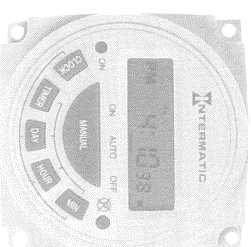

When programming is done, press the **CLOCK** key then the **MANUAL** key repeatedly until the indicator bar is above the word "AUTO".

To Review Program:

Press **TIMER** key repeatedly. When done, press **CLOCK** key to return to the time of day.

To Cancel/Change Part of the Program:

Press **TIMER** key repeatedly until the particular ON or OFF time appears,

then repeatedly press the **DAY** key until the display shows " - - - -". Set new ON or OFF time. (See: To Set Programs)

To Override Automatic

Operation:

Press **MANUAL** key to move indicator bar to the desired ON or OFF position.

Note: Timer will not resume automatic operation until indicator bar is repositioned above the word AUTO.