

48/56 FRAME EXECUTIVE, EX2, & VIPER PUMP INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS & WARNINGS • SAVE THESE INSTRUCTIONS • PLEASE READ AND FOLLOW ALL INSTRUCTIONS

ALL ELECTRICAL INSTALLATIONS SHOULD BE PERFORMED BY QUALIFIED ELECTRICIANS

- **2-SPEED MODELS: DO NOT wire both speeds to run simultaneously.** If supply cord is damaged, replace only with original replacement equipment available from authorized dealer.
- The pump is to be supplied through a residual current device (RCD) with a rated residual operating current not exceeding 30mA.
- Potential risk of fire, electrical shock, or injury to persons if misused.
- **DO NOT** install within an outer enclosure or beneath the skirt of the spa unless so marked.
- **WARNING:** To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times.
- **CAUTION:** This pump is for use with permanently installed pools and may also be used with hot tubs and spas if so marked. **Do not use with storable pools.** A permanently installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage. A storable pool is constructed so that it may be readily disassembled for storage and reassembled to its original integrity.

PUMP CONNECTIONS INSTALLATION INSTRUCTIONS

LOCATION: Place pump on level surface. Pump must be installed below water surface. Shut off valves should be installed on both the inlet and outlet of the pump for future maintenance. Installation area should be clear of any direct water and have adequate floor drainage. Pump should be protected from excessive moisture.

The inlet and outlet have Waterway male union threads. Use Waterway tailpiece assemblies for best connection. These unions allow the pump to be removed for service without disturbing the plumbing. **HAND TIGHTEN UNIONS ONLY!**



DO NOT use pipe dope. Use only Teflon tape or other sealing compounds approved for use with plastic. Some pipe dopes not approved for use with plastic will cause stress cracking of plastic parts. New installations often require a plumbing inspection. This inspection is usually conducted using city water pressure. A pressure regulator should be used when performing this test and should not exceed 40 PSI during the pressure test. The filter and pump are under pressure. Insure that all air is removed during the pressure test. **FAILURE TO FOLLOW THESE INSTRUCTIONS EXPLICITLY CAN RESULT IN PERSONAL INJURY.**

MOTOR WIRING

1. Before working on any electrical connections be sure that the power is turned off.
2. All wiring must conform to local, state and/or national codes.
3. All wiring must conform to wiring diagram on the motor nameplate or on the back of the terminal cover.
4. Applied voltage must correspond to the rated voltage as indicated on the marking plate.
5. **FOR SAFETY CLASS 1 EQUIPMENT:** It is mandatory to connect the pump to the protective conductor (grounding connector) of the earth-grounded main power supply.
FOR EQUIPOTENTIAL BONDING: It is also possible in addition to use the external terminal on the body to realize an equipotential bonding with other earthed metallic parts.
6. **DO NOT ground to a gas supply line.**
7. Ground motor prior to connecting electrical power.
8. For disconnection from the supply, a circuit breaker having a contact separation of at least 3mm in all poles must be incorporated in the fixed wiring according to the wiring rules. Cord and plug provided with pump is intended to be used with mating spa pack connector.
9. Improper grounding can cause serious injury and damage to the motor, voiding the warranty.
10. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

MAXIMUM TOTAL HEAD (METERS)

2 HP - 2-Speed	Low	4.0	2 HP - 1-Speed	16.0
	High	15.5	3 HP - 1-Speed	21.5
2 ½ HP - 2-Speed	Low	5.0		
	High	19.7		

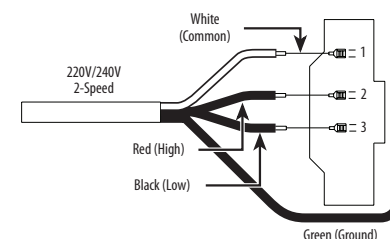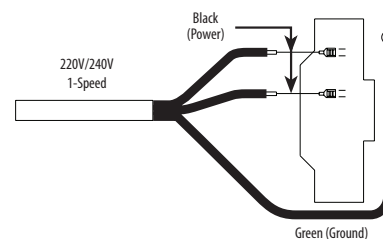

Ensure wiring circuit agrees with diagram and leads are securely tight.



Waterway™

2200 East Sturgis Road, Oxnard, CA 93030 • Ph. (805) 981-0262 • Fax (805) 981-9403
www.waterwayplastics.com • waterway@waterwayplastics.com

TROUBLESHOOTING

MOTOR WON'T START:

- | | | |
|--|-------------------------------------|--|
| CHECK VOLTAGE AT TERMINALS WITH VOLTMETER. | FUSE/ BREAKER | REPLACE FUSE/ RESET BREAKER. |
| IF 0 VOLTS: | TRIPPED GFI | RESET GFI. |
| IF LOW VOLTS: | DEFECTIVE EXTERNAL SWITCH | CHECK SWITCH SETTINGS AND CONNECTIONS. |
| IF PROPER VOLTAGE: | CALL ELECTRICIAN | |
| | INCORRECT OR LOOSE CONNECTIONS | INSURE WIRING CIRCUIT AGREES WITH DIAGRAM AND LEADS ARE TIGHT. |
| | THERMAL PROTECTOR TRIPPED | ALLOW MOTOR TO COOL AND RESTART. |
| | WINDING SWITCH OR CAPACITOR FAILURE | SEE AN AUTHORIZED MOTOR SERVICE CENTER. |

MOTOR HUMS WON'T START:

- | | | |
|---|-------------------------------------|--|
| CHECK VOLTAGE AT TERMINAL WITH VOLTMETER. IF PROPER VOLTAGE: IF VOLTAGE IS NOT WITHIN 10% OF NAMEPLATE, CALL ELECTRICIAN. | TIGHT PUMP | TAKE APART PUMP, LOOK FOR SIGNS OF RUBBING. |
| | SEIZED OR TIGHT MOTOR | TAKE APART PUMP, TURN MOTOR BY HAND. SEE AN AUTHORIZED MOTOR SERVICE CENTER. |
| | WINDING SWITCH OR CAPACITOR FAILURE | SEE AN AUTHORIZED MOTOR SERVICE CENTER. |

MOTOR IS NOISY:

- | | | |
|---|----------------------------|---|
| CHECK TO SEE THAT MOUNTING IS SECURE: | LOOSE MOUNTING | TIGHTEN MOUNTING. |
| BENT SHAFT: | | SEE AN AUTHORIZED MOTOR SERVICE CENTER. |
| DISASSEMBLE PUMP AND RUN MOTOR SEPARATE TO DETERMINE WHETHER MOTOR NOISE IS ACCEPTABLE: | BEARING NOISE OR ROTOR RUB | SEE AN AUTHORIZED MOTOR SERVICE CENTER. |

MOTOR RUNS, THEN STOPS:

- | | | |
|---|------------------------|--|
| CHECK FOR MOTOR OVERLOAD BY CHECKING AMP DRAW AT MOTOR TERMINAL WITH AMMETER, AMP DRAW SHOULD BE WITHIN 10% OF NAMEPLATE. | TRIPPED BREAKER | RESET BREAKER. |
| IF MOTOR IS NOT OVERLOADED: | INADEQUATE VENTILATION | INCREASE VENTILATION. |
| IF MOTOR IS OVERLOADED: | INCORRECT LINE VOLTAGE | CHECK VOLTAGE, IF INCORRECT CALL AN ELECTRICIAN. |
| | INCORRECT WIRING | INSURE THAT WIRING CIRCUIT AND WIRING DIAGRAM ARE THE SAME. |
| | INCORRECT VOLTAGE | CHECK VOLTAGE, IF INCORRECT, CALL AN ELECTRICIAN. |
| | INCORRECT WIRING | INSURE THAT WIRING CIRCUIT AND WIRING DIAGRAM ARE THE SAME. |
| | PUMP BINDING | TAKE APART PUMP, LOOK FOR SIGNS OF RUBBING. |
| | MOTOR BINDING | IF MOTOR WILL NOT TURN BY ITSELF SEE AN AUTHORIZED MOTOR SERVICE CENTER. |


PUMP RUNS, NO FLOW:

- | | | |
|--|------------------------|---|
| CHECK SHUT OFF VALVES: | VALVES CLOSED | OPEN VALVES. |
| CHECK TO SEE THAT PUMP IS BELOW WATER LEVEL: | PUMP ABOVE WATER LEVEL | REPLUMB PUMP BELOW WATER LEVEL. |
| CHECK SHUT OFF VALVES: | AIR LOCK | REMOVE DRAIN PLUG UNTIL WATER FLOWS FROM PUMP. REPLACE DRAIN PLUG AND START PUMP. |

PUMP RUNS, NOT ENOUGH FLOW:

- | | | |
|---|--------------------------|---------------------------------|
| VISIBLE AIR BUBBLES IN RETURN LINE: | LEAK IN SUCTION PLUMBING | REPLUMB PUMP BELOW WATER LEVEL. |
| CHECK TO SEE THAT VALVES ARE COMPLETELY OPEN: | PARTIALLY CLOSED VALVES | OPEN VALVES. |
| CHECK FILTER PRESSURE GAUGE: | DIRTY IMPELLER OR FILTER | CLEAN FILTER OR IMPELLER. |

ASSEMBLY DRAWING

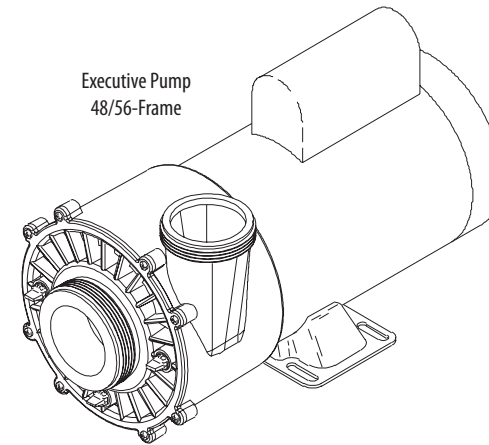

EXPLODED VIEW

