GET STARTED

audioBOMB Whaley™

SPECIFICATIONS

Speaker: 40mm*2 4 Ohm 5W
Frequency：60Hz-18KHz
Distortion：≤0.5%
Material：ABS+ Silicone
Size：67×70mm/205mm with tail
7 Charging Port / Line-in
Bluetooth version:V3.0+EDR
Bluetooth range: 10 meters
Effective Distance of the two speaker unit: 6-8M
Waterproof grade: IP65
Built-in Lithium battery: 3.7V, 550mAh
Charging Voltage：5V

TAKE A LOOK

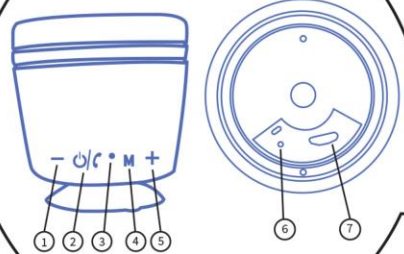

1 Press once for previous song.
Hold down to turn down volume.
2 Hold down for Power On/Off
Press once to Play/Pause song.
3 On-board Microphone.
4 Mode Button.
Press once to switch mode
between Bluetooth and Line-in
5 Press once for next song.
Hold down to turn up volume.
6 Reset Hole

GET CHARGED

Charging Your Device

To charge your Whaley, Insert the Micro USB into the speaker and the opposite end into a computer or adapter. When charging, a red LED indicator... ...will light up on the speaker. When the red light is off, it indicates the speaker is charged.

GET STARTED

Turning Power On

While speaker is off, locate the power button on side of the Whaley, hold down until you hear “Power On”.

Turning Power Off

While speaker is on, locate the power button on side of the Whaley, hold down until you hear “Power Off ”.

CONNECT TWO WHALEYS

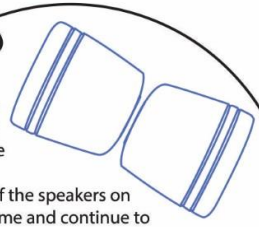

1 Make sure both speakers are turned off.
2 Turn both of the speakers on at the same time and continue to hold down for 7 seconds or until you hear two beeps back-to-back.
3 Then bring the bottoms of both speakers together until you hear “Pairing Succesful. Left channel, Right channel”.
4 To pair phone, press “M” button on left channel speaker. This will be your primary speaker.

To use an auxillary cable with your Whaley, simply plug the cord into the 3.5mm phone jack on the bottom of your speaker and press “M” to swith to Line-in mode. You should hear a voice say “Line-in” when done correctly

LINE-IN

WARRANTY

With this purchase, you get a 1-year manufacturer warranty. This does not protect agaisnt any defect or malfunction that is caused as a result of misuse, failure to follow operating instructions, abuse, or use with improper or faulty equipment . It doesn't cover incidental damages. Note: make sure tail or suction attachement is secure before putting in water. Take out of water when not in use to ensure device does not take damage from chemicals.

Connecting to your Bluetooth® Device

1 While speaker is on, locate the mode button on side of the Whaley, hold down until you hear “Pairing”.
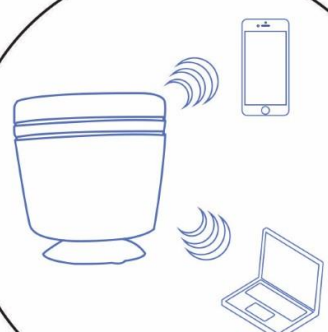
2 Your Whaley is now discoverable on your smart device. Make sure your Bluetooth is turned on in the settings of the device. Then find “Audiobomb Whaley” under devices and select pair.