


QuickNiche™ Repair Kit Installation Guide

(P/N 630047)

(To replace the PemNut - Use with model 620004)

Use the QuickNiche repair kit to replace the PemNut. The kit includes:


1. Repair bracket (Qty 1) P/N 630046
2. 10/24 x 1/2 SHH screw (Qty 2) P/N 630050
3. 14/10 x 1.5 PFH screw (Qty 2) P/N 98215100
4. Bronze pilot 10/24 SiBr screw (Qty 1) P/N 98220200

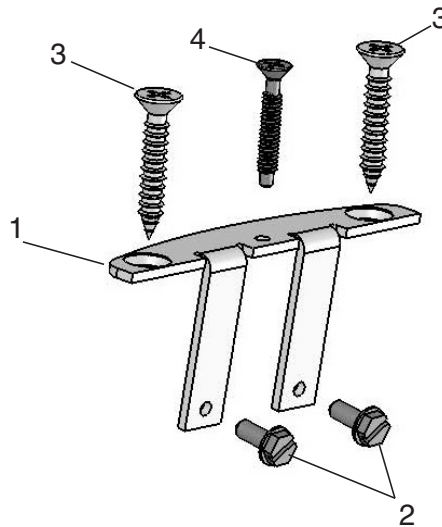


Installing the QuickNiche repair kit

To install the QuickNiche bracket:


1. Install the two hex screws into the bracket supports. The tip of the screws should be flush with the opposite side of the bracket.

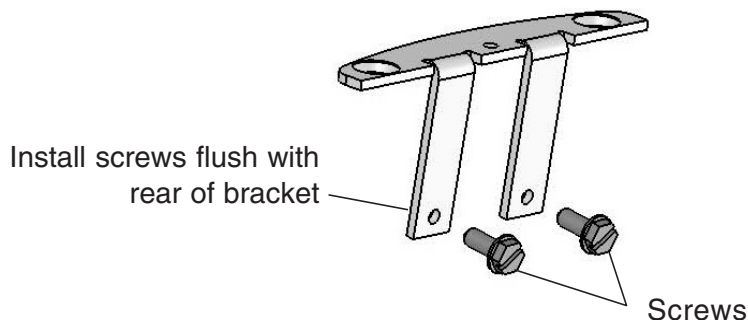


2. Remove the two screws from the top of the niche plastic face ring. Discard these screws. Use the longer replacement screws provided in the kit.

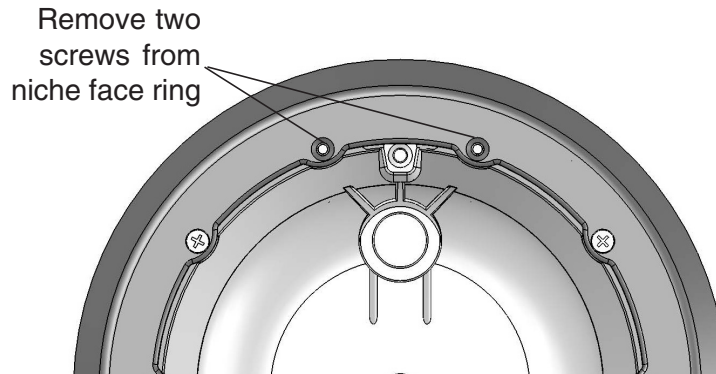

3. Position the bracket and installed screws on the front edge of the niche plastic face ring with the bracket supports inside the niche. Secure the bracket to the niche face ring with the two screws provided in the kit.

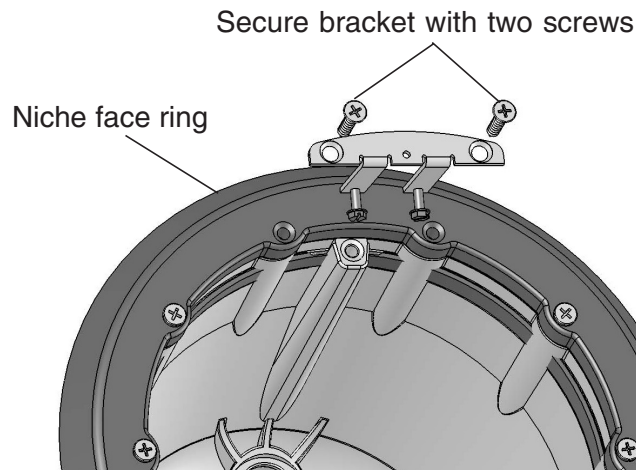

4. Tighten the two installed brass hex head screws on the bracket support against the steel ring inside the niche to secure the bracket.

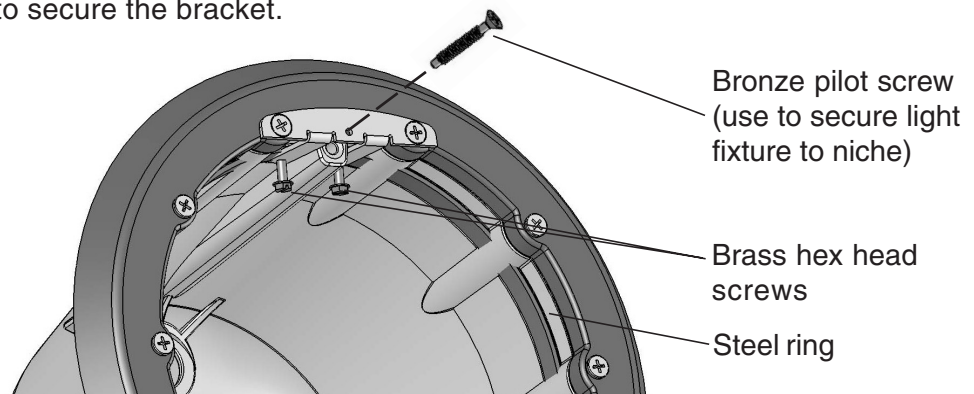

5. **Install the light fixture:** Use the bronze pilot screw (provided in the kit) to secure the light fixture to the niche bracket.