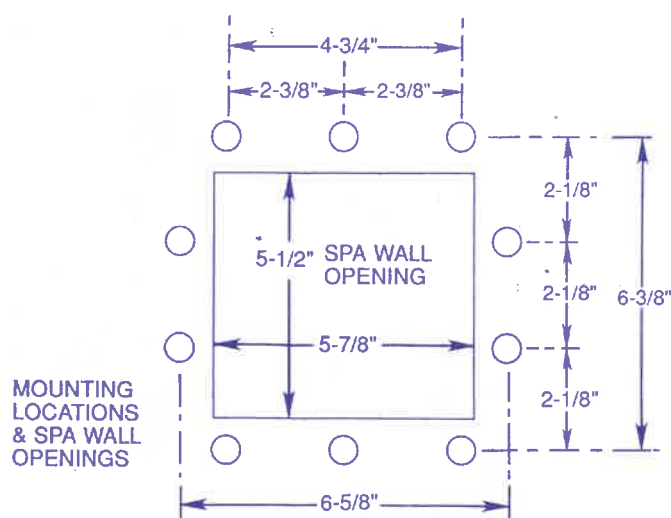
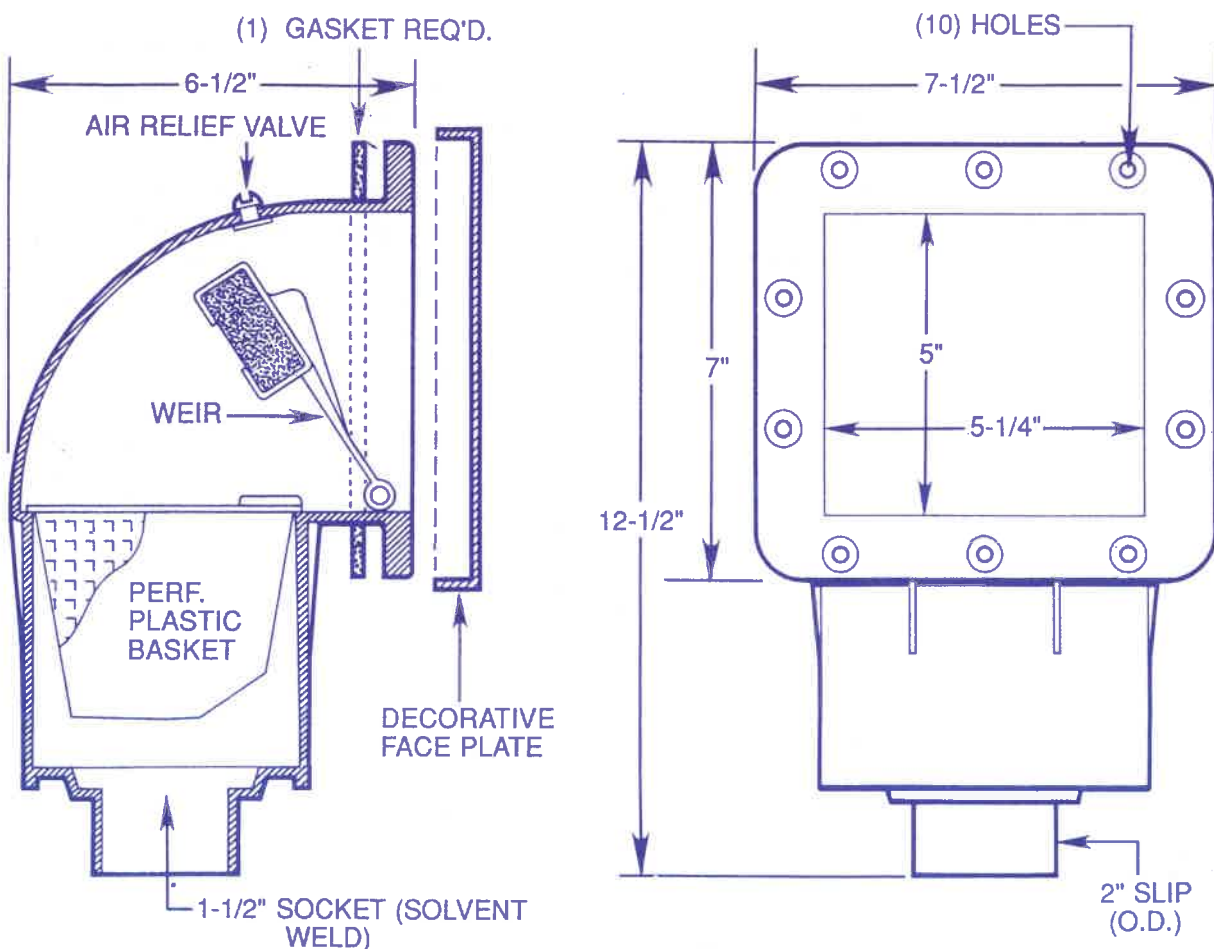


FRONT ACCESS SKIMMER – FG SPAS

SP-1099S

**IMPORTANT:**

During skimmer installation, air relief valve must not be restricted. Install at least one other suction/intake fitting. Sealing off the air relief valve or lack of a suction/intake fitting may cause a suction hazard.

NOTE: Not for Commercial Installation.



HAYWARD POOL PRODUCTS, INC.

Corporate Headquarters:

620 Division Street
Elizabeth, NJ 07207

Canada:

2880 Plymouth Drive
Oakville, Ontario L6H 5R4

U.S.A.:

1 Hayward Industrial Drive
Clemmons, NC 27012

Europe:

Parc Industriel de la plaine de l'Ain
Allée des Chênes
01150 Saint Vulbas
France

2935 Sidco Drive
Nashville, TN 37204

2875 Pomona Blvd.
Pomona, CA 91768

INSTALLATION INSTRUCTIONS

1. To mount skimmer, locate a flat surface on the inside spa wall (minimum 7-3/4" wide by 7-1/4" high). Note, average water level should be approximately at the mid-point of the skimmer opening.
2. Using gasket as template, mark the spa for a rectangular cut-out per inside skimmer body opening dimensions (5-7/8" wide by 5-1/2" high). Also using gasket as template, mark holes for mounting hardware.
3. Make rectangular cut-out. Check dimension by placing skimmer body into cut-out. Be sure skimmer flange fits flat over cut-out in spa wall.
4. With skimmer body still in cut-out, align holes to match spa wall as previously marked. Drill ten (10) 1/4" holes.
5. Remove skimmer body from cut-out.
6. Place a small bead of silicone sealer on the back side of the skimmer flange.
7. Place gasket on back of skimmer flange, aligning holes in gasket with flange holes.
8. Place an additional small bead of silicone sealer on the back of the installed gasket.
9. Position skimmer through opening in spa, aligning holes on skimmer and gasket with holes drilled.
10. Fasten skimmer to spa with mounting hardware provided.
11. Snap on SP-1099C white face plate provided with skimmer. Optional stainless steel face plate available (in lieu of white face plate).

OPERATING INSTRUCTIONS:

TO CLEAN SKIMMER BASKET

Fold weir forward and squeeze pins toward center to remove weir. Remove and clean basket.

TO ATTACH VACUUM CLEANER HOSE

Pull weir forward and squeeze pins toward center to remove weir. Remove basket. Fill hose with water and insert vacuum hose cuff into skimmer outlet. If adapter is required: first screw adapter into skimmer outlet, then press on vacuum hose.

