XCHSPOLE POLE & MOUNTING BRACKET | **XCHSPB** MOUNTING BRACKET
INSTALLATION INSTRUCTIONS

INCLUDED:


- Six carriage bolts – 3⁄16 in. (5 mm approx.) diameter
- Six nuts – 3⁄16 in. (5 mm approx.) diameter

1 • Dig a 12" x 12" x 18" (30 x 30 x 45 cm) hole.

• Mix and pour in three 90 lb. (40 kg) bags of cement.


• Make sure the pole is vertical and the opening in the wire sweep is accessible and unclogged.

NOTE: Make sure the cement pad is dry before continuing with the installation.

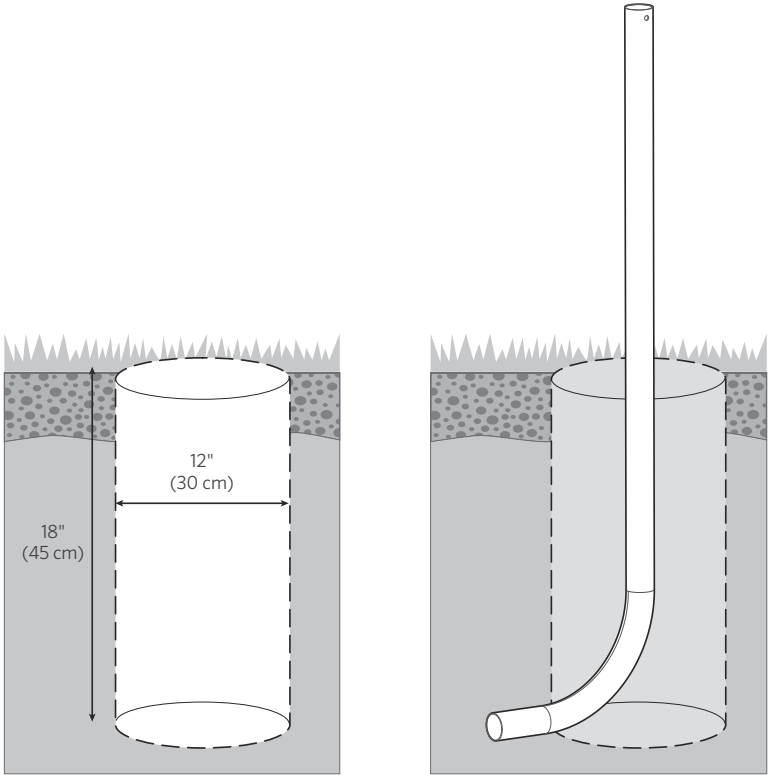


2 • Place the mounting plate on top of the pole.

• Secure the mounting plate with **two carriage bolts** and **two nuts** until the plate does not twist or turn.

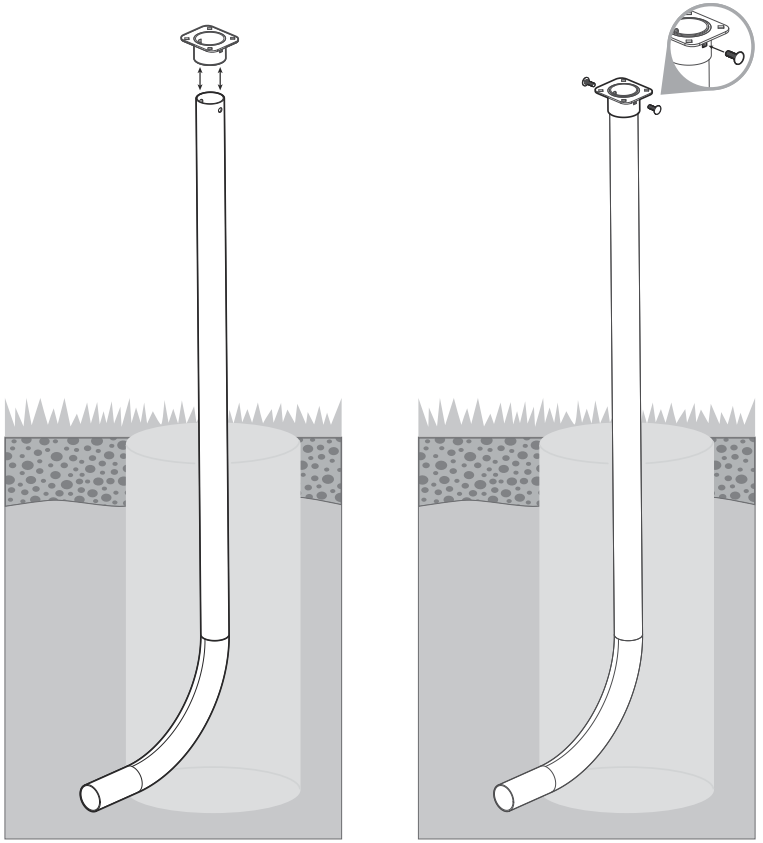

3 • Route all wires up the pole until at least 12" (30 cm) of wire extends out of the top.

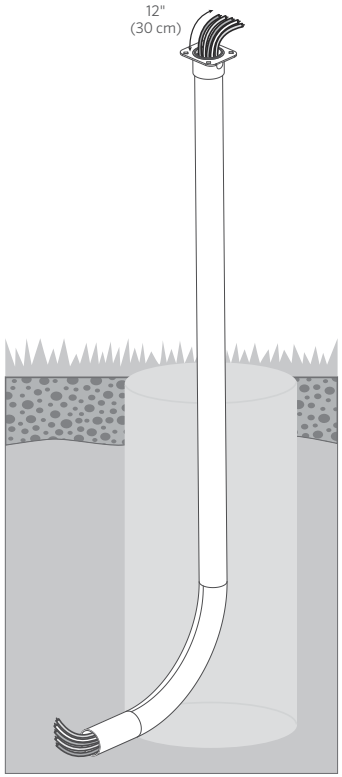


4 • Remove the door and bottom facepack cover from the XC-Hybrid controller.

• Place the controller on top of the mounting plate.


• Remove all four knockouts.

NOTE: Make sure that 12" (30 cm) of wires are now inside the controller and cannot slip back down into the column.

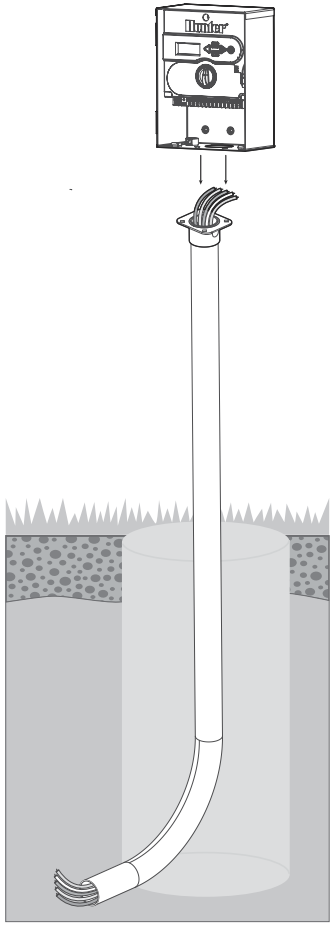

• Insert **four carriage bolts** into the bottom holes located underneath the controller base. Then tighten with **four nuts** until the controller does not twist and cannot be pulled off the mounting plate.

• Replace the facepack cover and the door to the controller.

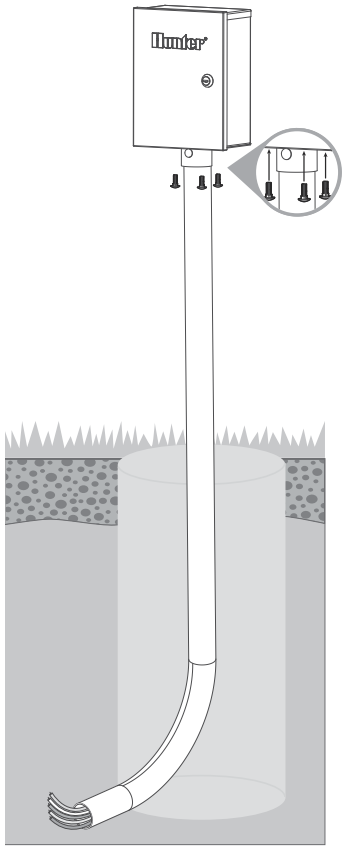

© 2017 Hunter Industries Incorporated | www.hunterindustries.com