


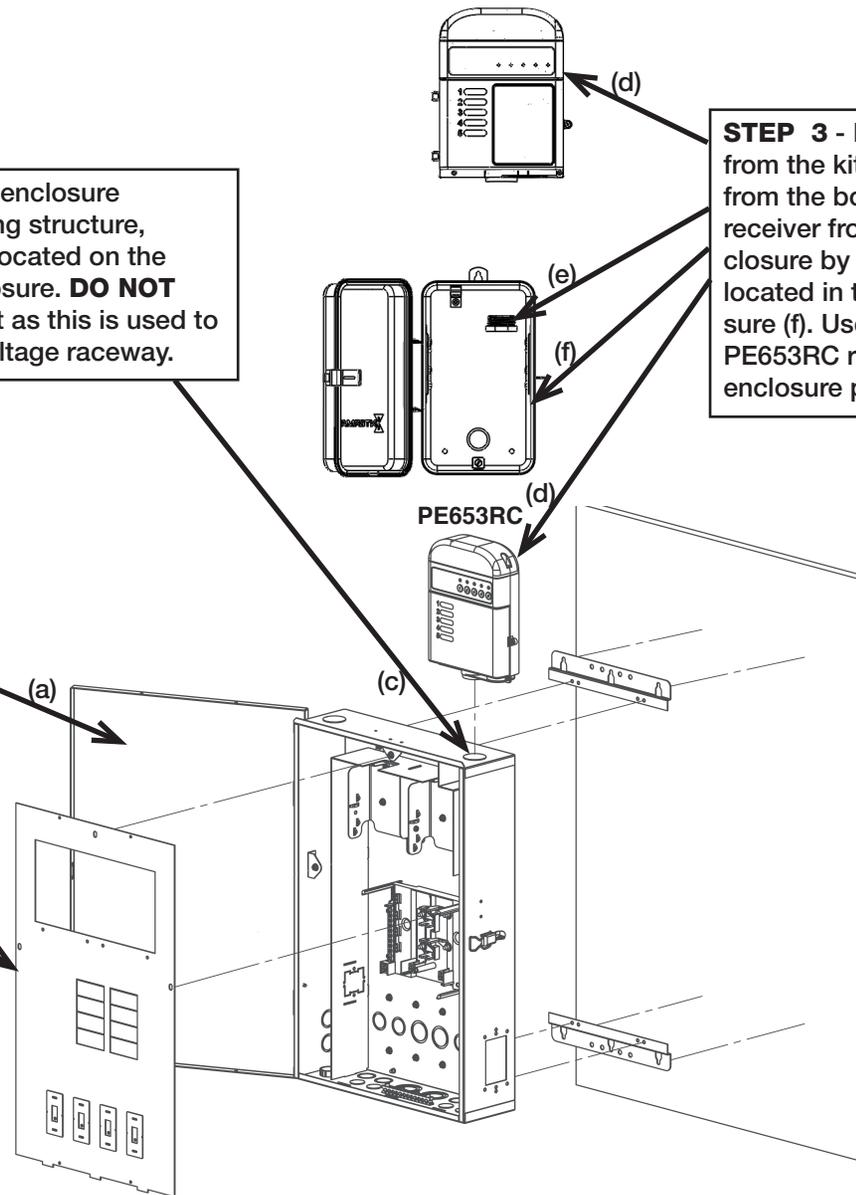

STEP 2 - Looking at the enclosure mounted on the supporting structure, remove the knockout (c) located on the top right side of the enclosure. **DO NOT** remove left side knockout as this is used to gain access to the low voltage raceway.

STEP 3 - Remove the MultiWave PE653RC from the kit and remove the entire control from the box. Remove the PE653RC (d) receiver from the top of the small steel enclosure by removing the plastic hub nut (e) located in the box. Discard the steel enclosure (f). Use the plastic hub nut to mount the PE653RC receiver to the top of the PE30000 enclosure previously mounted to the wall.

STEP 1 - Remove the enclosure (a) from shipping carton. Remove the deadfront (b) and mount the hanger brackets to the back of the enclosure. Mount enclosure to a structure capable of supporting it.



STEP 4 - Complete the wiring. Reference the PE653RC Installation and User Guide (g) for wiring instructions.

PE30065RCT3 Installation Instructions

*SEE INDIVIDUAL COMPONENTS
FOR DETAILED INSTRUCTIONS.