




## Extension Cable

Code 1763 [1 meter cable] or Code 1764 [5 meter cable].

### Cable and Guard Installation Instructions:

1. Turn meter OFF. Unscrew and remove the electrode collar by turning it counterclockwise.
2. Gently rock the electrode from side to side while pulling until it disconnects from the meter.
3. Carefully align the slots and pins of the Electrode (1) and plug the electrode into the Cable Socket (2). Be sure the O-ring (3) is between the probe shoulder and the threaded end of the cable connector.  
**CAUTION:** Take care to align pins carefully. Bent or broken pins will cause the meter to malfunction.
4. Slide the electrode into the metal Probe Guard (4) as shown. Insert the electrode collar (5) from the open end and tighten to seal to the electrode inside the probe guard.
5. Attach the other end of the cable to the Meter (6) by aligning the slots and pins and tightening the Retaining Nut (7).

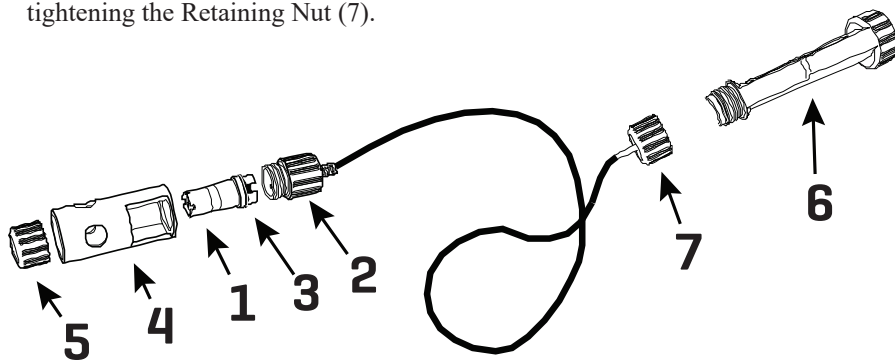

- |                 |                     |                  |
|-----------------|---------------------|------------------|
| 1. Electrode    | 4. Probe Guard      | 7. Retaining Nut |
| 2. Cable Socket | 5. Electrode Collar |                  |
| 3. O-Ring       | 6. Meter            |                  |

### LaMOTTE COMPANY

Helping People Solve Analytical Challenges

802 Washington Ave · Chestertown · Maryland · 21620 · USA  
800-344-3100 · 410-778-3100 [Outside U.S.A.] · Fax 410-778-6394  
Visit us on the web at [www.lamotte.com](http://www.lamotte.com)