

BENEFITS

- Easy to install
- No 2-way tape needed
- Keeps debris out of the track
- Designed to work with the pool cover track to keep all pieces of foam coping level

PROFILE OPTIONS



MM-CRC



MM-NC



MM-JAC



MM-ICC



MM-RC
(Retractable Cover)



MM-SC
(Stamped Concrete)



MM-TI
(Tile Inlay)

ABOUT US

Modern Moulding's foam cantilever pool coping will save you time and hassle. Our innovative 6-step process will cut hours off of your installation and cleanup time. Our seven different profiles allow for different edging profiles, retractable pool covers, stamped concrete and even a tile inlay.

Need a different profile?

Contact us today and we will create a custom profile for your needs.



MODERN MOULDING

☎ 519.969.8085

F 519.969.6315

TF 1.855.680.2482

✉ info@modernmoulding.com

mmpoolcoping.com

3808 Riberdy Rd.


Windsor, On
N8W 3W1

Start with foam cantilever coping profile of your choice (MM-NC 6" foam cantilever coping shown)

1




2

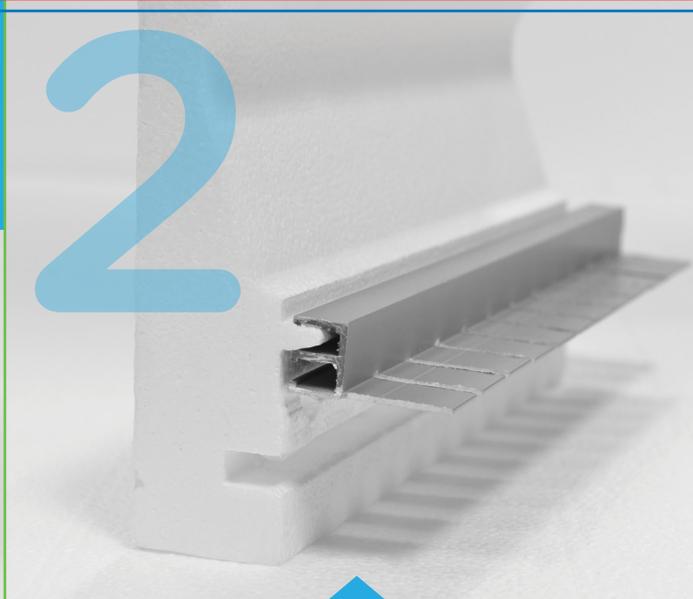

Insert 8' piece of foam coping into the cover track.

Insert clip horizontally into the cover track using the scribed line as your guide. Continue to space clips out every 12" around the pool.

BACK VIEW

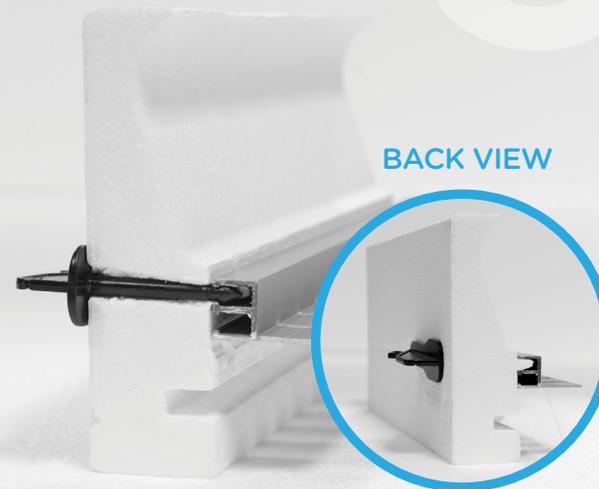

Rotate clip 90° vertically to lock it into the cover track.

4



When installing the next 8' piece, ensure pieces are tight together and tape over the joint.

HINT: It is also recommended to tape any radiuses horizontally before installation.



5

Pour cement and remove coping once cement has dried.

6



HINT: To help with removal, oil the foam coping pieces prior to pouring concrete.