

# Drain Rite® Replacement Top Instructions



## Necessary Tools

- Tin Snips or Saw
- 3/8" & 1 1/2" or 2" Chisel

## Optional Tools


- Caulk

## Coverage

Coverage: 80 lineal ft (24.384 m)






## Installation

- a. Break out center of drain using pliers.
  - b. Use a sharp 3/8" chisel to cut across the drain where you want to start and stop.
  - c. Using the chisel, cut a piece out of the sides at least 1" long.
- a. With tin snips, split the top of each side. (A saw can be used to split the top; be sure not to cut below the lineshown in drawing.)
- a. Using a 3/8" chisel, cut the thin inside brace flush with the heavy plastic ledge.
  - b. Using a 1 1/2" or 2" wood chisel, cut through outside as shown and remove outside piece. **It is important not to cut below the heavy plastic lip. Remove indicated area only!**
- a. Place a bead of caulk if desired.
  - b. Insert (cut to length) drain top.

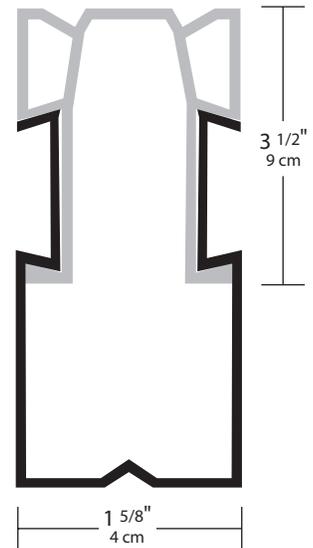

### Desired goal:

Remove the old top without cutting below the heavy plastic lip.

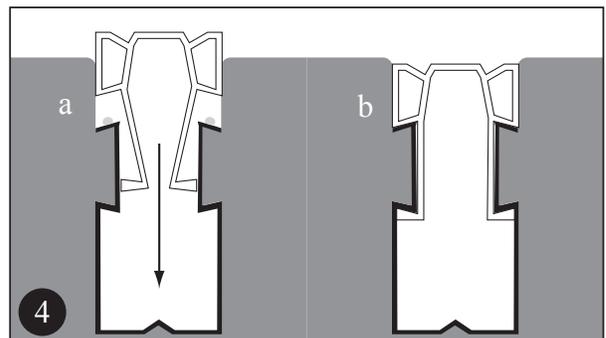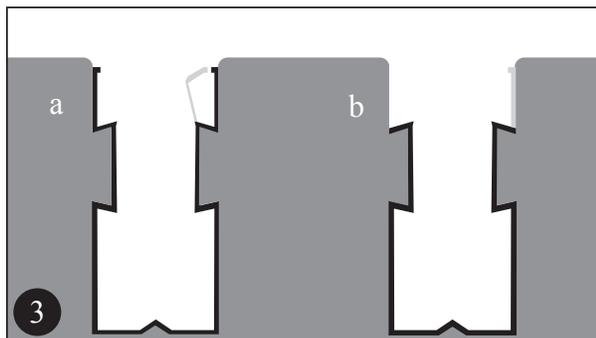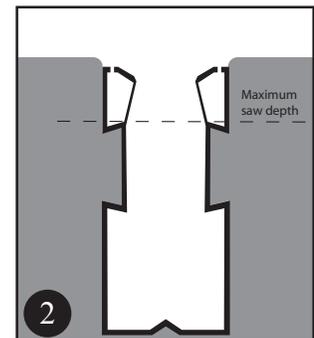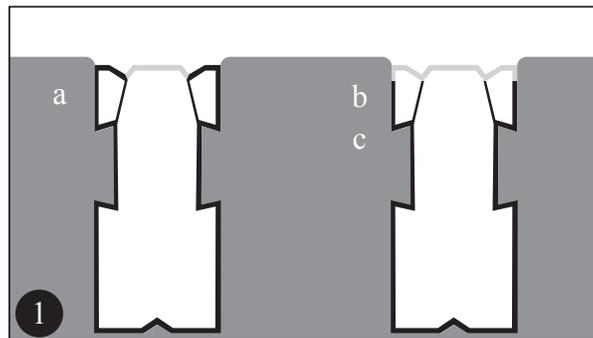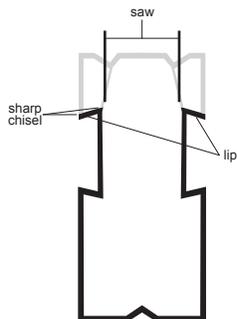

The manufacturer offers this product and Information in good faith, but without guarantee either expressed or implied, as conditions and methods of use of our product are beyond our control.