




SQUARE PIT

35 Full Block
26 Half Block
1 Metal Fire Box
1 Mason Bond 10 oZ.

ROUND PIT

29 Full Block
20 Half Block
1 Metal Fire Ring
1 Mason Bond 10 oZ.

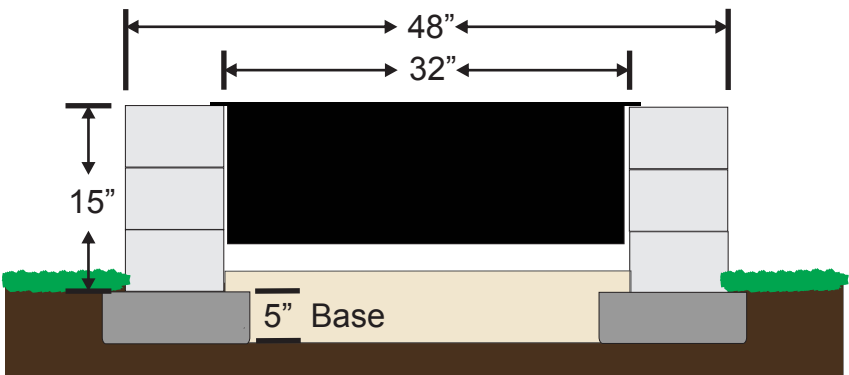

INSTALLATION INSTRUCTIONS

- ◆ Start by excavating a 6" deep area either 52"x52" square or a 52" diameter circle depending on your fire pit.
- ◆ Add a 5" thick leveling pad of base rock for the blocks to rest on.
- ◆ Compact and level the base rock to receive the first course of block.
- ◆ Place and level the first Madera block. Level each additional unit on the base course as you place it. (Optional) Leave two half blocks out on the base for greater air flow to the fire.
- ◆ Place the second and third row of blocks by off-setting the vertical joints. Start above a half block to begin. (See layout page for starting points.)
- ◆ Glue each layer of Madera blocks together with the included mason bond. Do not glue between each block.
- ◆ When finished, fill inside of fire pit with clean rock to desired height.
- ◆ Place the metal fire ring in the center of the fire pit with the flange resting on the top layer of block.




www.romanstone.com




**AMERICAN
MADE**



Timberwood Blend

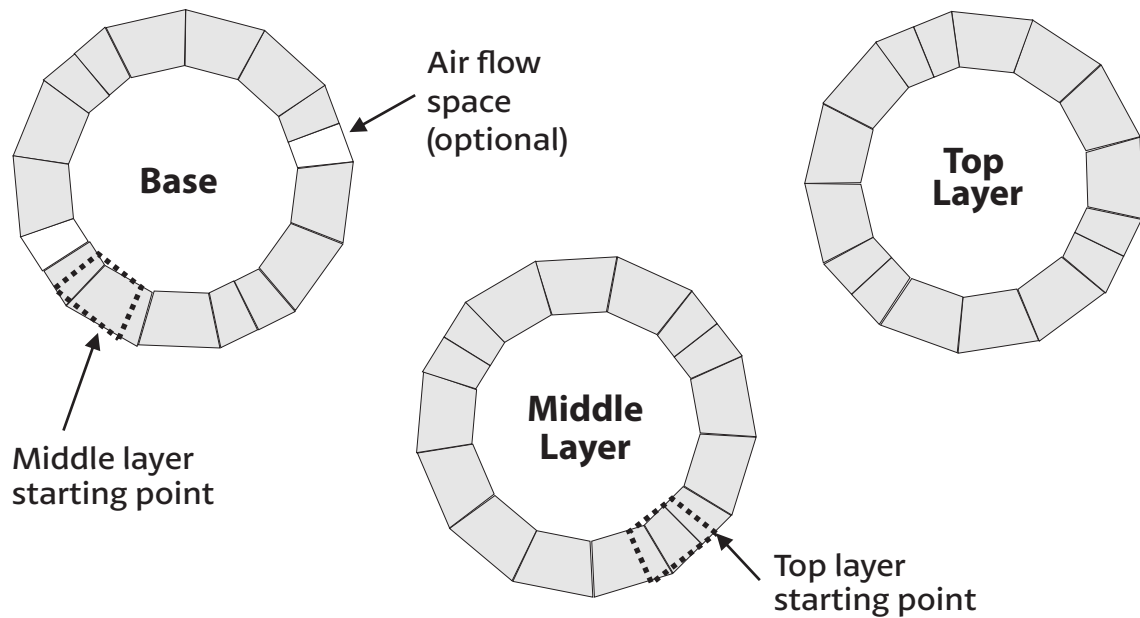

Fire Pit Layout Diagrams

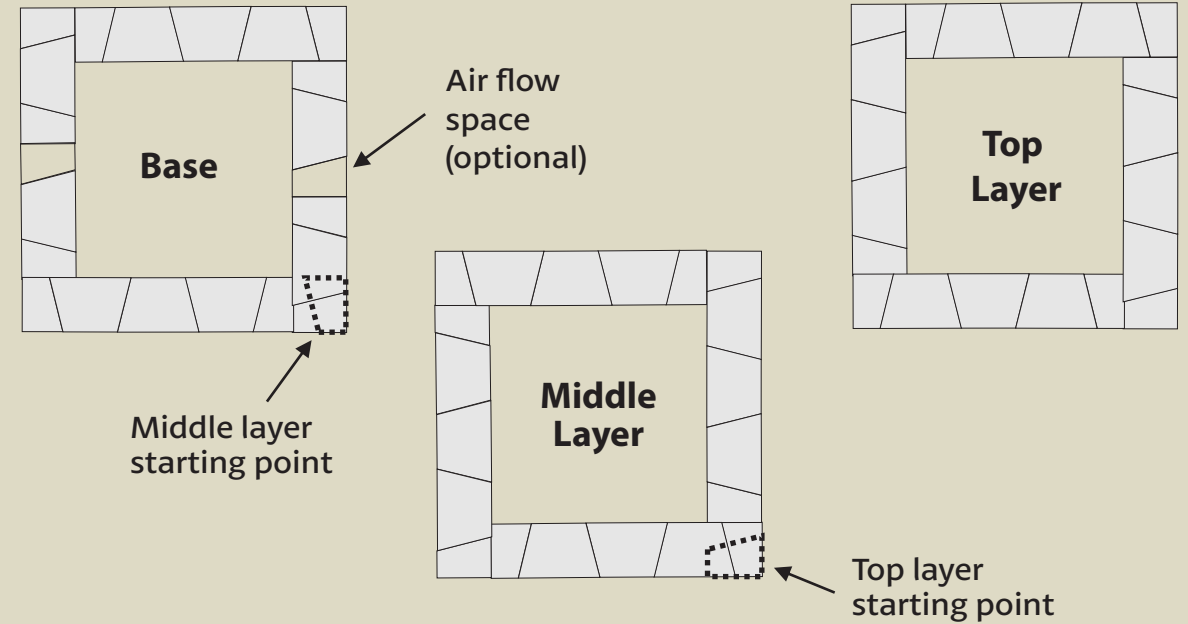

Bethany Ledge Blend