

# Installation guide

## STEPS

### General note

A wide range of options is available for building a Techo-Bloc staircase. The riser may have different heights, depending on the model of block chosen. These models include Mini-Creta and Suprema. Bullnose, Escala cap, Piedimonte, Portofino or the Prima 14" cap are used as a step and secured with concrete adhesive.

### Installation outline

#### 01 INSTALLATION OF THE RISER


Install the riser with the block model selected. For some models (e.g., Mini-Creta 3"), you will need to install two rows when building a riser. In this case, make sure you use the connectors in the right position. Fill in and compact behind the riser with crushed stone.

#### 02 INSTALLATION OF STEP

Install the step modules on top of the riser row. Stagger the joints between the riser and step. The step modules must be secured to the riser modules with concrete adhesive.

#### 03 INSTALLATION OF ADDITIONAL ROWS

Repeat steps 1 and 2.

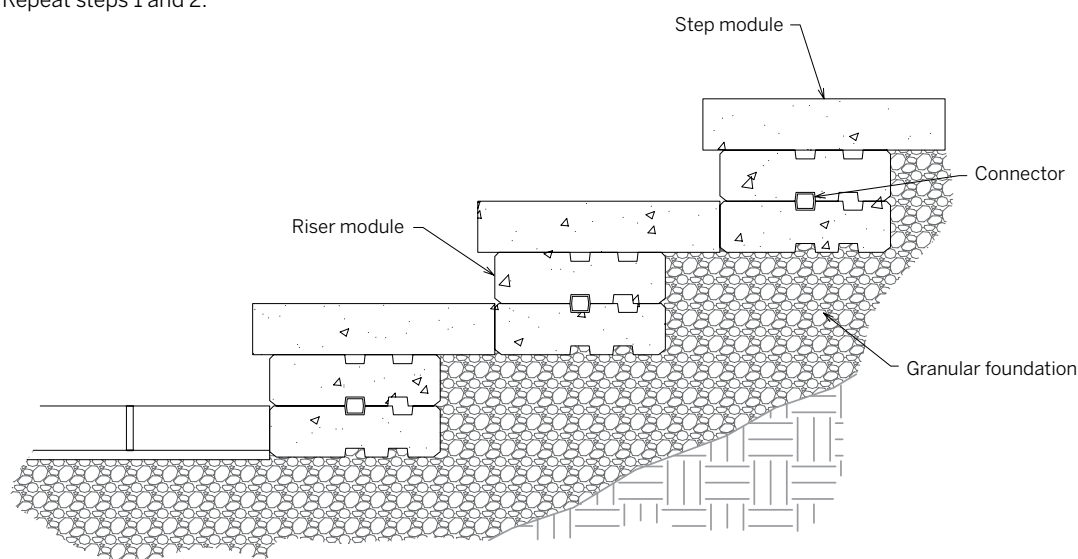


#### STEP INSTALLATION

Typical cross section


# Installation guide

## STEPS


**BALTIMORE**  
90 mm

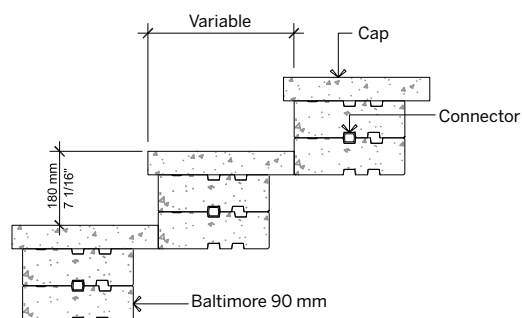


**BALTIMORE**  
180 mm

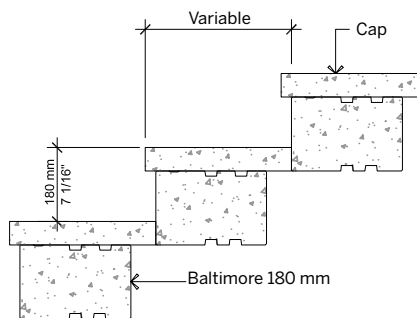


**MINI-CRETA 3"**

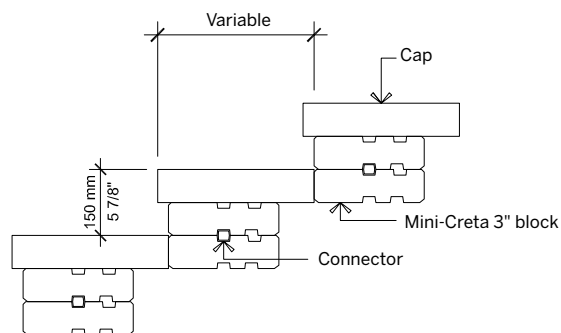


**MINI-CRETA 6"**

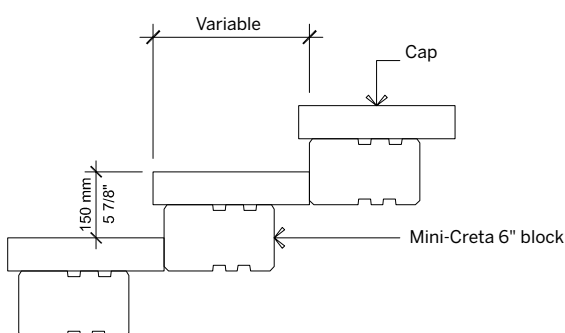

**PRESCOTT 2,25"**

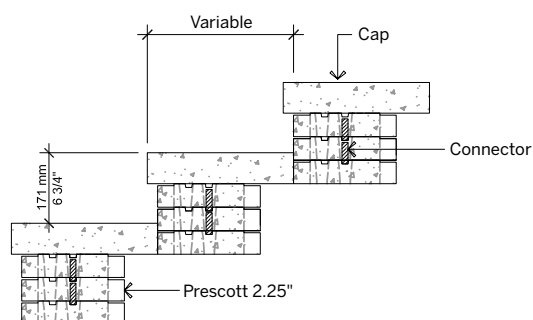

**RAFFINATO**  
90 mm

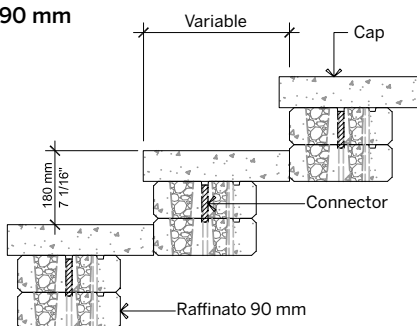


For all possible combinations of walls and caps, please refer to the correspondence table on page 134.


# Installation guide

## STEPS


### RAFFINATO 180 mm

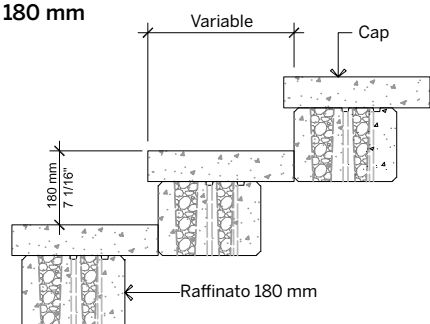

### SEMMA

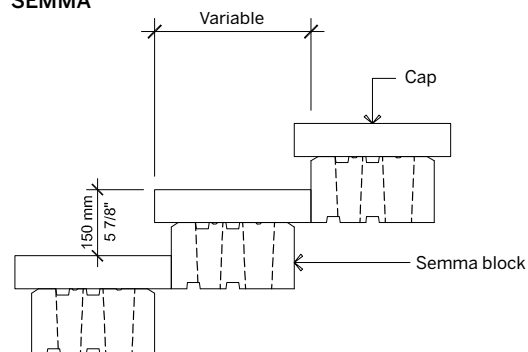

### SUPREMA

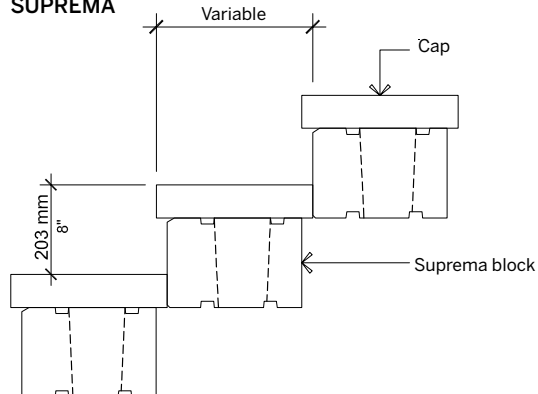


For all possible combinations of walls and caps, please refer to the correspondence table on page 134.


# Installation guide

## CAPS RADIUS

### AGED

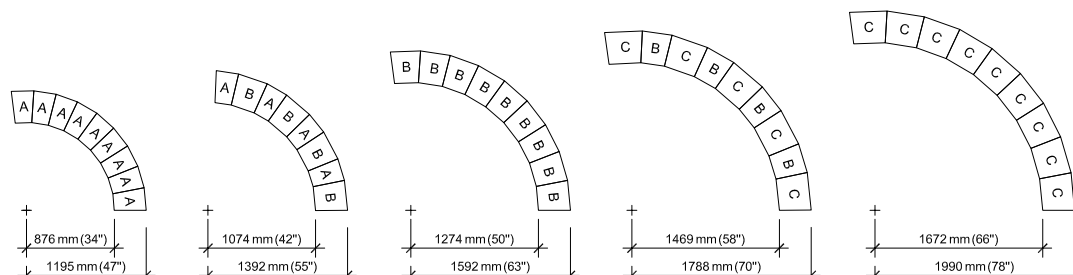

### MURO NATURALE

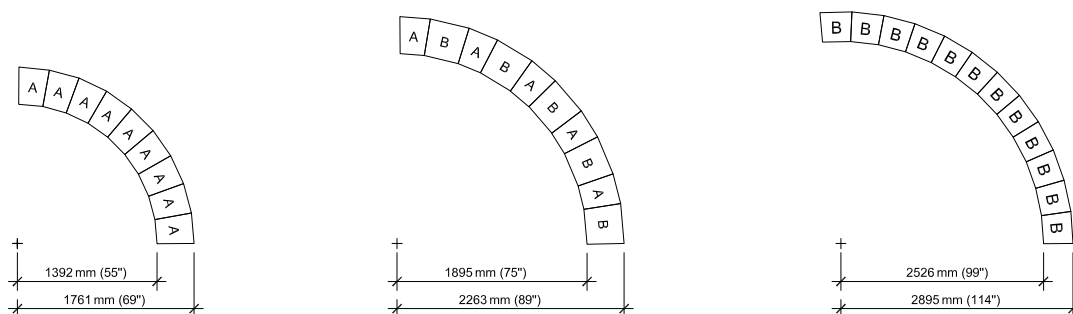

### PORTOFINO

