
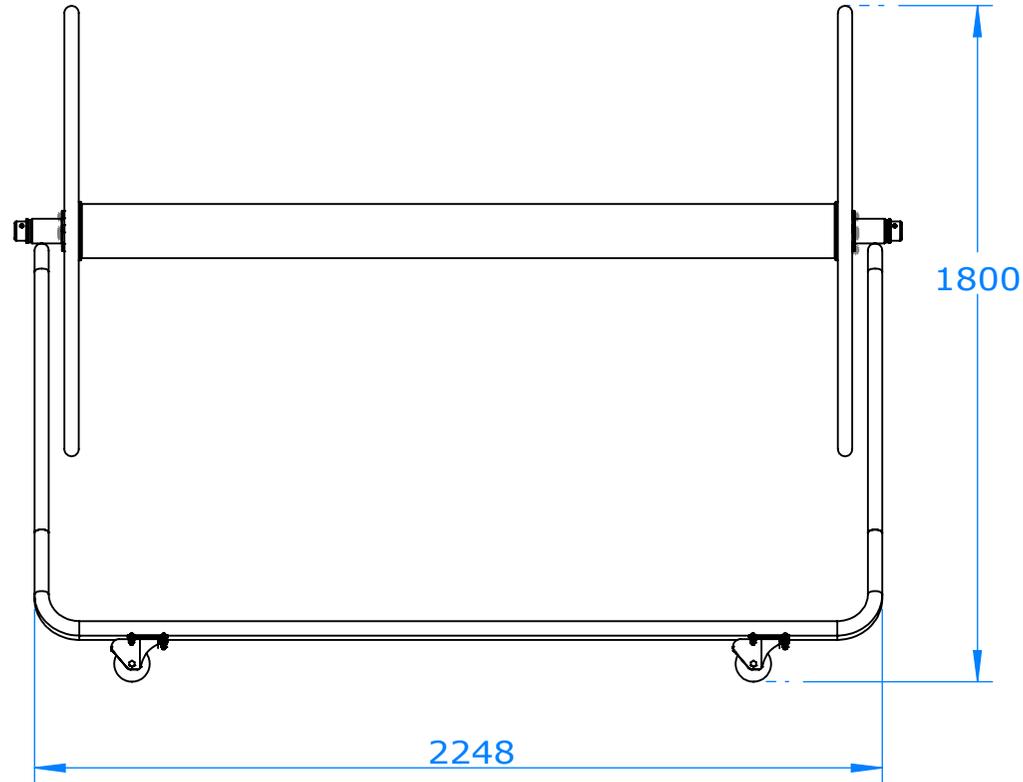


Storeel Assembly Instructions

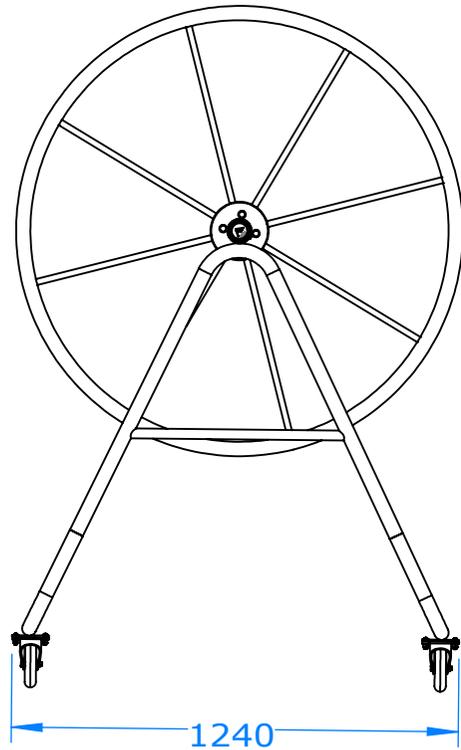


Note:

1. The Anti Wave Storage Reel provides convenient mobile storage for your Anti Wave racing lanes or water polo fields.
2. Sturdy powder-coated Aluminium construction with rugged nylon castors.
3. Holds Six (6) 25 m Midi 110 lanes, or Four (4) 25m Maxi 150 lanes.

 <p>antiTM PROPRIETARY AND CONFIDENTIAL The information contained in this drawing is the sole property of ANTI WAVE, any reproduction in part or as a whole without the written permission of ANTI WAVE is prohibited.</p>	Project Name: Storeel			Product Name: Assembly Instructions			Project No. AWE010	Product No.
	Drawn	Brian	Scale	1:20	Patents	2001285610; 7100219; 4048677; 01818714.5 & 2003/2920 e.g.	Drawn Date 2015/12/15	Verify Date
	©ANTI WAVE 2015							

Storeel Assembly Instructions

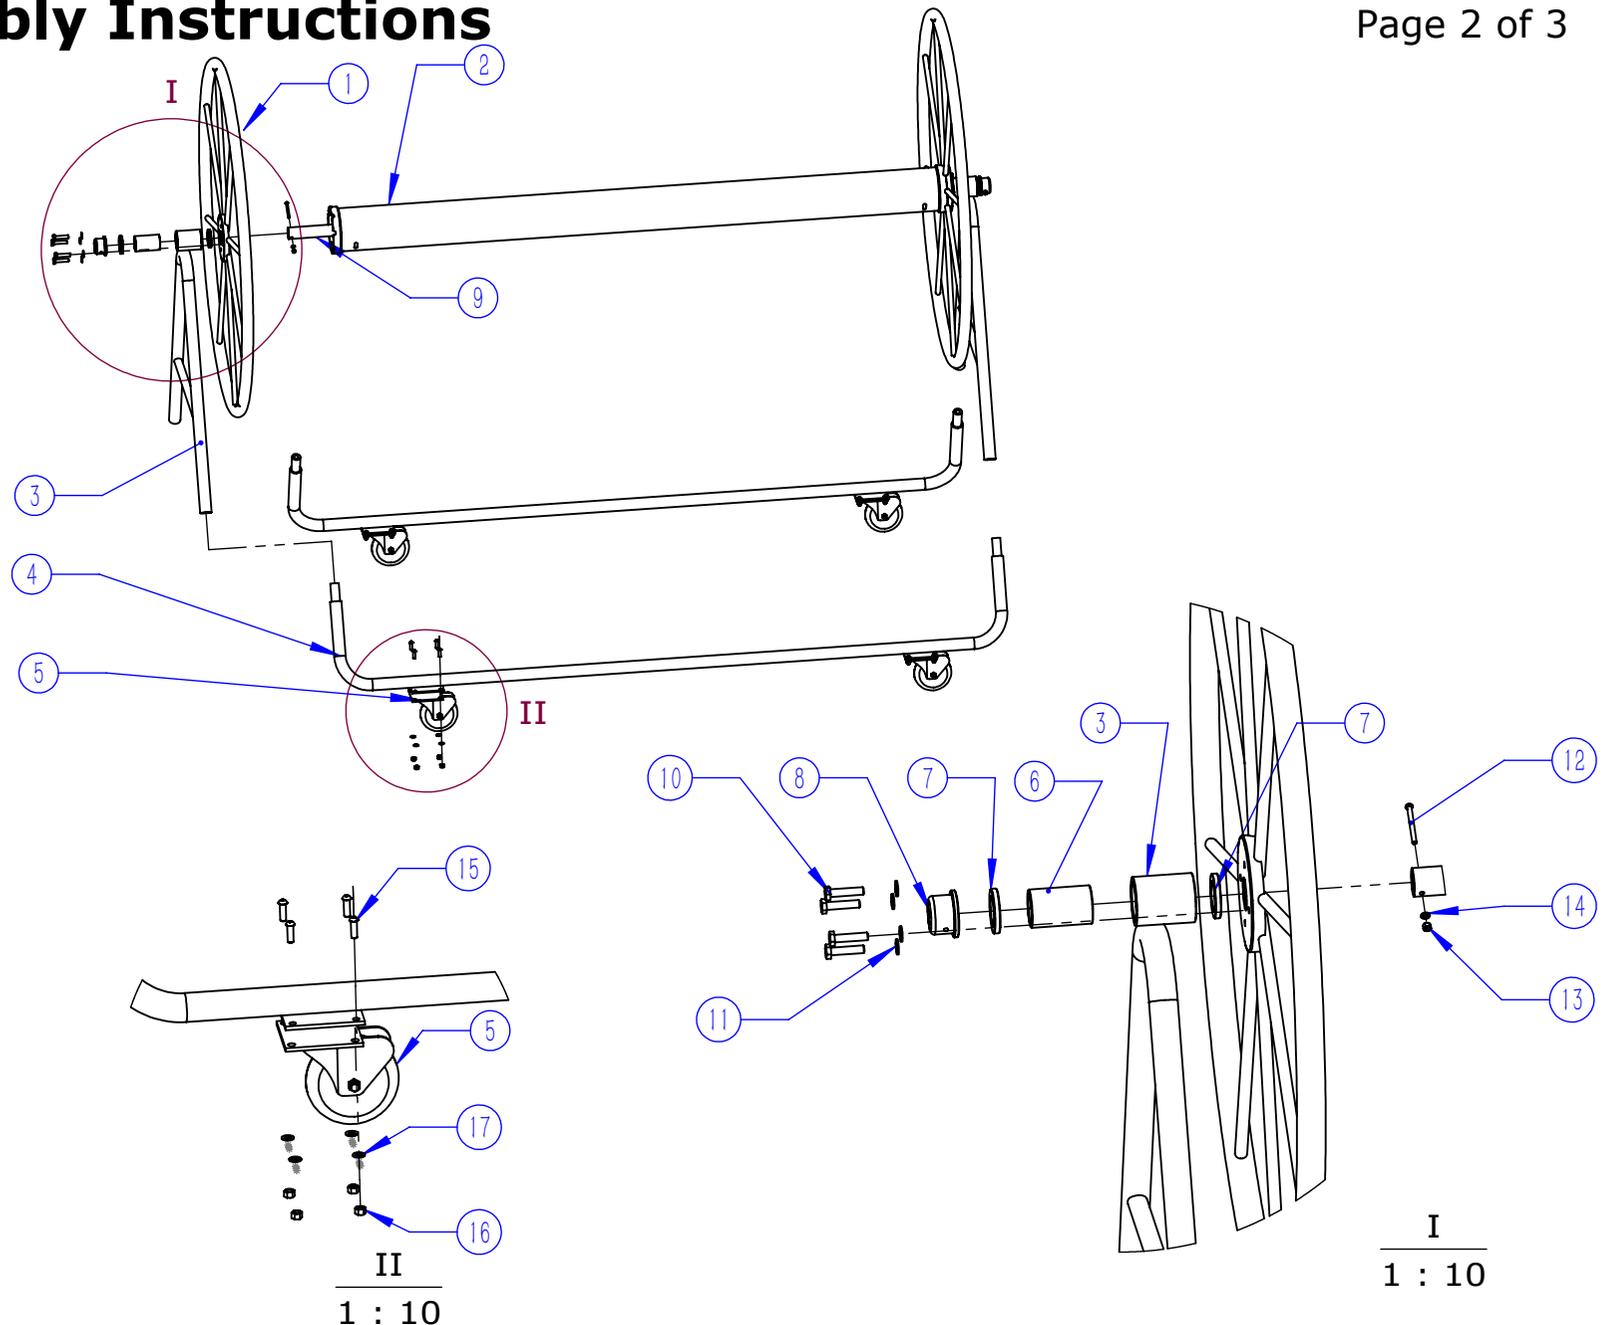


NO.	Name	Qty
1	Disc	2
2	Axle	1
3	"A" Frame	2
4	Chem Set Anchor	2
5	M10 Lock Nut and Washer	4
6	Nylon Bush	2
7	Nylon Washer	4
8	FRP Axle Cap	2
9	Aluminium Dowel	4
10	M10x45 Hex Bolt	8
11	M10 Washer	8
12	M6x80 Round Head Bolt	2
13	M6 Lock Nut	2
14	M6 Washer	2
15	M8x20 Round Head Bolt	16
16	M8 Lock Nut	16
17	M8 Washer	16

anti™ PROPRIETARY AND CONFIDENTIAL
 The information contained in this drawing is the sole property of ANTI WAVE, any reproduction in part or as a whole without the written permission of ANTI WAVE is prohibited.
 ©ANTI WAVE 2015


Project Name: Storeel				Product Name: Assembly Instructions				Project No. AWE010		Product No.			
Drawn Brian				Scale 1:25				Patents 2001285610; 7100219; 4048677; 01818714.5 & 2003/2920 e.g.		Drawn Date 2015/12/15		Verify Date	

Step1

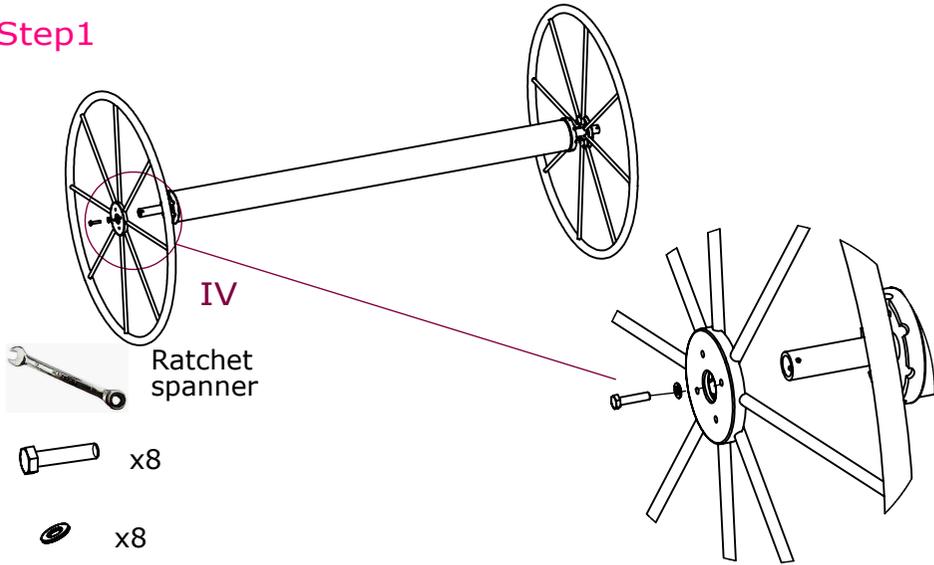


Use M10x45 Hex Bolts and Washers to fix the 2 Discs to both ends of the AXLE

Step2

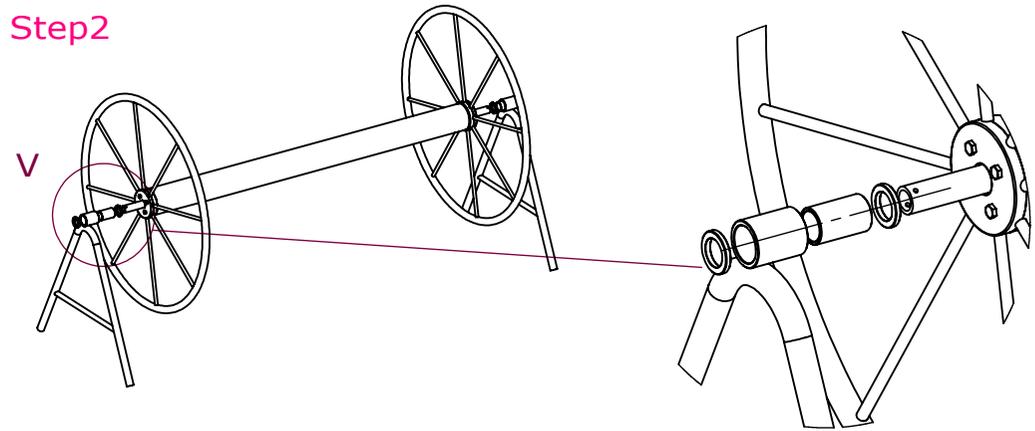


Slip the Nylon Washer, Nylon Bush, the top tube of "A" Frame and Nylon Washer on both ends of the Axle.

Step3

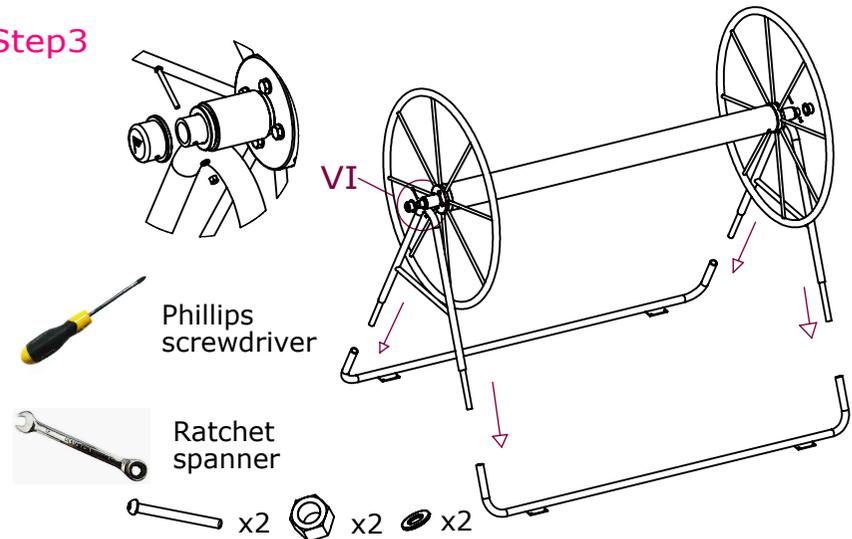

Put the "U" Frame on the ground as above, connect the "A" Frame and the "U"Frame, then use M6X80 Round Head Bolts, Washers and Lock Nuts to fix the Axle Cap to both ends of the Axle.

Step4

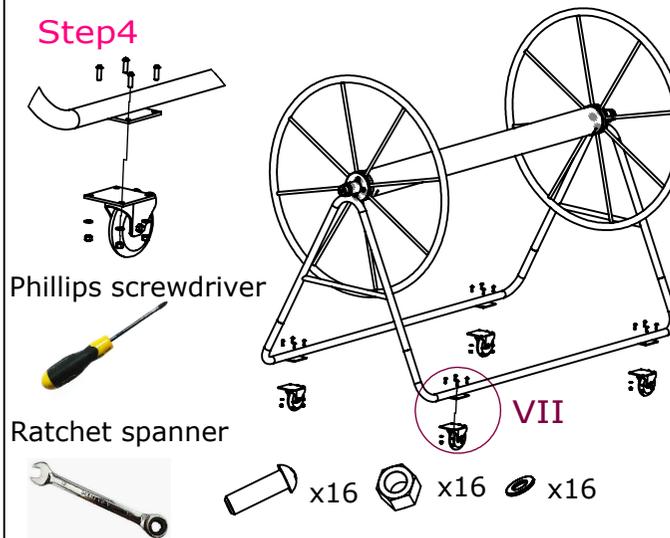

Use M8X20 Round Head Bolts, Washers and Lock Nuts to fix the Caster Wheel to the plate of "U" Frame, then place the Cover over the StoReel.

Necessary Tools

Phillips screwdriver



Ratchet spanner



Necessary personnel : 1 person