


INSTALLATION MANUAL

STARZTRUCK® driving your pool clean®

AUTOMATIC SUCTION POOL CLEANER

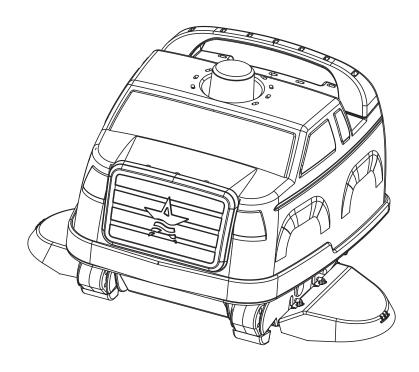

877.768.2717 FAX: 877.276.POOL (7665)
Outside the U.S.: +1.805.620.5060 FAX: +1.949.336.1940
www.aquastarpoolproducts.com info@aquastarpoolproducts.com



THE STARZTRUCK AUTOMATIC SUCTION SIDE POOL CLEANER FEATURES:

- Programmed movement for better cleaning
- Efficient, quiet operation
- Highly engineered for durability
- Simple installation, no additional tools required
- Vinyl/fiberglass or concrete
- Easy grip roll bar handle
- Private label grill insert available
- Patent-pending design



KIT INCLUDES CLEANER, NINE CONNECTOR HOSES, ONE LEADER HOSE, FLOW GAUGE, REGULATOR VALVE, SKIMMER CONE, SAFETY VACUUM LOCK WALL FITTING AND OWNER'S MANUAL.

AVAILABLE COLOR COMBINATIONS				
TOP/BOTTOM/HANDLE&GRILL/HOSE	PART#	TYPE	PART#	ТҮРЕ
White/White/White	SZT0101-H	Concrete	SZTV0101-H	Vinyl/ Fiberglass
Black/Black/Black	SZT0202-H	Concrete	SZTV0202-H	Vinyl/ Fiberglass
Grey/Black/Black/Grey	SZT0302-H	Concrete	SZTV0302-H	Vinyl/ Fiberglass
Deep Blue/White/White	SZT1001-H	Concrete	SZTV1001-H	Vinyl/ Fiberglass
Aqua Blue/White/White	SZT1601-H	Concrete	SZTV1601-H	Vinyl/ Fiberglass

See pages 14-16 for a complete list of replacement parts and kits available from ProStar™ Replacement Parts, a division of AquaStar Pool Products.

THE STARZTRUCK AUTOMATIC POOL CLEANER

Thank you for purchasing the StarzTruck automatic pool cleaner. AquaStar proudly manufactures and assembles all of their products in the U.S.

The StarzTruck automatic pool cleaner works from the **suction side** of your pool filter system – subject to the GPM (gallons per minute) of the suction line. Designed to operate and install simply with most swimming pools, occasionally additional hoses and/or parts are needed to complete your special situation. For technical assistance and parts availability, call AquaStar Pool Products at 877.768.2717.

Keep this installation manual on file – with your receipt, purchase date and serial number. The installation instructions are also available online at www.aquastarpoolproducts.com.

Always remove the StarzTruck automatic pool cleaner and hoses before swimmers enter the pool. It is not a toy and is not intended for children to play with.

When removed from the pool, keep the StarzTruck automatic pool cleaner disconnected and stored in a shaded safe place – away from all chewing animals! The hoses must be stored straight. DO NOT COIL!

Carry the StarzTruck automatic pool cleaner by the handle only.

With sidewall suction connections, always install a USPC-approved safety vacuum lock (AquaStar p/n VLK15Txx). When the StarzTruck automatic pool cleaner is removed, make sure the safety vacuum lock wall fitting cap is securely covering the sidewall suction port and snapped shut.

SAFETY FIRST!

REMEMBER THESE IMPORTANT FACTS!

Before installing the StarzTruck automatic pool cleaner:

- Manually clean/vacuum the pool and clean all skimmer, pump and debris baskets.
- · Clean or backwash the filter.
- Check that the water is at its proper level.
- Check water chemistry make sure the pool is free from excess algae to ensure proper operation of StarzTruck automatic pool cleaner.

Never use the StarzTruck automatic pool cleaner to remove plaster/pebble debris in new or remodeled pools.


Always remove the StarzTruck automatic pool cleaner before backwashing or chemically shocking the pool.

STEP 1: CONNECTING AND SUBMERGING THE HOSES AND CLEANER

There are nine connector hoses and one leader hose with a grey hose cuff. The hose cuff connects to the top of the StarzTruck automatic pool cleaner (see Fig. 1).

Connect the StarzTruck automatic pool cleaner hose sections together by pushing and twisting the tapered male connector end of each hose firmly into the open female end of the adjacent hose section (see Fig. 2). Depending on the size and shape of your pool, all hose sections might not be used. The hose should reach from the skimmer or safety vacuum lock wall fitting (AquaStar p/n VLK15Txx) to the furthest point in the pool plus one extra hose section. If the hose is not long enough, it will be necessary to purchase additional hose sections from your pool dealer. After the correct hose length has been assembled, fill the hose completely with water by lowering the attached StarzTruck automatic pool cleaner and then vertically pushing the hose down, allowing all the air to escape. When the hose is full, remove the StarzTruck automatic pool cleaner from the hose and insert the flow gauge into the leader hose. Make sure the flow gauge is under water (see Fig. 3).

If optional leaf canister (AquaStar p/n HWN152) is purchased, install between first and second hose sections (see Fig. 4).

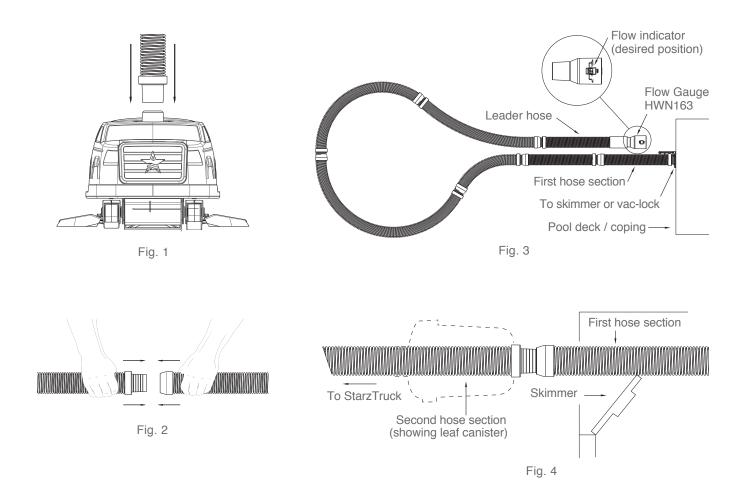

STEP 2: CONNECTING TO SUCTION

Connect the skimmer cone adapter (p/n HWN152) to the regulator valve (p/n HWN161) and then insert the skimmer cone into:

- A. The suction port of the skimmer (see Fig. 5) or
- B. The wall port safety vacuum lock without a three-way or ball valve (see Fig. 6) or
- C. Without the skimmer cone and regulator valve insert the male end of the hose directly into the safety vacuum lock wall fitting port with a three-way or ball valve (see Fig. 7)



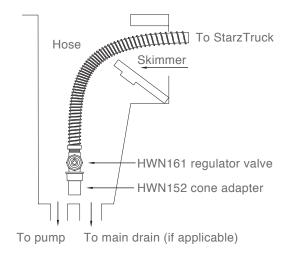


Fig. 5

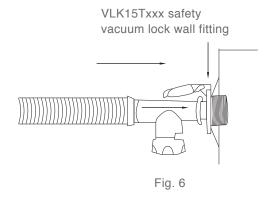

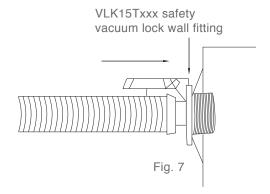

STEP 3: ADJUSTING YOUR STARZTRUCK AUTOMATIC POOL CLEANER

Check the water flow reading on the Flow Gauge (refer to step 1, Fig. 3). The black disk should be in the box between the "MIN" and "MAX" markings. If the setting is higher than required with the black disk outside of the box on the "MAX" side and you have connected your hose to the skimmer, it will be necessary to reduce the vacuum/water flow by using a valve or valves in the filter system, or the AquaStar HWN161 Regulator Valve or an optional AquaStar Automatic Skimmer Vacuum Plate designed to adjust vacuum/water flow. To install the HWN161 Regulator Valve, turn the filter system off. Remove the hose from the HWN152 Skimmer Cone, and after closing the Regulator Valve (rotate the blue collar clockwise/toward + until closed/tight), insert the Regulator Valve into the Skimmer Cone, and insert the hose end into the Regulator Valve (see Fig. 5 on previous page).

Turn the filter system on and allow it to run long enough to eliminate any air in the system. Turn the blue collar counter clockwise until the proper reading appears on the gauge.

If you have connected your hose to the AquaStar Vacuum Lock, it will be necessary to adjust the vacuum/ water flow using the three-way valve at the filter system. The handle on the valve should be turned so that the Flow Gauge which is installed in the StarzTruck hose reads properly (refer to Fig. 3 on page 2). After the three-way valve has been properly adjusted, the vacuum gauge at the three-way valve should be marked so that the water flow can be adjusted by referring to the gauge at the valve rather than reinstalling the Flow Gauge in the hose each time an adjustment is necessary. Once the Flow Gauge has a proper reading, remove it from the leader hose and reattach the StarzTruck automatic pool cleaner. Submerge the StarzTruck back into the pool until it reaches the bottom for operation.

STEP 3: ADJUSTING YOUR STARZTRUCK AUTOMATIC POOL CLEANER continued

Some skimmers have a vari-flow or diverter valve in the bottom of the skimmer. This valve can be turned to regulate skimming and main drain suction. Turn the valve to full skim and then adjust the Flow Gauge vacuum gauge by turning the valve toward main drain suction. Usually this valve is the same size as the hose end, and it will therefore be necessary to purchase an HWN158 Hose Connector (see Fig. 8). After the proper gauge reading has been established, the diverter valve will have to be locked in place with a wedge of some kind so that it won't change position with operation of the StarzTruck.

Periodically check the water flow/vacuum to be sure that the StarzTruck is operating as efficiently as possible. Remember, too much vacuum is just as bad as too little.

Periodically check to make sure that the StarzTruck hose is securely attached to its suction source (i.e. Skimmer, Skimmer Vacuum Plate, Safety Vacuum Lock, etc.).

Disconnect the StarzTruck hose from the skimmer/regulator valve, or, if using a dedicated line, turn cleaner valve off before backwashing, so that you're not restricting water flow.

Never coil the StarzTruck hose. Damage caused by coiling the hose is not covered under the warranty.

When the StarzTruck is out of the pool, always disconnect the leader hose from the StarzTruck head.

Always carry the StarzTruck by the molded-in handle. Do not carry it by the hose.

When swimming in the pool, remove the StarzTruck from the water.

If you are going to super-chlorinate, shock or add gas chlorine to your pool, make sure the cleaner and hose are removed before doing so.


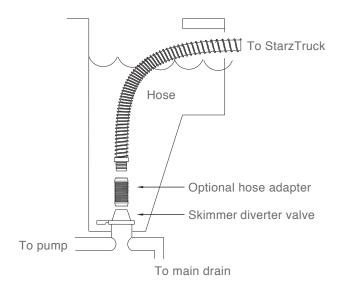



Fig. 8

STEP 3: ADJUSTING YOUR STARZTRUCK AUTOMATIC POOL CLEANER continued

Observe your StarzTruck automatic pool cleaner in operation at higher speed with dual or variable speed pumps. Adjust the regulator, three-way or ball valves to speed up or slow down the cleaner (see Fig. 9). When the StarzTruck automatic pool cleaner seems to be spending too much time against steps, vertical walls and other obstructions, turn the rear flap tension adjuster to position I (see Fig. 10). The rear flap adjuster is preset to II. Sometimes adjusting your flow valve up or down will help. Nevertheless, custom pools with interior bar stools, fountains, planters, etc., will require someone to physically free the cleaner from its entrapment.

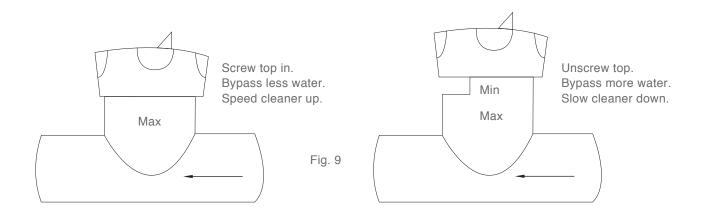

The StarzTruck automatic pool cleaner will climb vertical walls in concrete and fiberglass pools (not vinyl) if there is at least a 12-inch radius where the floor meets the walls. Because of the internal programmed gear box, the cleaner will not climb the wall every time. Likewise, it will not always go all the way up the wall. If the StarzTruck automatic pool cleaner is not sticking to the wall, set the rear flap to position II (see Fig. 9) and/or adjust your regulator valve(s). If the cleaner climbs above the waterline and sucks air, set the rear flap to position I (see Fig. 10) and/or adjust your regulator valve(s).

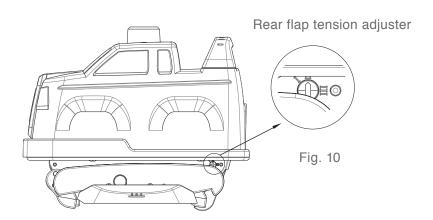


CHECK THE CONDITION OF THE SHOES, WINGS AND FLAPS PERIODICALLY

The shoes and wings have wear indicators on their sides and should be checked occasionally to determine if they need replacing. The shoe wear indicator is a line on the side of the shoe that appears as a difference in texture. When this texture difference is no longer visible at the bottom of the shoe when viewed from either side, the shoes must be changed (see Fig. 11). Also on the side, the wing wear indicator is a horizontal line which has three vertical lines above it. When you can no longer see the horizontal line, the wings must be changed (see Fig. 12 on page 8).

SHOE REPLACEMENT

- A. Turn unit upside down.
- B. Insert screwdriver between foot and shoe on one of the pods (see Fig. 11).
- C. Using a lifting motion, remove the shoe from the foot.
- D. Dip a new shoe in water and attach the shoe to the foot, making sure to put the small post into the small hole and the large post into the large hole. These posts and holes are different sizes to prevent the shoes from being improperly installed.
- E. Repeat steps b, c and d for each shoe.

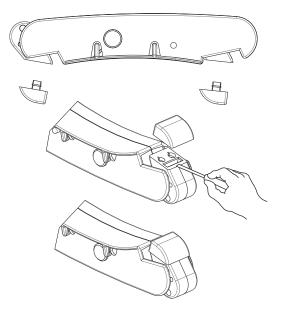



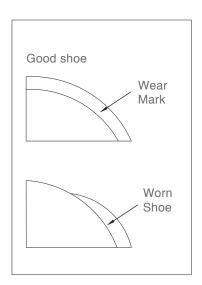


Fig. 11

WING REPLACEMENT


- A. Using a screwdriver, remove the plugs from both pods (see Fig. 12).
- B. Remove the old wings by bending the wings up toward the sides of the cleaner, and lift them off their hooks (see Fig. 13). If any of the wing hooks are broken, take the StarzTruck automatic pool cleaner to your dealer for pod replacement as the cleaner will not function properly if the wings are not properly attached.
- C. Replace the wings, making sure that you match the "L" (left) and "R" (right) of the pods.
- D. Replace the pod plugs and tap them into place

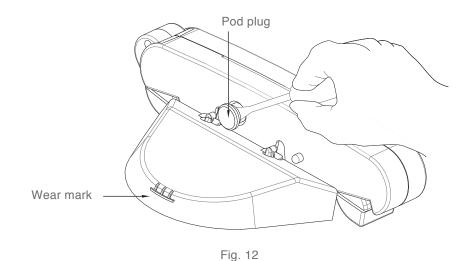

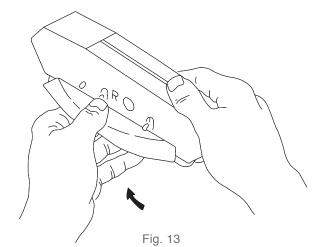

FLAP REPLACEMENT

A. Remove the front and rear flaps from your StarzTruck automatic pool cleaner by inserting a small screwdriver between the flap and the lower body near the pivot point of the flaps (see Fig. 14).

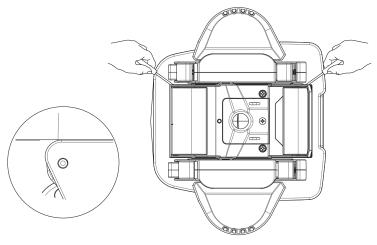

Bottom of cleaner

Fig. 14

B. You will notice that your replacement flaps look similar but are marked "Front" and "Rear" on the flap. Because the springs in the flaps are different, it is absolutely necessary to install the proper flap in the front and rear of the unit. Failure to do so will result in unsatisfactory performance of the StarzTruck automatic pool cleaner. When installing the front flap, be sure that the extended leg of the spring is inserted into the notch on the front of the lower body (see Fig. 16). Push the flap in place. You will feel and hear a snap when the flap is in place. Fold the flap in toward the bottom of the StarzTruck automatic pool cleaner. You will feel some resistance at this point (that is normal). As the flap snaps into its normal position, you will feel the spring action and notice that the front flap is now in its normal operating position. When installing the rear flap, the extended leg of the spring must fit against one of the flat surfaces of the cam (see Fig. 15).

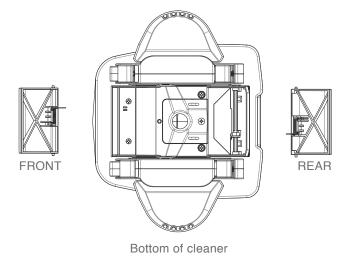



Fig. 15

STARZTRUCK AUTOMATIC POOL CLEANER BUMPER REPLACEMENT

Replacement of the StarzTruck automatic pool cleaner bumper is not recommended as a "do it yourself" repair, because there is a slight possibility that the replacement might cause a problem in the propulsion system. We strongly suggest that you consult your dealer for this repair.

A #2 phillips screwdriver is necessary for this repair.

- 1. Turn off pump.
- 2. Remove StarzTruck automatic pool cleaner from pool.
- 3. Disconnect StarzTruck automatic pool cleaner from leader hose.
- 4. Turn StarzTruck automatic pool cleaner upside down and place it in a position that is steady/firm.
- 5. Locate and loosen the captive screw behind the throat in the center of the bottom (see Figs. 16, 17 & 18).
- 6. Lift the bottom opening (see Figs. 17 & 18)
- 7. Remove four "A" screws (see Fig. 16).
- 8. Lift the lower body assembly off the StarzTruck automatic pool cleaner (see Fig. 16).
- 9. Remove four "B" screws (see Fig. 16).
- 10. Remove bumper carefully, making sure that other cleaner parts are not moved or disturbed.
- 11. Remove two "C" screws (see Fig. 16).
- 12. Replace bumper, again making sure that other cleaner parts are not moved or disturbed.
- 13. Reinstall screws and parts, following steps in reverse 11, 9, 8, 7, 6, 5, 4, 3.
- 14. Reinstall StarzTruck automatic pool cleaner in pool per installation instructions.

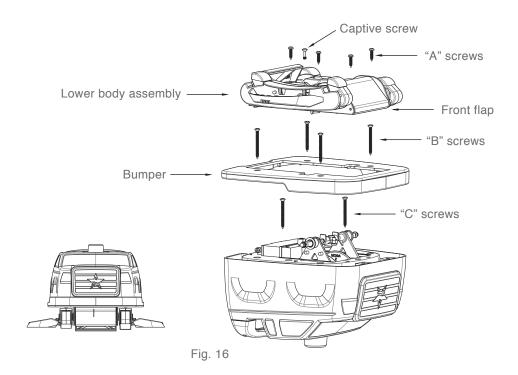


BOTTOM OPENING REMOVAL AND CLEANING INSTRUCTIONS

REMOVING THE BOTTOM OPENING

Should the StarzTruck automatic pool cleaner stop moving or become sluggish due to debris trapped in the throat or inside the unit, the turbine/vacuum chamber is accessible following these instructions.

- 1. Turn off pump.
- 2. Remove StarzTruck automatic pool cleaner from pool.
- 3. Disconnect StarzTruck automatic pool cleaner from leader hose.
- 4. Turn StarzTruck automatic pool cleaner upside down.
- 5. Locate and loosen the captive screw behind the throat in the center of the bottom (see Figs. 17 & 18).
- 6. Lift bottom opening (see Figs. 17 & 18).
- 7. Clean turbine/vacuum chamber (see Fig. 19).
- 8. Check turbine for free movement.
- Reinstall bottom opening by lining up the fixed access cover with the two slots shown in Figs. 17 & 18.Slide the cover in place and tighten the captive screw.
- 10. Reinstall StarzTruck automatic pool cleaner in pool per installation instructions.

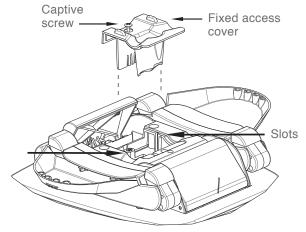

Bottom of cleaner (concrete)

Fig. 17

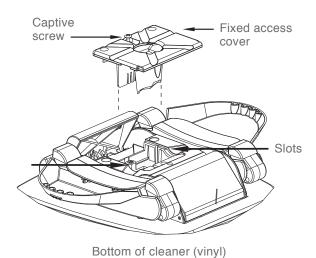


Fig. 18

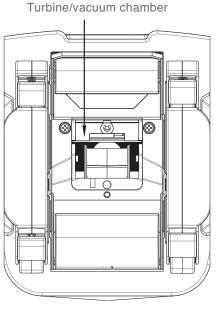


Fig. 19

STARZTRUCK AUTOMATIC POOL CLEANER TROUBLESHOOTING GUIDE

PROBLEM: SLOW/NO FORWARD MOVEMENT

CAUSES	SOLUTIONS
Lack of/improper water flow through cleaner	Check and adjust water flow per step 3, Figs. 7, 8, 9, 10
Partial blockage of StarzTruck throat	Clear blockage
Worn shoes	Replace shoes
Worn wings	Replace wings

PROBLEM: CLEANER FAILS TO CLIMB VERTICAL WALLS GUNITE/CONCRETE POOL

CAUSES	SOLUTIONS
Improper shoes for application	Call AquaStar
Lack of/improper water flow through cleaner	Adjust water flow per step 3, Fig. 10
Partial blockage of StarzTruck throat	Clear blockage
Worn shoes	Replace shoes
Worn wings	Replace wings
Hose too short	Install additional hose sections per installation Instructions
Improper tension on rear flap	Turn rear flap adjuster to III

STARZTRUCK AUTOMATIC POOL CLEANER TROUBLESHOOTING GUIDE

PROBLEM: CLEANER CLIMBS TO SURFACE AND SUCKS AIR

CAUSES	SOLUTIONS
Too much/improper water flow through cleaner	Check and adjust water flow per step 3, Figs. 7, 8, 9, 10
Improper tension on rear flap	Turn rear flap adjuster to I If still climbing too much, reduce water flow until proper operation is achieved
Steering failure	 Check and clean rear screen Check to see that cone gear is free and rotates smoothly in both directions Check medium turbine and spindle gear assemblies for malfunction

PROBLEM: CLEANER HEAD FLOATS

CAUSES	SOLUTIONS
Cleaner head or return line has air in it	Remove all air from cleaner head
	Stop all air from entering the pool through the return lines
	If cleaner head and hose are covered with fine bubbles, give the hose a good tug. This will release the air bubbles and allow the cleaner head to settle to the bottom of the pool until the hose is covered with bubbles again
The cleaner head is being pulled or lifted off the bottom of the pool by the cleaner hose or return line flow — either at the surface or at the bottom of the pool — or both	Readjust return lines to prevent water flow from interfering with cleaner head and/or hose

STARZTRUCK AUTOMATIC POOL CLEANER TROUBLESHOOTING GUIDE

PROBLEM: CLEANER STICKS AT STEPS, CORNERS, ETC.

CAUSES	SOLUTIONS
Improper water flow	Check and adjust water flow per step 3, Figs. 7, 8, 9, 10
Worn shoes	Replace shoes
Worn wings	Replace wings
Hose too short	Install additional hose per installation instructions
Steering failure	1. Check and clean rear screen
	Check to see that cone gear is free and rotates smoothly in both directions
	3. Check steering program and troubleshoot – then:
	A. clean, repair or replace gearbox
	B. check pod/A-frame connection and replace if necessary – do not attempt to retighten loose pods
	C. check medium turbine and spindle gear assemblies

STARZTRUCK AUTOMATIC POOL CLEANER DISCLAIMER

- A. Pool plaster is affected by age, water chemistry, etc.
- B. Pool plaster can deteriorate over a period of time.
- C. The integrity of "good" pool plaster is such that a pool vacuum cleaner automatic or manual cannot remove that plaster.
- D. The integrity of "good" pool plaster is such that the plaster will cause wear on the StarzTruck automatic pool cleaner not vice versa.
- E. Vinyl and fiberglass are affected by age, sunlight and water chemistry.
- F. Vinyl can become brittle and weak.

- G. Vinyl can also be affected by the installation and the pool's surroundings.
- H. When installing the StarzTruck automatic pool cleaner, you assume all responsibility for the condition of the pool and the pool's surroundings.

To better serve you, please have the following information available if you call AquaStar's Technical Support Department:

- 1. The purchase date and purchase location of your StarzTruck automatic pool cleaner.
- 2. The serial number of your StarzTruck automatic pool cleaner.
- 3. The number of hose sections used.

STARZTRUCK AUTOMATIC POOL CLEANER LIMITED WARRANTY

This limited warranty is only valid if the warranty card has been filled out and returned with proof of purchase within allotted time period. This limited warranty is extended to the original purchaser (consumer) from the manufacturer of the StarzTruck Automatic Pool Cleaner, AquaStar Pool Products, Inc., 2340 Palma Drive, Warranty Dept. 104, Ventura, CA 93003, USA. Phone 877.768.2717, outside the USA +1.805.620.5060.

AquaStar warrants this cleaner to be free from defects in materials and workmanship for a period of one year from the original date of purchase subject to all the following conditions and exclusions.

- Should the cleaner fail to be in good working order in accordance with the above schedule, AquaStar will at its option repair or replace the cleaner or any defective parts at no additional charge except as set forth below. Repair parts and replacement products will be furnished on an exchange basis and will be new or functionally equivalent. All parts removed as a result of replacement shall become the property of AquaStar. Liability of AquaStar and the sole remedy of the purchaser whether in contract under any warranty, in tort (including negligence), in strict liability or otherwise, shall be limited to the repair or replacement of defective parts only and shall in no event exceed return of the amount of the purchase price paid by the purchaser.
- 2. This limited warranty is for the replacement of alleged defective parts during the term of the warranty; owner may ship the product by prepaid freight to AquaStar Pool Products, Inc., 2340 Palma Drive, Warranty Dept. 104, Ventura, CA 93003, USA. Enclose a letter including the serial number, date and place of purchase, name, telephone number and address of owner, copy of purchase receipt and a description of the problem. AquaStar, upon determination and at our option, will repair and return to the owner all defective parts that are covered by this warranty. Any parts not covered by this limited warranty will be returned to owner freight collect.
- 3. This limited warranty is only extended to the original purchaser (consumer) and only during the time in which the original purchaser occupies the premises where the cleaner was originally installed. It does not apply to any subsequent purchasers or recipients of the cleaner.

- 4. This limited liability warranty includes the replacement of parts due to normal wear but does not include cosmetic situations including but not limited to: discoloration or fading due to sunlight or chemicals, scratches, scuffs, etc.
- 5. This limited warranty does not cover any loss, damage, injury, or malfunction of the equipment due to the failure to properly maintain and or operate the cleaner, or alteration of the equipment, tampering, and act of God, abuse, misuse, negligence, omissions.
- 6. This cleaner is intended for a properly designed and maintained swimming pool. This limited warranty does not cover pools that have a defective design, are improperly maintained, and are inappropriate for the StarzTruck automatic pool cleaner's operation.
- 7. This limited warranty does not cover damage or injury from improper installation, pump running dry, damage due to loss of prime or plugged pipes.
- This limited warranty does not cover any change in appearance, damage, malfunction due to chemical reactions, etc.
- AquaStar is not responsible for any loss of time, inconvenience or any consequential expenses such as telephone calls, labor, etc., unless required by law.
- 10. Deterioration, discoloration or brittleness of pool plaster and vinyl liners can be caused over time separately by or in combination with, age and an imbalance in pool water chemistry, improper installation and other factors. AquaStar hereby disclaims any and all claims, and purchaser releases AquaStar from any and all claims for damages to any pool plaster or vinyl liner in purchaser's pool by reason of the use and/or operation of the cleaner.
- 11. This limited warranty is only valid in the USA and Canada.
- 12. This limited warranty is in lieu of any other warranties express or implied, including the warranties of merchantability or fitness. Any such implied warranty imposed by state consumer law is limited in duration to one year from date of purchase.

No distributor, dealer or representative has any authority to make any warranties express or implied concerning StarzTruck automatic pool cleaner except as contained herein. Unless warranty card has been received by AquaStar, AquaStar reserves the right to refuse repair service or to honor warranty.



877.768.2717 FAX: 877.276.POOL (7665)
Outside the USA: +1.805.620.5060 FAX: +1.949.336.1940
www.aquastarpoolproducts.com info@aquastarpoolproducts.com




A DIVISION OF AQUASTAR POOL PRODUCTS

PROSTAR™ ALL-AMERICAN REPLACEMENT PARTS FOR THE STARZTRUCK™ AUTOMATIC POOL CLEANER

Discover the quality, price and selection of these dependable ProStar replacement parts. Each one is made to last in the USA, and engineered for a perfect fit. Check out our replacement kits on pages 15-16.

877-768-2717

ProStarReplacementParts.com

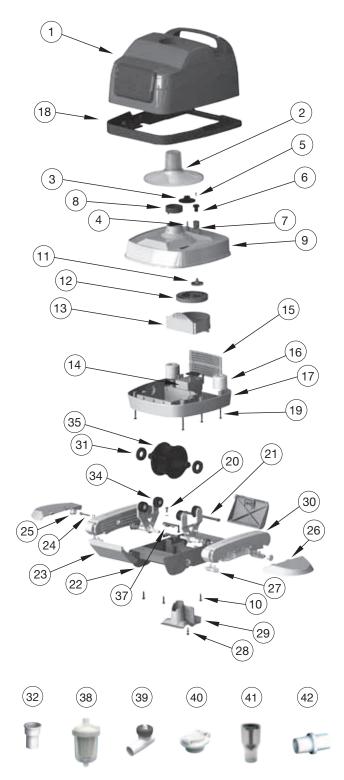


- 1. Top Shell HWN121xx
- 2. Cone Gear HWN122
- 3. Intermediate Gear HWN123
- 4. Intermediate Gear Shaft HWN124
- 5. Spindle Gear Screw HWN125
- 6. Spindle Gear HWN126
- 7. Spindle Gear Bushing HWN127
- 8. Cone Gear Bushing HWN128
- 9. Upper Middle Body HWN129
- Upper Body Screw Kit (6 Pack) HWN130
- 11. Medium Turbine Drive Gear HWN131
- 12. Medium Turbine HWN132
- Medium Turbine Case with Axle HWN133
- 14. Gear Box Assembly HWN134
- 15. Rear Screen HWN135xx
- 16. Float Kit (2 Pack) HWN136
- 17. Lower Middle Body HWN137
- 18. Bumper HWN138xx
- Middle Body Screw (6 Pack) HWN139
- 20. Lower Body Screw (4 Pack) HWN140
- 21. Flap Adjuster HWN141
- 22. Lower Body HWN142xx
- 23. Flap Kit HWN143xx
- 24. Pod Screw Kit HWN110
- 25. Pod Plugs (6 Pack) HWN111
- 26. Wing Kit: Left and Right Wings HWN117xx
- 27a. Pod Shoes (4 Pack) for Vinyl HWN114
- 27b. Pod Shoes (4 Pack) for Concrete HWN115
- 28. Captive Screw / Retaining Clip HWN148
- 29a. Fixed Access Cover Assembly for Concrete Models HWN149xx
- 29b. Fixed Access Cover Assembly for Vinyl Models HWN157xx
- 30. Pod Kit HWN116xx
- 31. Turbine Bearings HWN112
- 32. Skimmer Cone HWN152
- 33. Medium Turbine/Spindle Gear Kit HWN154 (not shown)
- 34. Universal A-Frame Kit HWN118
- 35. Turbine Kit HWN113
- 36. A-Frame and Turbine Kit HWN119 (not shown)
- 37. A-Frame/Bushing/Saddle Kit HWN120 (not shown)
- 38. Leaf Canister HWN162
- 39. Regulator Valve HWN161
- 40. Safety Vacuum Lock Wall Fitting VLK15Txx
- 41. Propulsion/Conversion Kit HWN160 (not shown)
- 42. Flow Gauge HWN153
- 43. Hose Connector HWN158


PROSTAR REPLACEMENT KITS

We've made your pool equipment service and repair a lot easier with these convenient replacement kits. Each one is a complete grouping that contains everything you need for that particular repair. For more information or to stock up on individual replacement parts, visit ProStarReplacementParts.com or call 877-768-2717.

Medium Turbine/Spindle Gear Kit HWN154

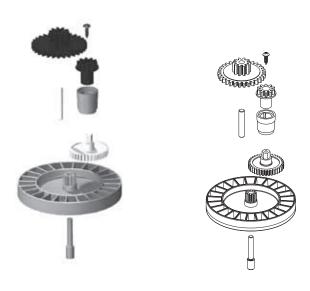


Universal A-Frame Kit HWN118

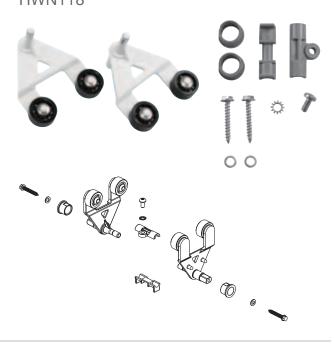

Turbine Kit: Turbine and Two Turbine Bearings HWN113






A-Frame/Bushing/Saddle Kit HWN120




PROSTAR REPLACEMENT KITS

Propulsion/Conversion Kit HWN160xx

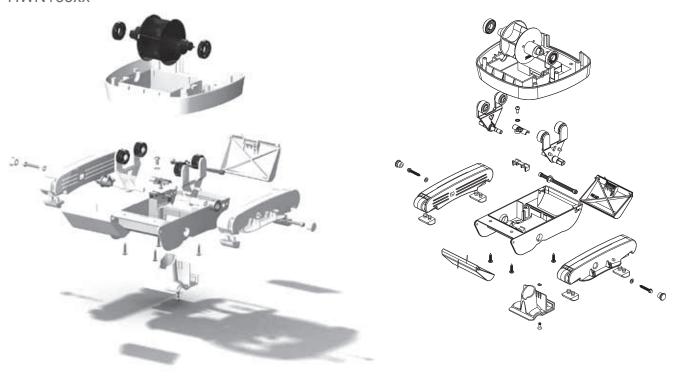

A-Frame and Turbine Kit HWN119

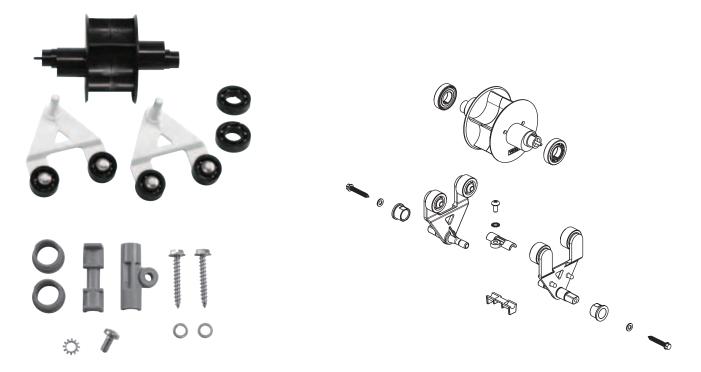



WARRANTY REGISTRATION CARD



Ventura, CA 93003



Include a copy of your receipt and return this form within 15 days of purchase. The additional information requested is to help us understand our customers. The information is NOT sold or shared with any other party. Thank you for your purchase.

FIRST NAME	LAST NAME		
COMPANY NAME (IF POOL SERVICE OR BUILDER)			
ADDRESS			
CITY	STATE ZIP CODE		
PHONE	FAX		
EMAIL			
COMMENTS			
Serial number (found on bottom of cleaner)	5. Name of dealer/builder/service professional where		
1. Serial number (lound on bottom of cleaner)	purchased:		
2. Type of pool:	6. Pool is years old.		
□ Vinyl			
☐ Fiberglass	7. What cleaner is this replacing?		
☐ Gunite	·		
□ Other			
3. Cleaner model:	8. Are you a:		
□ Concrete	Consumer		
□ Vinyl/fiberglass	Pool Service Technician		
	Pool Builder		
4. Date of purchase:	Other		
Please complete and mail with receipt to:	Or fax to:		
AquaStar Pool Products, Inc.	877.276.P00L (7665)		
Warranty Registration Dept. 104 2340 Palma Drive	Outside the U.S.: +1.949.336.1940		



STARZTRUCK® driving your pool clean®

AUTOMATIC SUCTION POOL CLEANER

Please fill out warranty information on reverse side and mail to: AquaStar Pool Products, Inc. Warranty Registration Dept. 104 2340 Palma Drive Ventura, CA 93003

Don't forget to include a copy of your receipt as proof of purchase.