


CHALLENGE RESIDENTIAL BASKETBALL GAMES



And

ELITE COMMERCIAL BASKETBALL GAMES

ASSEMBLY AND INSTALLATION INSTRUCTIONS

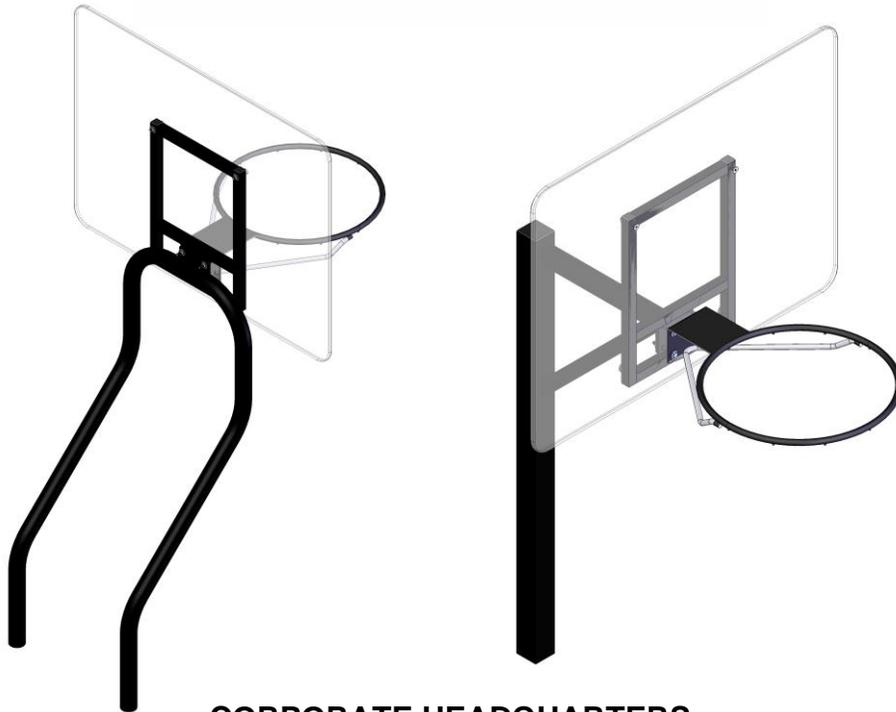

**CORPORATE HEADQUARTERS
WESTERN SALES AND MANUFACTURING PLANT
P.O. Box 400
Canby, Oregon 97013
PH (800) 824-4387 • F (503) 266-4334
www.srsmith.com**

INTRODUCTION

The Challenge and Elite Basketball Games are designed for use on in-ground pools in shallow water depth areas. Proper and complete assembly, use and supervision are essential for proper operation, and to reduce the risk of accident or injury.

****IMPORTANT****

Check entire boxes and inside all packing materials for parts. Before beginning assembly, read the instructions and identify parts using the figures and parts listed in this document. It is critical that all parts be carefully inspected by the installer prior to installation to ensure that no damage occurred in transit and that a damaged part is not used. Proper installation cannot be overstressed, as an improper installation voids S.R. Smith's warranty and may affect the safety of the user.



SAFETY INSTRUCTIONS

- This equipment is intended for use in shallow water depth areas.
- During play, do not wear jewelry (rings, watches, necklaces, etc.) Objects may entangle in net.
- Do not dive or jump from any part of unit, including backboard support braces or rim.
- Do not hang, climb, or stand on any part of unit, including backboard, support brace, rim, or net.
- Periodically inspect the rim, backboard, and posts to assure there are no worn parts and that all hardware is properly tightened.

TABLE OF CONTENT

- | | |
|---|--------|
| • DUAL POST GAMES FOR 17.5" ON CENTER ANCHORS | PAGE 3 |
| • DUAL POST GAMES FOR 16" ON CENTER ANCHORS | PAGE 4 |
| • SINGLE POST COMMERCIAL GAME | PAGE 5 |
| • DUAL POST GAME ASSEMBLY INSTUCTIONS | PAGE 6 |
| • SINGLE POST GAME ASSEMBLY INSTUCTIONS | PAGE 8 |


DUAL POST 17.5" ON CENTER

ITEM #	PART #	DESCRIPTION	QTY.
1	SPG-200A	Clear Acrylic Backboard w/ Screen Printing	1 ea.
2	20-197-VB	Acrylic Backboard Square Frame	1 ea.
3	05-14-103	5/16"-18 X 2" Flat Socket Cap Screw SS	2 ea.
4	05-32-111	3/8 Nylon Protective Washer	10 ea.
5	5-145	3/8" ID X 7/8" OD Flat Washer SS	10 ea.
6	5-658	5/16"-18 Flanged Lock Nuts S/S	6 ea.
7	20-193-1 or 20-194-VB or 20-195-VB	Challenge Residential Dual Post, Polished SS (NOT SALT FRIENDLY) or Challenge Salt Friendly Residential Dual Post, Vinyl Black or Elite Salt Friendly Commercial Dual Post, Vinyl Black or	1 ea.
8	AS-100P	Plastic Anchor (Dual Post) or	2 ea.
9	S-R-44-VC	RIM, Salt Friendly Vinyl Black	1 ea.
10	800-2045	5/16-18 X 2 3/4 HH Tap Bolt 316SS	4 ea.
11	SPG-102	Basketball	1 ea.
12	SPG-103	Basketball Needle	1 ea.
13	SPG-105	Basketball Net, Competition Grade	1 ea.
14	8-116	1" Plastic Square Rail End Plug *(FACTORY INSTALLED)*	6 ea.
15	8-117	1" Round Push-In Rubber Bumper	2 ea.
16	8-103	2.5" Plastic Square Rail End Plug *(FACTORY INSTALLED)* (20-195-VB ONLY)	1 ea.
17	EP-200-MC or EP-200-BO	Snap Tite Escutcheon, Chrome (FOR 20-193-1) or SnapTite Escutcheon, Black (FOR 20-194-VB and 20-195-VB) or	2 ea. 2 ea.

1. Basketball units are to be anchored to the deck using 6 inch deep AS-100P anchor sockets. Install the anchors in the pool deck 17-1/2 inches apart on center and 12 back from the pool edge for residential versions or 18 inches back from the pool edge for commercial versions, see **FIGURE 1**. Properly bond the anchor sockets using the attached bonding screw and the appropriate bond wire per local codes. Allow concrete to cure before installing the basketball unit. (For anchor installation information see 06-252, which is provided with the anchors)

FIGURE 1

BE SURE TO
INSTALL THE
ANCHORS WITH
THE
TIGHTENING
WEDGES
LOCATED
AWAY FROM
THE POOL

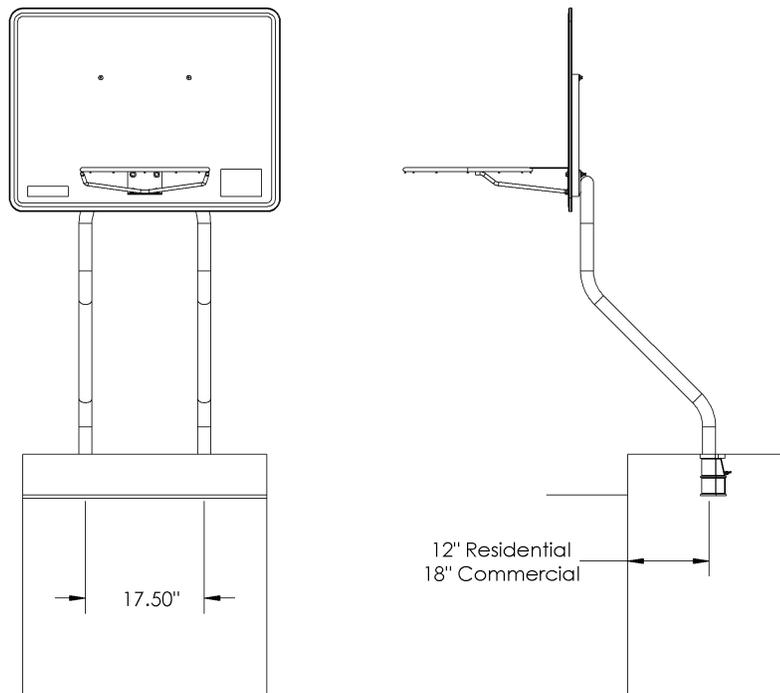


NOTE: Each anchor socket has a removable cap, which needs to be removed before inserting the assembly. The cap can be removed by inserting a small flat blade screwdriver into the center hole of the anchor cap and pulling up. When removing the basketball assembly from the anchors make sure to place the caps in the anchors.

DUAL POST 16" ON CENTER

ITEM #	PART #	DESCRIPTION	QTY.
1	SPG-200A	Clear Acrylic Backboard w/ Screen Printing	1 ea.
2	20-197-VB	Acrylic Backboard Square Frame	1 ea.
3	05-14-103	5/16"-18 X 2" Flat Socket Cap Screw SS	2 ea.
4	05-32-111	3/8 Nylon Protective Washer	10 ea.
5	5-145	3/8" ID X 7/8" OD Flat Washer SS	10 ea.
6	5-658	5/16"-18 Flanged Lock Nuts S/S	6 ea.
7	20-234-1 or 20-235-VB or 20-236-VB	Challenge Residential Dual Post, Polished SS (NOT SALT FRIENDLY) or Challenge Salt Friendly Residential Dual Post, Vinyl Black or Elite Salt Friendly Commercial Dual Post, Vinyl Black or	1 ea.
9	S-R-44-VC	RIM, Salt Friendly Vinyl Black	1 ea.
10	800-2045	5/16-18 X 2 3/4 HH Tap Bolt 316SS	4 ea.
11	SPG-102	Basketball	1 ea.
12	SPG-103	Basketball Needle	1 ea.
13	SPG-105	Basketball Net, Competition Grade	1 ea.
14	8-116	1" Plastic Square Rail End Plug *(FACTORY INSTALLED)*	6 ea.
15	8-117	1" Round Push-In Rubber Bumper	2 ea.

1. Basketball units are to be anchored to the deck using 6 inch deep anchor sockets. The anchors must be installed in the pool deck 16 inches apart on center and 12 back from the pool edge for residential versions or 18 inches back from the pool edge for commercial versions, see **FIGURE 2**.


FIGURE 2

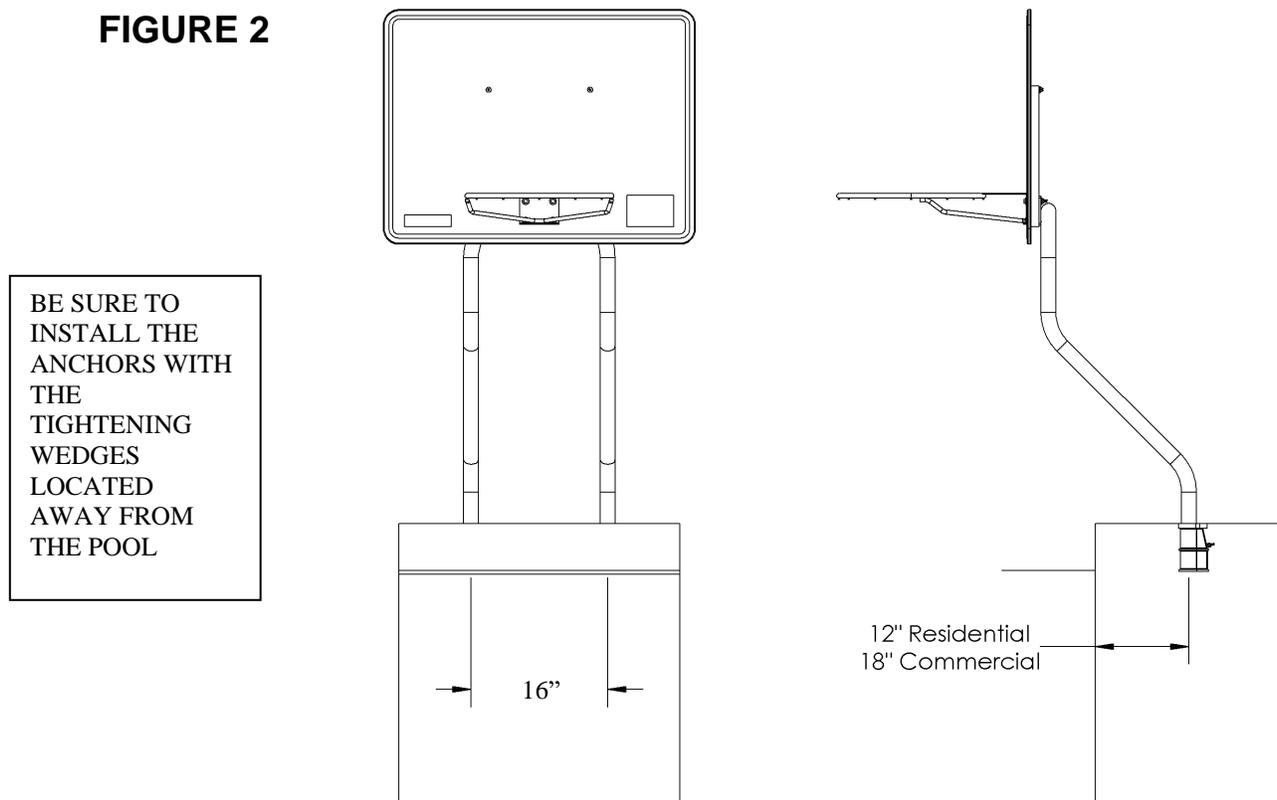

SINGLE POST COMMERCIAL GAME

ITEM #	PART #	DESCRIPTION	QTY.
1	SPG-200A	Clear Acrylic Backboard w/ Screen Printing	1 ea.
2	20-197-VB	Acrylic Backboard Square Frame	1 ea.
3	05-14-103	5/16"-18 X 2" Flat Socket Cap Screw SS	2 ea.
4	05-32-111	3/8 Nylon Protective Washer	10 ea.
5	5-145	3/8" ID X 7/8" OD Flat Washer SS	10 ea.
6	5-658	5/16"-18 Flanged Lock Nuts S/S	6 ea.
7	20-196-VB 20-198-VB	Elite Salt Friendly RockSolid Single Post, Vinyl Black Extended Reach RockSolid Single Post, Vinyl Black	1 ea.
8	27-107B	RockSolid Anchor (Single Post)	1 ea
9	S-R-44-VC	RIM, Salt Friendly Vinyl Black	1 ea.
10	800-2045	5/16-18 X 2 3/4 HH Tap Bolt 316SS	4 ea.
11	SPG-102	Basketball	1 ea.
12	SPG-103	Basketball Needle	1 ea.
13	SPG-105	Basketball Net, Competition Grade	1 ea.
14	8-116	1" Plastic Square Rail End Plug *(FACTORY INSTALLED)*	6 ea.
15	8-117	1" Round Push-In Rubber Bumper	2 ea
16	8-103	2.5" Plastic Square Rail End Plug *(FACTORY INSTALLED)* (20-195-VB ONLY)	1 ea
17	EP-300-PC	Square Escutcheon, Black (FOR 20-196-VB)	1 ea.

1. Single post commercial games are to be anchored to the deck using a 6 inch deep 27-107 anchor. Install the anchor in the pool deck 18 inches back from the pool edge for the standard commercial game and 30 inches back from the pool edge for extended reach commercial games, see **FIGURE 3**. Properly bond the anchor using the attached bonding screw and the appropriate bond wire per local codes. Allow concrete to cure before installing the Basketball unit.

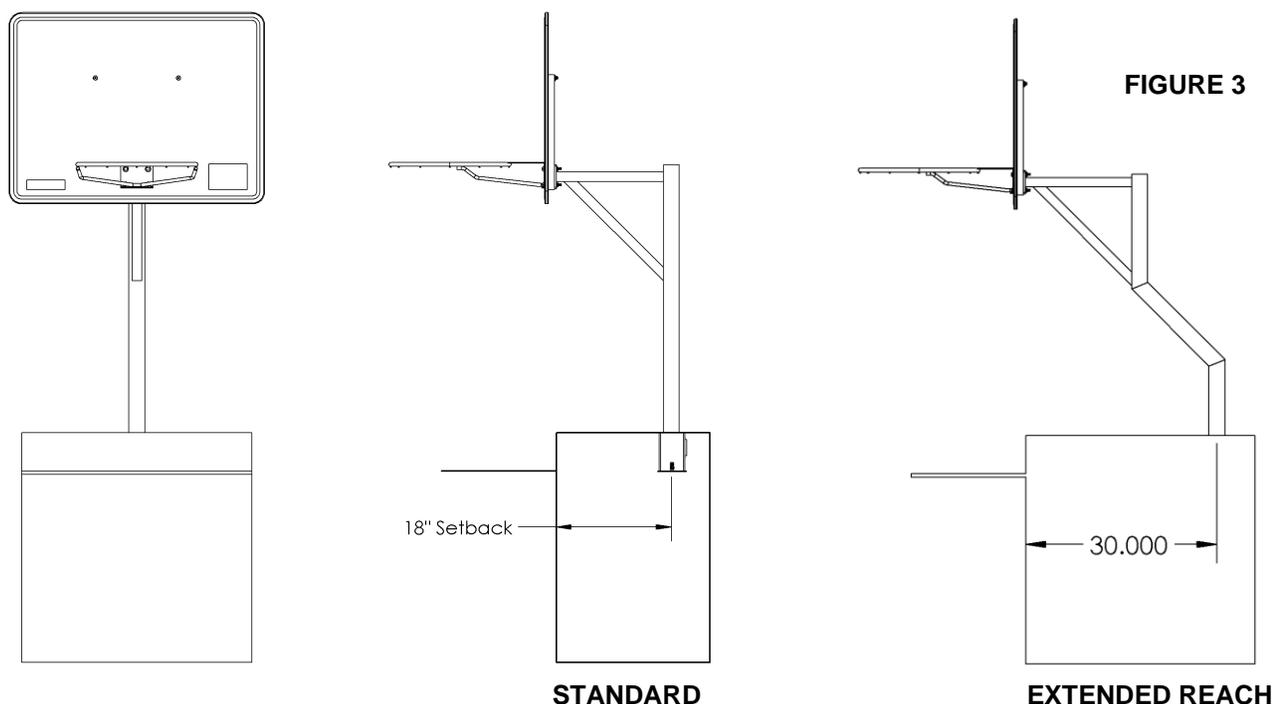

NOTE: Each anchor socket has a removable cap, which needs to be removed before inserting the assembly. The cap can be removed by inserting the anchor tool into the anchor cap and lifting. When removing the basketball assembly from the anchors make sure to place the caps in the anchors.

CHALLENGE AND ELITE BASKETBALL GAMES

NOTE: Two 6 inch anchor sockets for concrete decks are required to install the dual post basketball games. The games for 17.5 inch frame models are provided with two (AS-100P) plastic anchor sockets. The games for 16 inch frame models are not provided with anchors and are intended for installation into existing anchors only. One in-deck RockSolid anchor (27-107) is required to install commercial single post games.

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED

1. 1/2" Standard Wrench
2. 1/2" Socket Wrench
3. 7/32" Allen Wrench

GENERAL INSTRUCTIONS

1. Assemble the Acrylic Backboard (1) to the Square Frame (2) with the 5/16"-18 X 2" Flat Socket Head Cap Screw SS (3), 3/8" Nylon Washer (4), 3/8" Flat Washer SS (5), and 5/16"-18 Flanged Nut SS (6), as shown in **FIGURE 4**. **DO NOT SET THE BACKBOARD ON CONCRETE OR OTHER ROUGH SURFACES.** Cardboard from the packaging is a good surface to work on. Do not fully tighten any of the hardware until all parts are assembled.

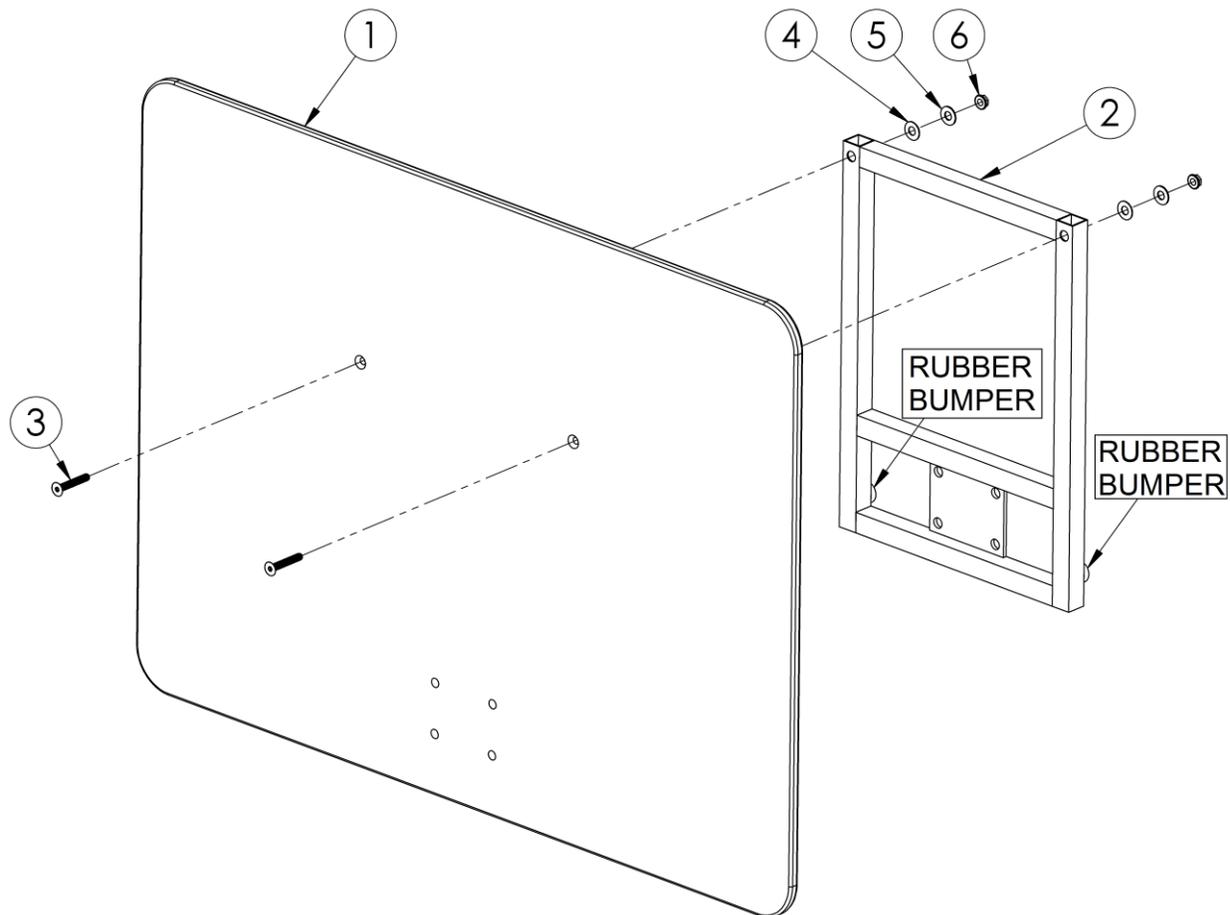


Fig. 4

DUAL POST ASSEMBLY INSTRUCTIONS

1. Insert the vertical post (7) into the installed anchors (8), as shown in **FIGURE 5**. To make assembly easier, the basketball game can be assembled facing away from the pool and will be turned around once assembly is complete. (For anchor installation information see 06-252, which is provided with the anchors)

2. Place the four bolts with hardware through the Rim (9): 5/16-18 X 2 3/4 HH TAP BOLT 316SS (10), 3/8" Flat Washer (5), and 3/8" Nylon Washer (4). Align the bolts and rim with the holes in the Acrylic Backboard (1). Next, continue the bolts through the mounting plate on the Vertical Posts (7), and tighten using the hardware shown: 3/8" Nylon Washer (4), 3/8" Flat Washer (5), and 5/16"-18 Flanged Nut (6). See **FIGURE 6**. Do not fully tighten the hardware. **Note: Use Anti-Seize (included) on all hardware pieces to prevent galling of the stainless steel.**

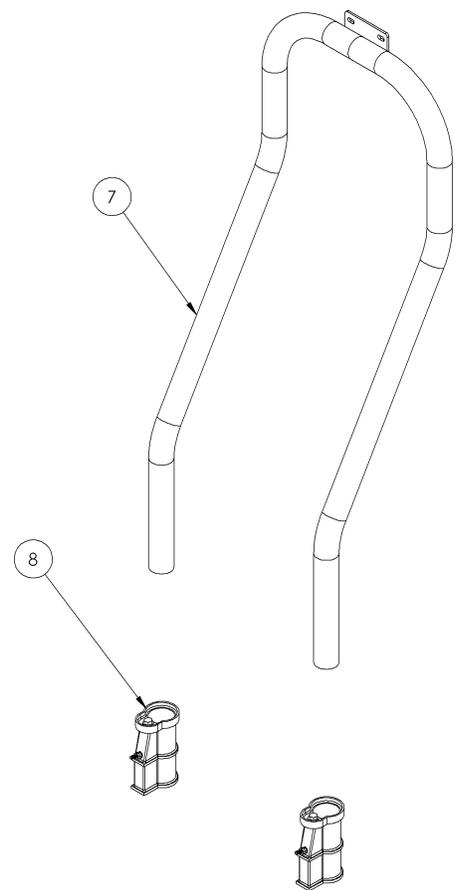


Fig. 5

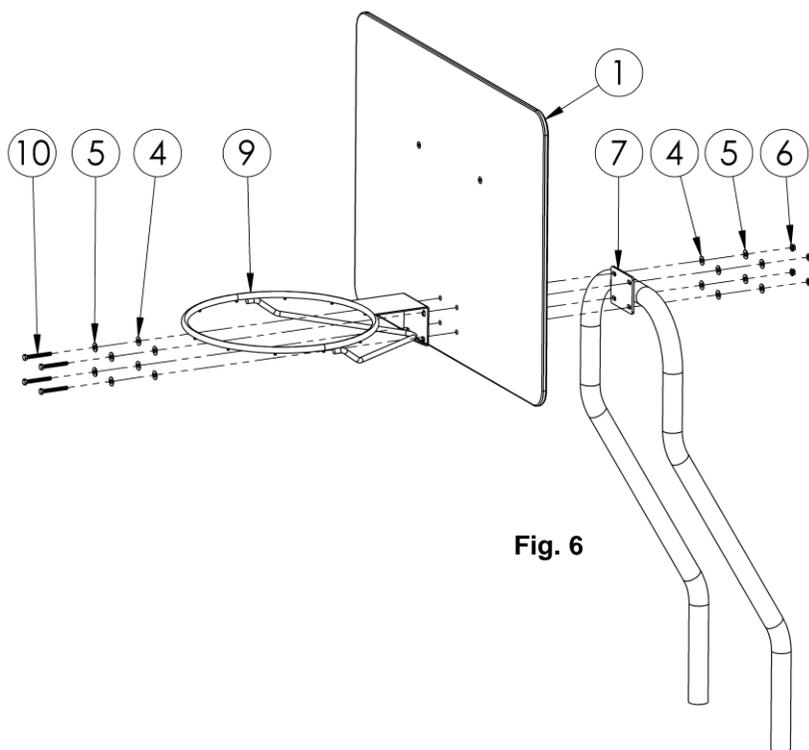


Fig. 6

3. Level the backboard and rim before fully tightening hardware in the following order:


- i. Tighten the anchor wedge bolts until the post is secure in the anchors. Do not over-tighten or you can damage the tubing.
- ii. Tighten the 5/16" flat bolts through the backboard and square frame until snug. Over-tightening can damage the backboard.
- iii. Tighten the rim's 5/16" bolts till the rim is secured, excessive pressure will damage the backboard.

SINGLE POST COMMERCIAL ASSEMBLY INSTRUCTIONS

1. Insert the vertical post (7) into the installed anchor (8), as shown in **FIGURE 7**. To make assembly easier, the basketball game can be assembled facing away from the pool and will be turned around once assembly is complete. (For anchor installation information see 06-674, included with anchors)

BE SURE TO INSTALL THE ANCHOR WITH THE TIGHTENING WEDGE LOCATED AWAY FROM THE POOL

Fig. 7

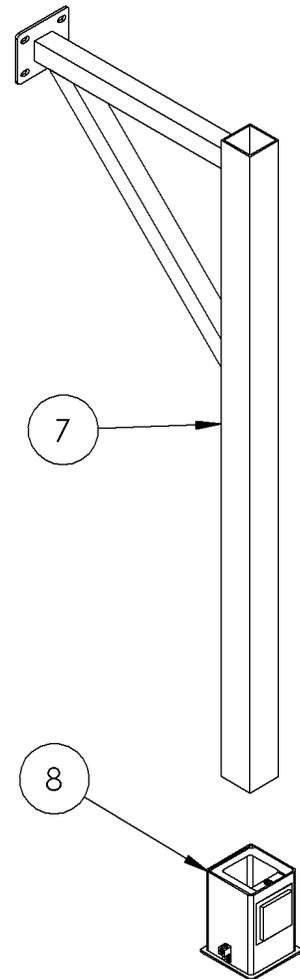

2. Place the four bolts with hardware through the Rim (9): 5/16-18 X 2 3/4 HH TAP BOLT 316SS (10), 3/8" Flat Washer (5), and 3/8" Nylon Washer (4). Align the bolts and rim with the holes in the Acrylic Backboard (1). Next, continue the bolts through the mounting plate on the Vertical Posts (7), and tighten using the hardware shown: 3/8" Nylon Washer (4), 3/8" Flat Washer (5), and 5/16"-18 Flanged Nut (6). See **FIGURE 8**. Do not fully tighten the hardware. **Note: Use Anti-Seize (included) on all hardware pieces to prevent galling of the stainless steel.**

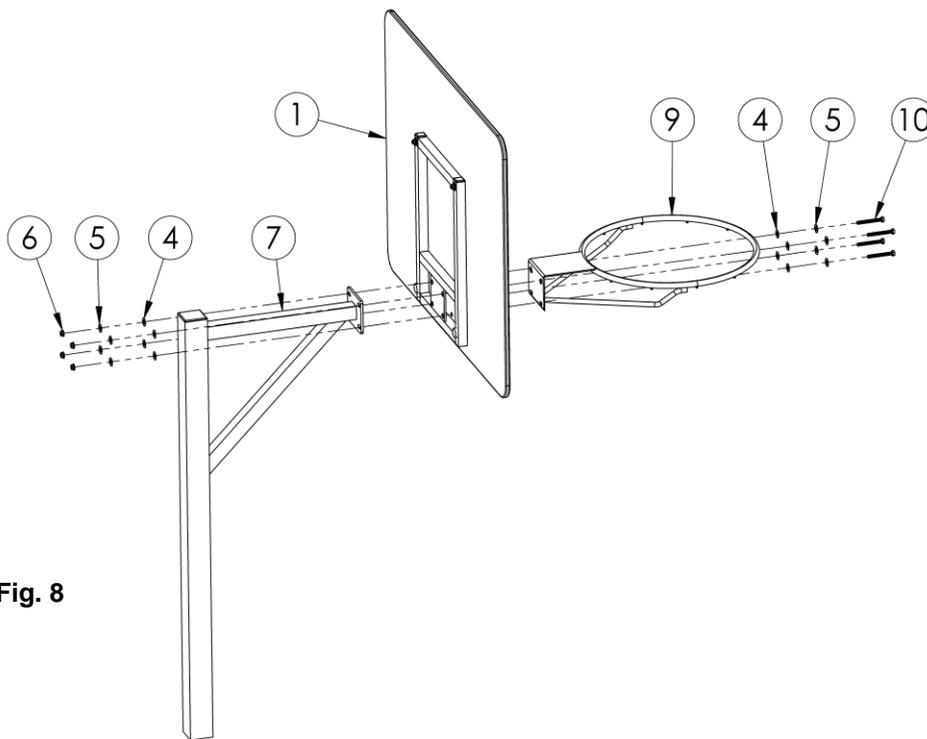


Fig. 8

3. Level the backboard and rim before fully tightening hardware in the following order:

- i. Tighten the anchor wedge bolt until the post is secure in the anchor.
- ii. Tighten the 5/16" flat bolts through the backboard and square frame until snug. Over-tightening can damage the backboard.
- iii. Tighten the rim's 5/16" bolts till the rim is secured, excessive pressure will damage the backboard.