


Solar Sync[®]

OWNER'S MANUAL

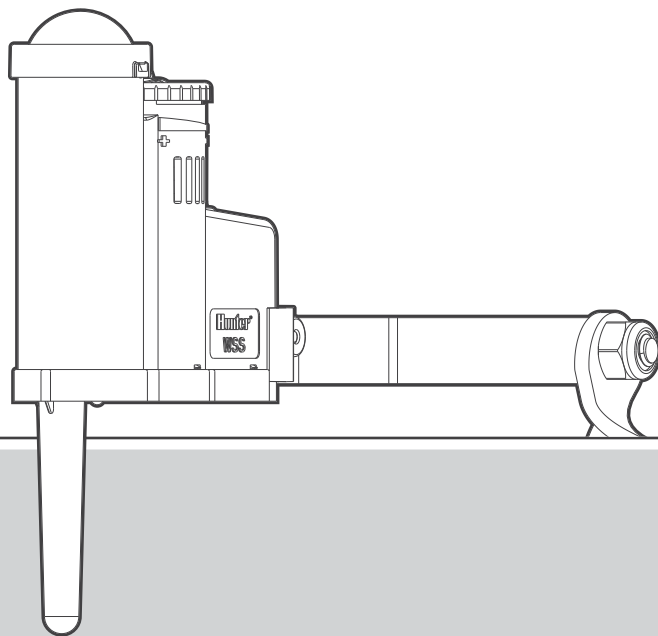

Solar Sync Sensor

Wired and Wireless Solar Sync Sensors

Evapotranspiration Sensor
for Compatible Hunter Controllers

Hunter[®]

The Solar Sync is a sensor system that, when connected to a compatible Hunter controller, will automatically adjust your controller watering based upon changes in local climate conditions. The Solar Sync utilizes a solar and temperature sensor to measure on-site weather conditions used to determine evapotranspiration (ET), or the rate at which plants and turf use water. In addition, the Solar Sync sensor includes a Hunter Rain-Clik® and Freeze-Clik® sensor that will shut down your irrigation system when it rains and/or during freezing conditions.

The result is a new water-efficient irrigation product that promotes water conservation and healthier plants. You simply program your controller like you normally would, and the Solar Sync takes over from there, eliminating the need to manually adjust your watering schedule.

Need more helpful information on your product? Find tips on installation, controller programming, and more.



hunter.direct/solarsynchelp



1-800-733-2823

Table of Contents



2	Introduction	16	Setup and Programming
4	System Overview and Operation	16	Programming the Controller
5	System Installation	16	Making Adjustments
5	Choosing the Sensor Location	17	Setup and Programming
6	Solar Sync System Components	18	Calibration and Setup Period
8	Installing the Sensor	19	Calibration and Setup Period
8	Installing the Receiver	19	Station Run Times
9	Maintaining the Sensor	20	Specifications, Dimensions, and Notices
9	Bypassing the Sensor	20	Controller Compatibility
10	System and Controller Wiring	20	Specifications
10	X-Core® with Wired Solar Sync	20	Dimensions
10	X-Core with Wireless Solar Sync	21	FCC Notice
11	Pro-C® or PCC with Wired Solar Sync	21	Industry Canada Notice
11	Pro-C or PCC with Wireless Solar Sync	22	Certificate of Conformity to European Directives
12	ICC2 with Wired Solar Sync	22	Trade Name
12	ICC2 with Wireless Solar Sync	22	CE and Australia Notice
13	I-Core® with Wired Solar Sync	23	Notes
13	I-Core with Wireless Solar Sync		
14	ACC with Wired Solar Sync		
14	ACC with Wireless Solar Sync		
15	ACC2 with Wired Solar Sync		
15	ACC2 with Wireless Solar Sync		

System Overview and Operation

The Solar Sync system is simply and easily installed on any compatible Hunter irrigation controller (see controller Owner's Manual or application guide to verify compatibility). The system consists of a sensor and receiver. The receiver is only necessary when accompanied by a wireless sensor. The sensor must be placed in an area where it can receive full sun and rain exposure. The receiver is installed next to or attached to your Hunter controller. The Solar Sync sensor measures solar radiation and temperature and calculates the daily evapotranspiration (ET) factor for irrigation. This represents the amount of water lost by the plants due to local climatic conditions, which needs to be replaced by irrigation. The Solar Sync sensor also includes a Hunter

Rain-Click rain sensor that will automatically shut down the irrigation system during rain events, thus preventing unwanted irrigation when it is raining.

Enter a midsummer watering program in your controller per the programming instructions in the Owner's Manual provided with your controller. The Solar Sync receives data from the sensor and applies it daily to the controller's water schedule by adjusting the controller's programmed irrigation run times through the seasonal adjustment feature in the controller.

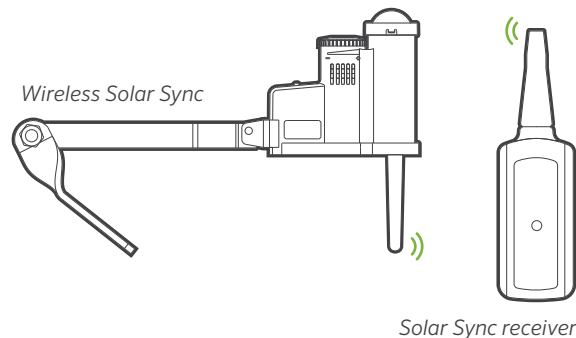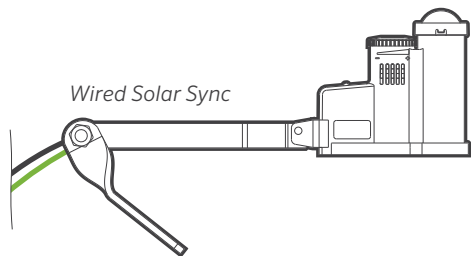

Choosing the Sensor Location


Using the screws provided, mount the Solar Sync sensor on any surface where it will be exposed to unobstructed sun and rainfall, but not in the path of sprinkler spray.

The sensor gutter mount can also be used as an optional mounting method. The gutter mount allows the sensor to be mounted directly to the edge of a gutter.



Note


Place Solar Sync sensor where it can receive full sun.

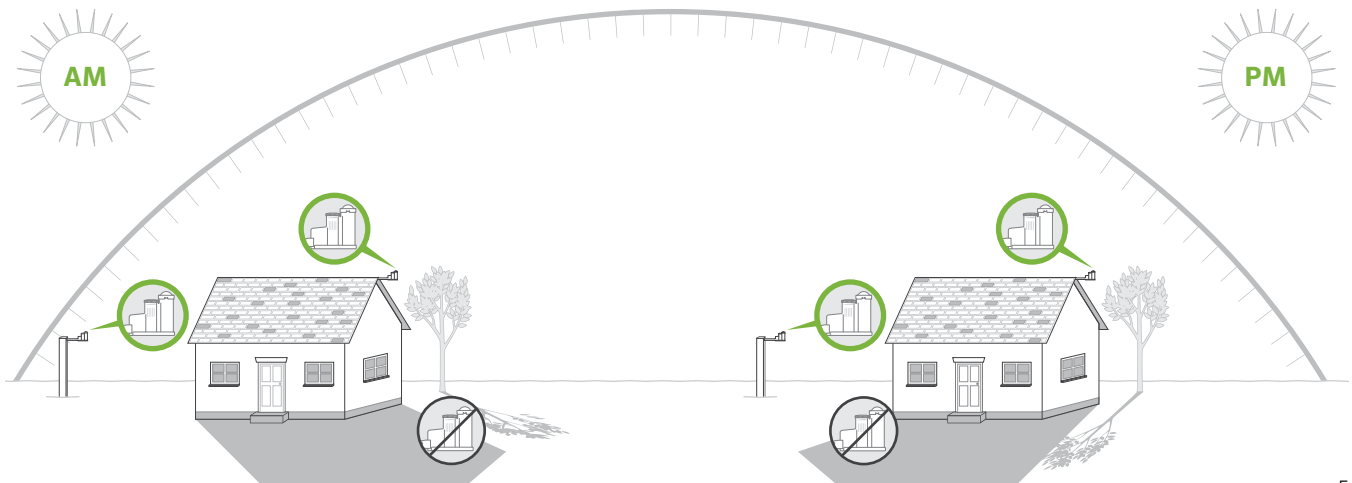

Solar Sync System Components


The Rain-Clik will keep the irrigation from starting or continuing during rainfall. No adjustment or calibration is required for the Rain-Clik sensor. The Rain-Clik uses patented Quick Response® technology that will shut the system off during the first few minutes of rain. The only adjustment that is necessary is the vent ring that will either slow down or speed up the time at which the sensor dries out and the system is turned back on. Opening the vent will speed up the dry out time and closing the vents will slow down the dry out time.

In addition, the Solar Sync's built-in temperature sensor provides system shutdown when freezing conditions occur. At approximately 37°F (3°C) and below the Solar Sync will command the controller to shut down. A "sensor off" indication will be displayed on your controller when the sensor is active. When the temperature rises above 37°F (3°C), automatic irrigation will be reactivated.

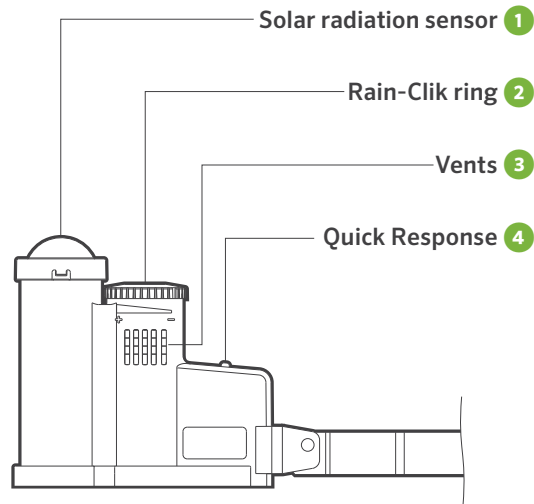


System Components

The Wireless Solar Sync includes a downward-facing antenna that communicates with the receiver.

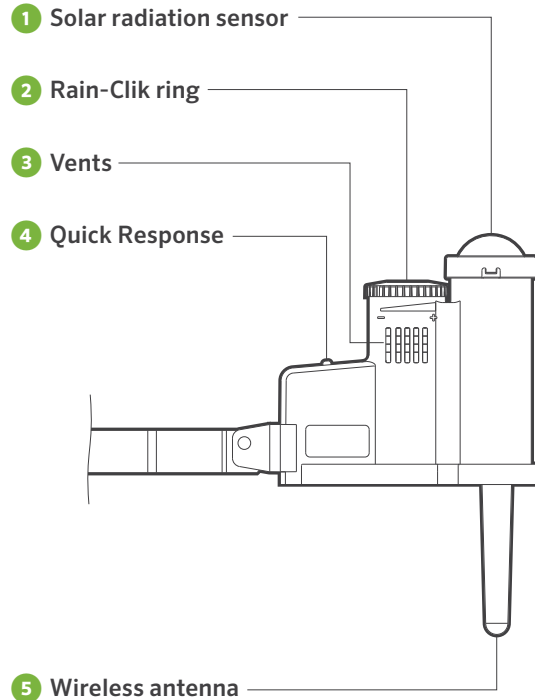

System Components

The Solar Sync receiver is designed to be mounted on the wall next to the controller, or mounted in an available knockout on the side of the controller.

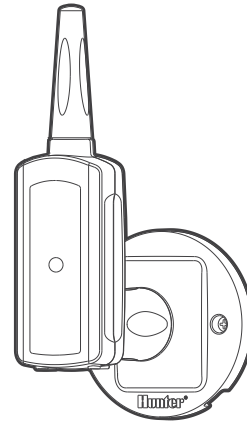


Installing the Sensor

The Solar Sync sensor can be mounted using the wall bracket, or the gutter mount. Mounting the Solar Sync using the wall bracket (A), use the screws provided to attach the sensor.

Mounting the Solar Sync using the gutter mount (B), tighten the locking screw over the edge of a rain gutter.


The sensor needs to be oriented upright (C) and the swivel bracket can be moved for mounting on angled surfaces. Loosen the locknut and screw to install at the desired angle and then retighten.

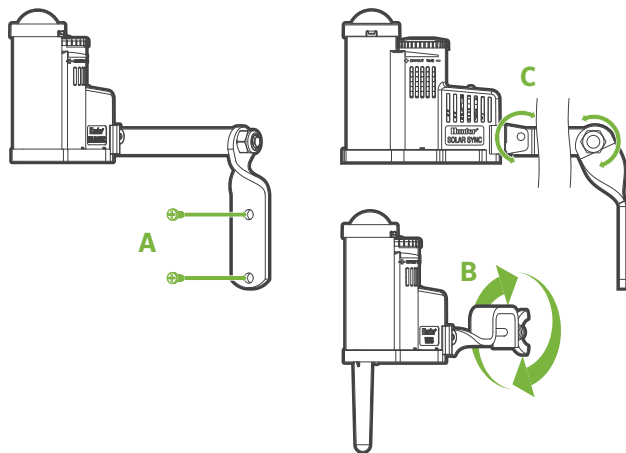

Installing the Receiver


The Solar Sync receiver (A) can be installed either on the wall using the mounting bracket (C) provided, or by using an available knockout in the controller cabinet. Mount the receiver to the wall using the screws provided near your controller.

Mount the receiver on the side of your controller using the extender (B) provided in any available knockout.

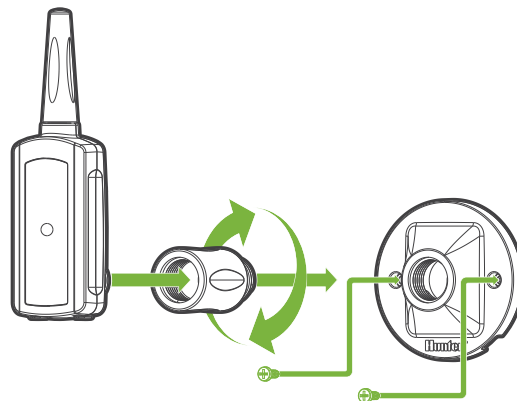


Maintaining the Sensor

The Solar Sync sensor is designed for outdoor use, but must be kept clean to function correctly. Wiping the dome covering the solar radiation sensor every 6 months is recommended. Do not use harsh chemicals or abrasives on the dome.

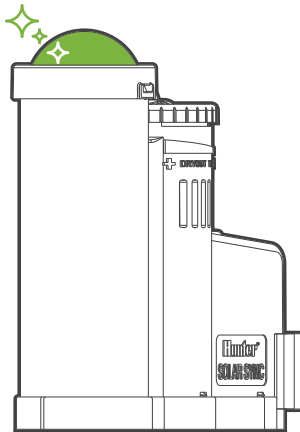

Bypassing the Sensor


If the Rain Sensor or Freeze Sensor is preventing system operation, **SENSOR OFF** will be displayed on the controller's display. To disable the rain and freeze sensor, move the **RAIN SENSOR** switch on the controller to **BYPASS**. This allows you to operate your system during rain and freeze conditions. The Solar Sync will continue to make adjustments to your controller's watering schedule. The controller's Rain Sensor switch should be in the **ACTIVE** position for the Rain Sensor and Freeze Sensor to interrupt watering during rainy and/or freezing conditions.

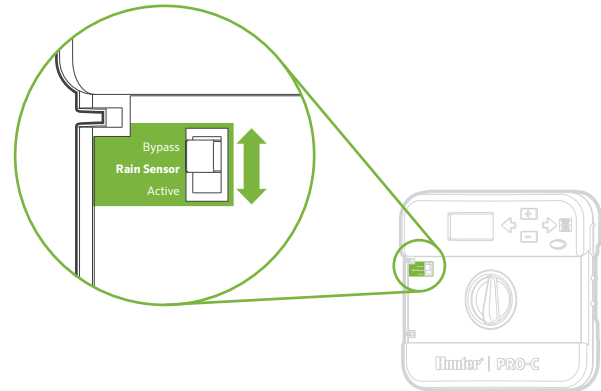

X-Core with Wired Solar Sync

Compatible system: SOLAR-SYNC-SEN


The X-Core controller has Solar Sync control built in, allowing the sensor be wired directly to the sensor terminals inside the controller. Mount the sensor using the included hardware.

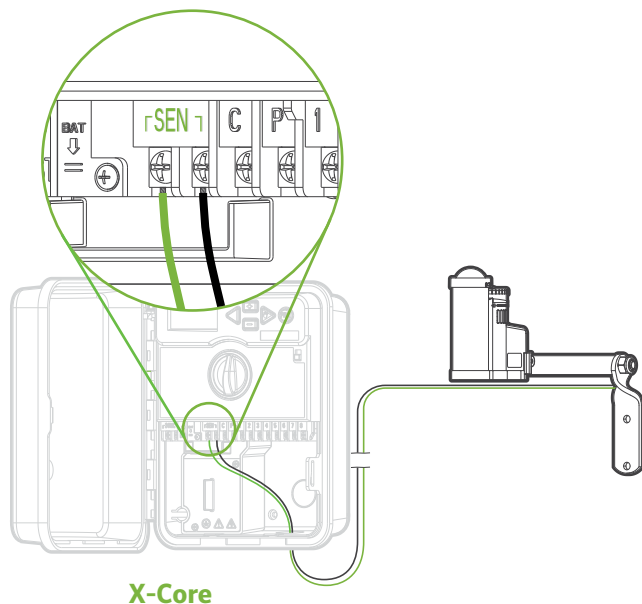

X-Core with Wireless Solar Sync

Compatible system: WSS-SEN


The X-Core controller has Solar Sync control built in, allowing the receiver be wired directly to the sensor terminals inside the controller. Mount the receiver to the wall with the included wall mounting bracket and hardware. Mount the sensor using the hardware provided.

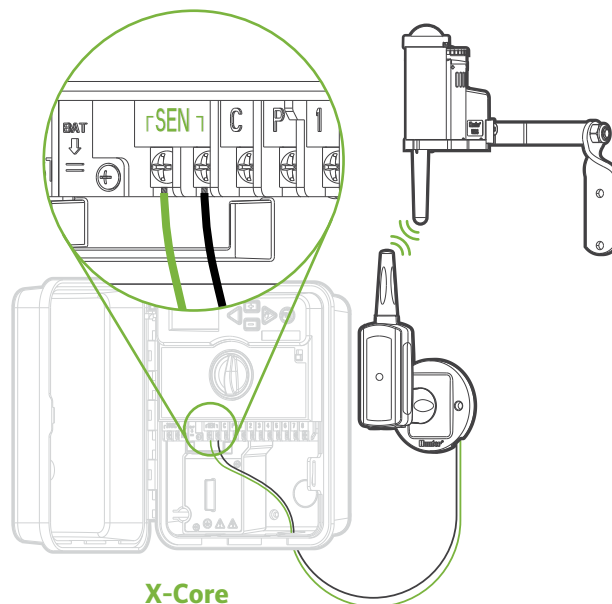

Pro-C or PCC with Wired Solar Sync

Compatible system: SOLAR-SYNC-SEN


The Pro-C or PCC controller has Solar Sync control built in, allowing the sensor to be wired directly to the sensor terminals inside the controller. Mount the sensor using the included hardware.

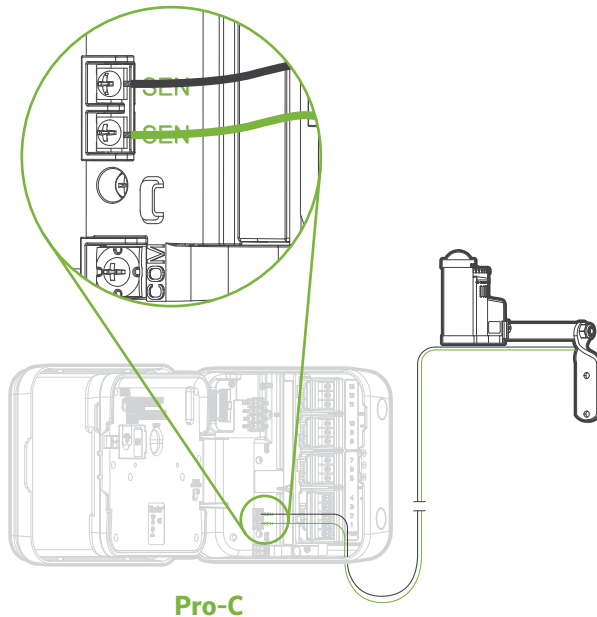

Pro-C or PCC with Wireless Solar Sync

Compatible system: WSS-SEN


The Pro-C or PCC controller has Solar Sync control built in, allowing the receiver to be wired directly to the sensor terminals inside the controller. Mount the receiver in the knockouts provided on the side of the controller or mount the receiver and sensor to the wall with the wall mounting bracket and hardware provided.

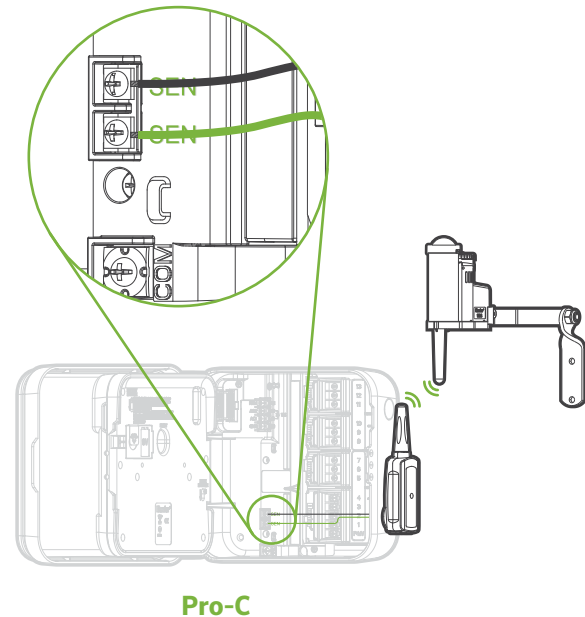

ICC2 with Wired Solar Sync

Compatible system: SOLAR-SYNC-SEN


The ICC2 controller has Solar Sync control built in, allowing the sensor be wired directly to the sensor terminals inside the controller. Mount the sensor using the included hardware.

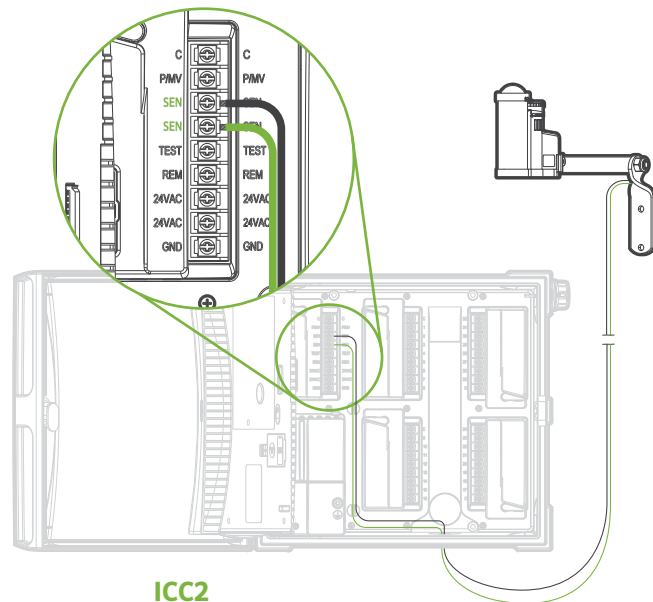

ICC2 with Wireless Solar Sync

Compatible system: WSS-SEN


The ICC2 controller has Solar Sync control built in, allowing the receiver to be wired directly to the sensor terminals inside the controller. Mount the receiver in the knockouts provided on the side of the controller or mount the receiver and sensor to the wall with the wall mounting bracket and hardware provided.

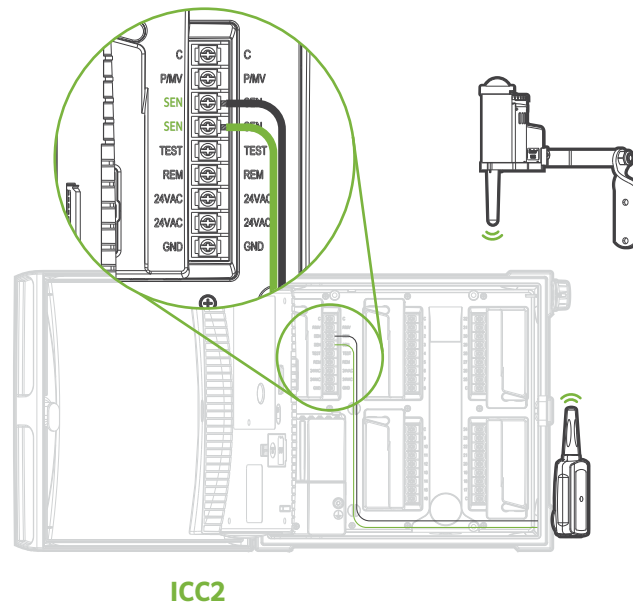

I-Core with Wired Solar Sync

Compatible system: SOLAR-SYNC-SEN

The I-Core controller has Solar Sync control built in, allowing the sensor be wired directly to the sensor terminals inside the controller. Mount the sensor using the included hardware.

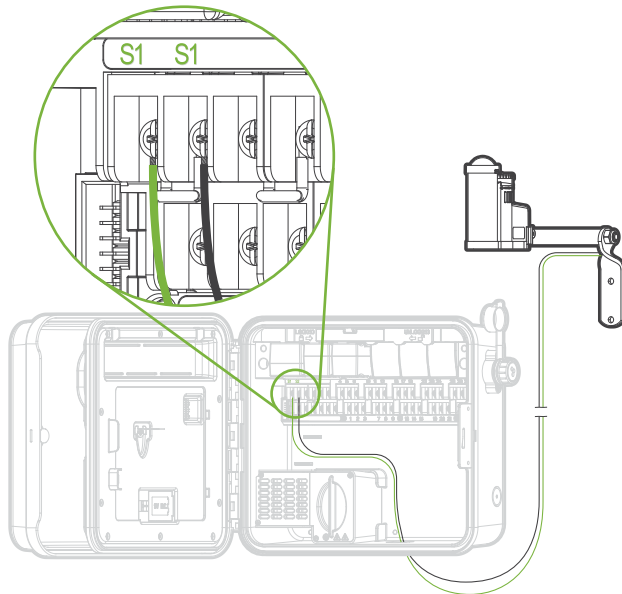


I-Core

I-Core with Wireless Solar Sync

Compatible system: WSS-SEN

The I-Core controller has Solar Sync control built in, allowing the receiver be wired directly to the sensor terminals inside the controller. Mount the receiver in the knockouts provided on the side of the controller or mount the receiver and sensor to the wall with the wall mounting bracket and hardware provided.

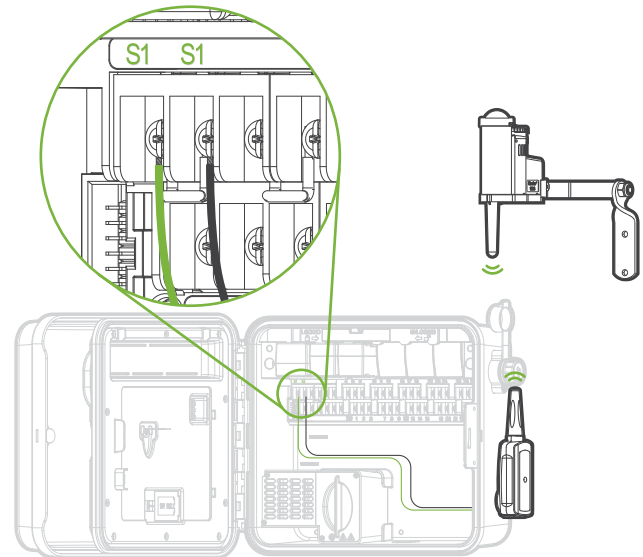


I-Core

ACC with Wired Solar Sync

Compatible system: SOLAR-SYNC-SEN


The ACC controller has Solar Sync control built in, allowing the sensor be wired directly to the sensor terminals inside the controller. Mount the sensor using the included hardware.

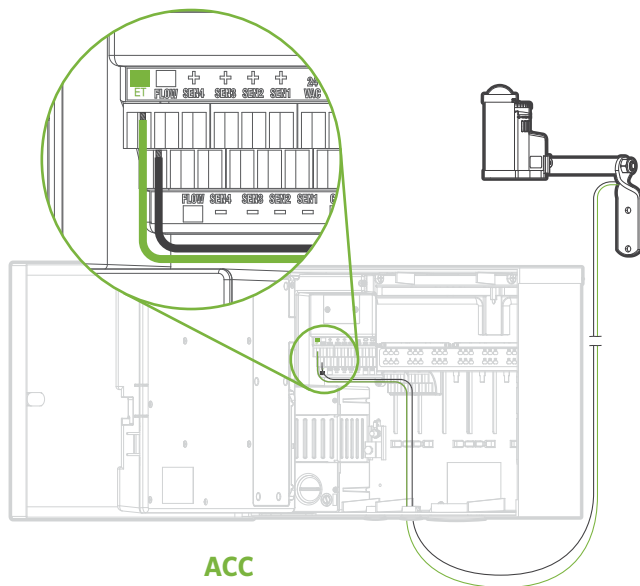

ACC with Wireless Solar Sync

Compatible system: WSS-SEN


The ACC controller has Solar Sync control built in, allowing the receiver be wired directly to the sensor terminals inside the controller. Mount the receiver in the knockouts provided on the side of the controller or mount the receiver and sensor to the wall with the wall mounting bracket and hardware provided.

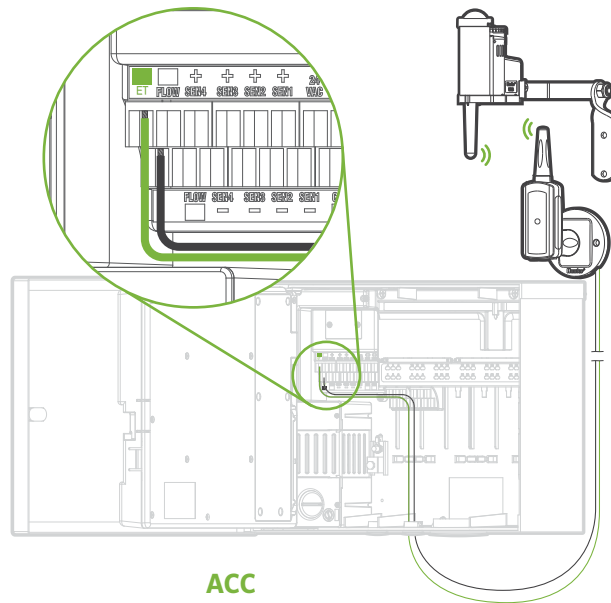

ACC2 with Wired Solar Sync

Compatible system: SOLAR-SYNC-SEN


The ACC2 controller has Solar Sync control built in, allowing the sensor be wired directly to the sensor terminals inside the controller. Mount the sensor using the included hardware.

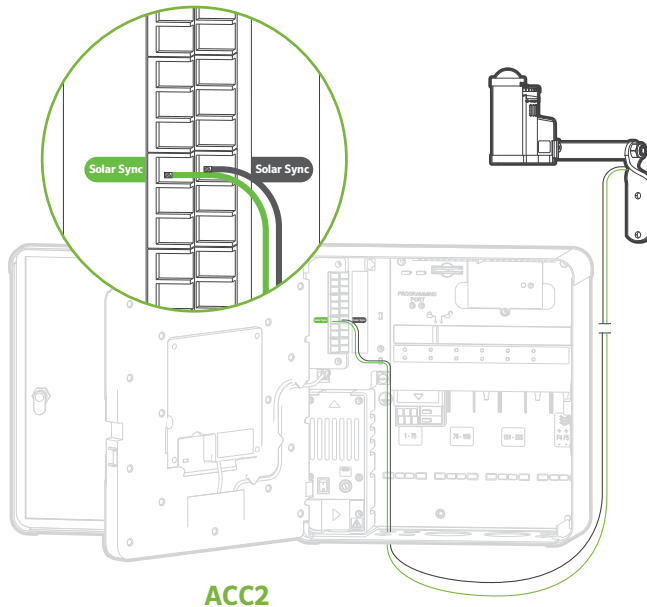

ACC2 with Wireless Solar Sync

Compatible system: WSS-SEN

The ACC2 controller has Solar Sync control built in, allowing the receiver be wired directly to the sensor terminals inside the controller. Mount the receiver in the knockouts provided on the side of the controller or mount the receiver and sensor to the wall with the wall mounting bracket and hardware provided.

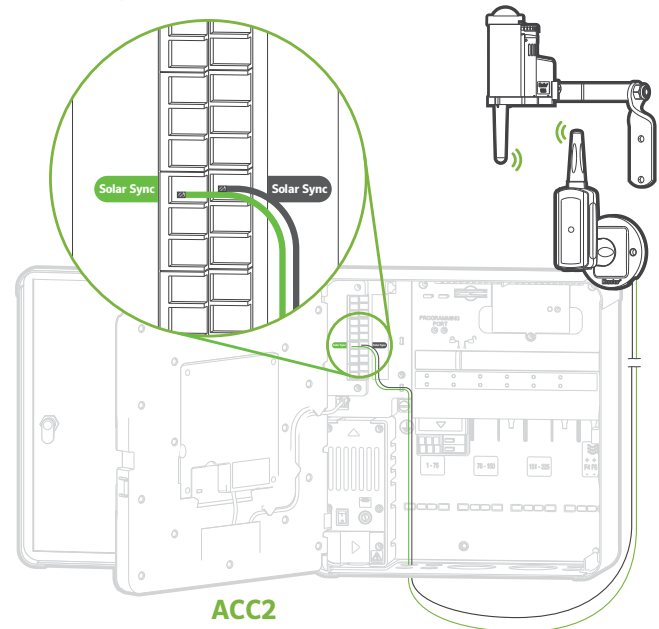

Programming the Controller

Program your Hunter controller as specified in the Owner's Manual. When setting station run times, enter the time that would normally be programmed during the peak summer watering season. The Solar Sync is designed to adjust all run times daily based upon on-site weather conditions. This is done through the seasonal adjustment feature on your controller. We recommend that all programming be conducted with the controller seasonal adjustment set at 100%.



Note

Set station run times for peak summer watering with seasonal adjustment set at 100%.

Making Adjustments

After programming the controller to use Solar Sync, it is recommended that you leave it alone for a few days to gather sun and temperature data. If necessary, there are two ways to make adjustments:

- If you find an individual zone is wetter or drier than the rest of the site, simply increase or decrease the amount of run time entered in the controller for that station.
- When making adjustments to program run times, make sure to reset the seasonal adjust valve to 100%. Solar Sync will make the appropriate adjustment automatically based on measured weather conditions.
- If your landscape is wetter or drier than it should be, use the controller to increase or decrease run times.

Making Adjustments

After Solar Sync has been installed and programmed, we recommend allowing the system to run for a few days at the initial setting. Because of the variety in site conditions (including sensor location, amount of direct sunlight available to the sensor, reflective heat from surrounding structures, etc.), **the initial setting may require adjustment in order to achieve the desired performance.**

The calibration of the Solar Sync to a particular site can easily be accomplished by adjusting the Region and/or Water Adjustment settings. The instructions below outline this process:

1. Allow system to operate at initial settings for a minimum of 3 days.
2. Observe the Seasonal Adjust on the controller. If the Seasonal Adjust amount appears to be lower or higher than expected for that time of year, the Solar Sync settings need to be adjusted.
 - A. Seasonal Adjust too low – Make sure the controller dial is in the **RUN** position. Increase the value on the Water Adjustment scale (10 is max). Once the setting is changed, the controller will immediately be updated with the new Seasonal Adjust %. Increase the Water Adjustment setting until the desired Seasonal Adjust % is shown. If you max out the Water Adjustment scale at 10 and still require more Seasonal Adjust, move down to the next lower Region (from Region 4 to 3, for example).
 - B. Seasonal Adjust too high – Make sure the controller dial is in the **RUN** position. Decrease the value on the Water Adjustment scale (default setting is 5). Once the setting is changed, the controller will immediately be updated with the new Seasonal Adjust %. Decrease the Water Adjustment setting until the desired Seasonal Adjust % is shown. If you minimize the Water Adjustment scale down to 1 and still require a reduction in Seasonal Adjust, move up the next Region (from Region 2 to 3, for example).

Calibration and Setup Period

The table below will assist you in identifying the type of region you live in. There are four basic ET regions, each with descriptions of the region, along with typical ET and temperature characteristics. It is recommended that, if possible, the region be chosen based upon average July ET or peak summer ET.

A	B	C	D
Based upon the ET of your region using the average July ET or peak summer ET. This is the preferred option when selecting your region.	Based upon the temperature for your region using the average July or the driest month high temperature (not the highest temperature for July).	Based upon the general description of your region.	Region based on A through C
If the average July* ET is 0.17" (4.3 mm) or less per day	If the average temperature for July* is 65°–75°F (18°–24°C)	• U.S. Northern States • Coastal Regions	Region 1
If the average July* ET is 0.18"–0.23" (4.6–5.8 mm) per day	If the average temperature for July* is 75°–85°F (24°–29°C)	• Mountains • U.S. Northern Inland States	Region 2
If the average July* ET is 0.24"–0.29" (6.1–7.4 mm) per day	If the average temperature for July* is 85°–95°F (29°–35°C)	• U.S. Southern States • Inland and High Desert	Region 3
If the average July* ET is 0.30" (6.7 mm) or more per day	If the average temperature for July* is 95°–105°F (35°–41°C)	• Deserts	Region 4

* For Southern hemisphere locations, use the month of January.

Station Run Times

It is important to understand that Solar Sync provides a global seasonal adjustment to the controller. This means that all station run times will be modified by the seasonal adjust percentage shown. When programming the controller, the run times should be entered that represent peak season watering schedules. If the Solar Sync is adjusting to the appropriate seasonal adjust value but the run time for a particular station appears to be too long or short, adjust the station run time in the controller program.

Seasonal Adjustment



Controller Run Time in Peak Summer



July for Northern Hemisphere



January for Southern Hemisphere

Controller Compatibility

The Solar Sync is designed for use with Hunter X-Core, Pro-C, PCC, ICC2, I-Core, and ACC2 controllers.

Specifications

- Power Input: 24 VAC 50/60 Hz (from controller)
- Current draw: 25 mA @ 24 VAC
- Non-volatile memory
- Replaceable 10-year lithium battery: CR2032 (for backup timekeeping only)
- Max distance (wired) sensor to controller: 200' (60 m)
- Max distance (wireless) sensor to controller: 800' (240 m)
- Wiring: 18 AWG (1 mm) or 20 AWG (0.8 mm) diameter minimum from the sensor to the controller
- UL Listed
- Direct burial and UV approved

Dimensions

Wired Solar Sync Sensor:

- 3" H x 8¼" W x 1" D (7.6 cm H x 21 cm W x 2.5 cm D)

Wireless Solar Sync Sensor:

- 4⅝" H x 8¼" W x 1" D (11.7 cm H x 21 cm W x 2.5 cm D)

Solar Sync Receiver:

- 5⅜" H x 1½" W x 1" D (13.5 cm H x 3.8 cm W x 2.5 cm D)

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Industry Canada Notice

Sensor - IC: 2772A-SSW

Receiver - IC: 2772A-SSWR

Operation is subject to the following conditions:

- This device may not cause harmful interference and
- This device must accept any interference received, including interference that may cause undesired operation

This class B digital apparatus complies with Canadian ICES-003.

The term IC before the certification/registration number only signifies that the Industry Canada technical specifications were met.

Operation is subject to the following conditions: 1) this device may not cause interference, and 2) this device must accept any interference, including interference that may cause undesired operation in the device.

CE and Australia Notice

Hunter Industries hereby declares that this remote control device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/CE.

Declaration of Conformity: We, Hunter Industries Incorporated, 1940 Diamond Street, San Marcos, CA 92078, declare under our own responsibility that the Wireless Solar Sync, model numbers WSSTR and WSSR, to which this declaration refers, conforms with the relevant standards:

Emissions:

- ETSI EN 300 220-1 V3.1.1
- ETSI EN 300-220-2 V3.1.1
- ETSI EN 301 489-1 V2.2.0
- EN 61000-3-2
- EN 61000-3-3


Immunity:

- ETSI EN 301 489-1 V1.4.1
(per IEC61000-4-2 through IEC61000-4-6,
and IEC61000-4-11)

Certificate of Conformity to European Directives

Hunter Industries declares that the irrigation sensor Solar Sync complies with the standards of the European Directives of “electromagnetic compatibility” 87/336/EEC and “low voltage” 73/23/EEC.

Trade Name	Wireless Solar Sync
Model Number	WSSR
Compliance Test Report Number	11707610-E1V1
Compliance Test Report Date	5/24/2017
Responsible Party	Hunter Industries Incorporated
Address	1940 Diamond St, San Marcos, CA 92078
Telephone	760-744-5240



Andrew Bera, Senior Regulatory Compliance Engineer

Place	San Marcos, CA
Date	October 3, 2017

Helping our customers succeed is what drives us. While our passion for innovation and engineering is built into everything we do, it is our commitment to exceptional support that we hope will keep you in the Hunter family of customers for years to come.

A handwritten signature in dark ink, appearing to read 'G. R. Hunter', with a long horizontal flourish extending to the right.

Gregory R. Hunter, President of Hunter Industries

HUNTER INDUSTRIES INCORPORATED | *Built on Innovation®*
1940 Diamond Street, San Marcos, California 92078, USA
www.hunterindustries.com