


# Above Ground Step Attachment Kit

**Directly attach an above ground step to the Optimum pool wall for a safe and stable installation.**

**Kit #77589 includes two aluminum AG Step Anchor Clips and the necessary hardware to attach most above ground steps to the above ground 2" coping. (Above ground steps are available directly through dealers.)**

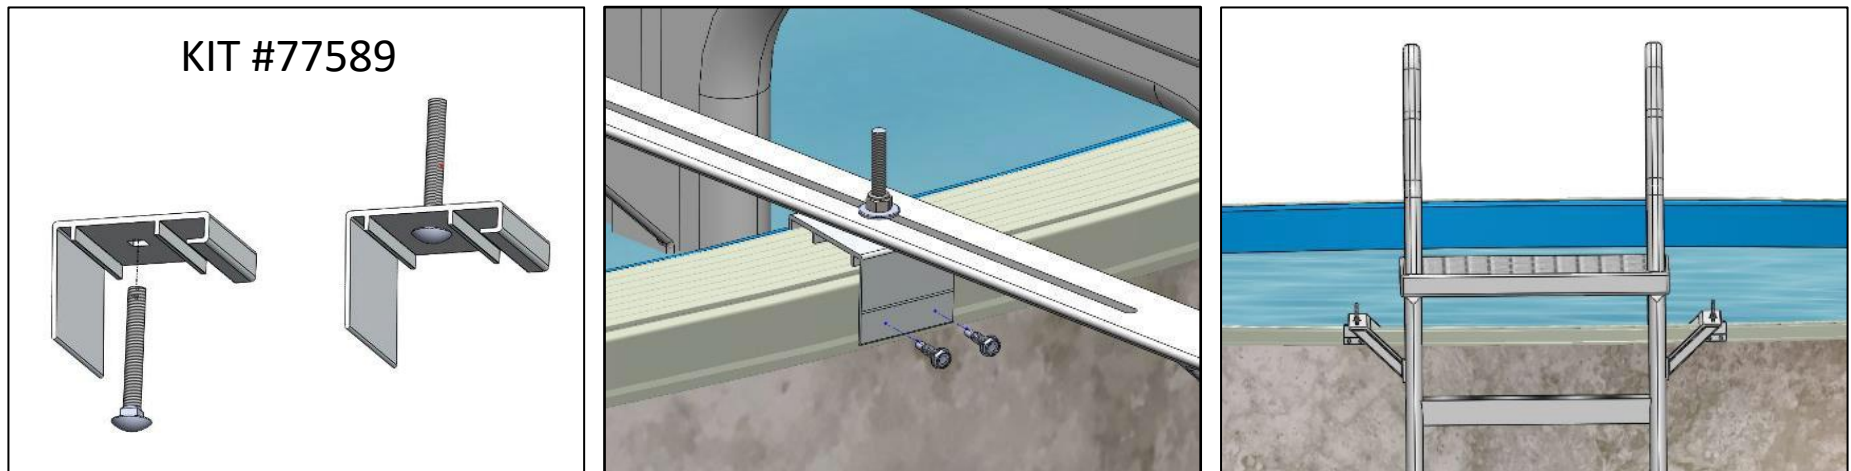

## INSTRUCTIONS:

- Insert the included 1/4" x 2" Carriage bolts into the square punch-outs of both AG Step Anchor Clips as shown.
- Position both clip assemblies onto the above ground 2" coping at roughly the step mounting bracket width.
- Position step into the pool while locating both mounting brackets through the 1/4" x 2" carriage bolts.
- Wait for the step to lose all buoyancy.
- Secure step mounting brackets to both anchor clips with the supplied 1/4" flat washer and 1/4" lock nut.
- Make sure the anchor clips are fully seated onto the 2" standard above ground coping then secure to the pool wall with two #10 x 3/4" self-drilling screws per clip under the reference line.